

# Beldray<sup>®</sup>

est 1872

Our  
lightweight,  
powerful &  
convenient  
steam  
cleaner



**DETERGENT**  
STEAM CLEANER  
INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not immerse the appliance in water or any other liquid.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens. Switch off the appliance and disconnect it from the mains power supply and allow it to cool before changing or fitting accessories and before any cleaning and maintenance.

Use of an extension cord with the appliance is not recommended. This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



**Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

**Warning:** Danger of scalding.

## Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.



**Steam**



**Caution:** Hot surface

## Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the rectangular mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.


The microfibre mop head pad is machine washable on a low heat setting.

## Descaling the Water Tank and Removing Limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam mop.

Limescale can develop over time and can affect the performance of the steam mop. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a steam mop. Always follow the manufacturer's instructions.

## Description of Parts

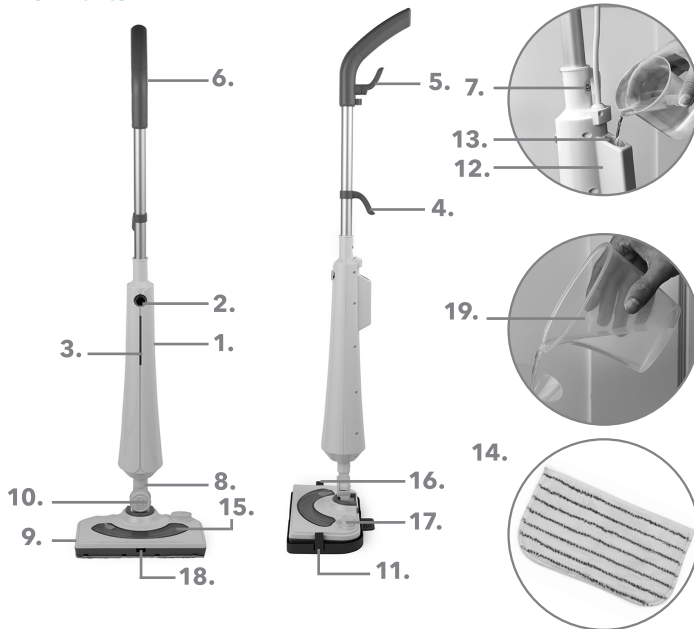

- |                             |                                    |
|-----------------------------|------------------------------------|
| 1. Steam Cleaner main body  | 11. Carpet glider                  |
| 2. On/off switch            | 12. 350 ml water tank              |
| 3. Water tank gauge         | 13. Water tank cap                 |
| 4. Lower cord storage clip  | 14. Mop head pad                   |
| 5. Upper cord storage clip  | 15. 200 ml Detergent tank          |
| 6. Handle                   | 16. Detergent tank cap             |
| 7. Handle release button    | 17. Detergent spray release button |
| 8. Steam nozzle             | 18. Detergent release hole         |
| 9. Detergent mop head       | 19. Measuring jug                  |
| 10. Mop head release button |                                    |

## Instructions for Use

### Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

## Assembling the Steam Cleaner

### Attaching the Handle

Insert the assembled handle into the steam cleaner main body, until it clicks into place. The assembled handle can be removed from the steam cleaner main body by pressing the handle release button and pulling it away in an upwards direction.

### Attaching the Mop Head

**STEP 1:** Slide the bottom end of the steam cleaner main body onto the mop head, until the mop head spindle clicks into place.

**STEP 2:** To remove the rectangular mop head, press the mop head release button and pull the steam cleaner main body away in an upwards direction.

### Attaching the Microfibre Mop Head Pad

**STEP 1:** Remove the mop head from the steam cleaner main body, following the instructions in the section entitled 'Attaching the Detergent Mop Head'.

**STEP 2:** Attach the microfibre mop head pad to the rectangular mop head by aligning the hook and loop Velcro tabs.

**STEP 3:** Place the rectangular mop head into the carpet glider and press down firmly to lock it into position.

**STEP 4:** Reattach the detergent mop head to the steam cleaner main body.

**Note:** The microfibre mop head pad must be installed correctly before use. The carpet glider should only be used on carpets.

### Filling the Water Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water or detergent tank.

**STEP 1:** Position the steam cleaner main body horizontally on a flat, stable surface.

**STEP 2:** Carefully remove the water tank cap.

**STEP 3:** Fill the measuring jug with water and pour the contents into the water tank, using the funnel. Repeat to reach the 350ml max. fill mark and reinsert the water tank cap.

**Note:** The water may take a couple of seconds to rise; allow time for this before adding more to the water tank, making sure that it is not overfilled.

**Caution:** Do not attempt to fill the water or detergent tanks whilst the steam cleaner is turned on.

Never add descaling, aromatic, alcoholic or detergent products into the water tank, as this may damage the appliance or make it unsafe for use.

### Filling the Detergent Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water or detergent tank.

**STEP 1:** Position the detergent mop head horizontally on a flat, stable surface.

**STEP 2:** Carefully remove the detergent tank cap.

**STEP 3:** Fill the measuring jug with detergent and pour the contents into the detergent tank, using the funnel. When max fill is reached, reinsert the detergent tank cap. Always ensure the detergent tank is filled following the manufacturers guidelines.

**Note:** The Detergent may take a couple of seconds to rise; allow time for this before adding more detergent to the tank, making sure that it is not overfilled.

### Using the Detergent Steam Cleaner

**STEP 1:** Assemble the detergent steam cleaner following the instructions in the section entitled 'Assembling the Detergent Steam Cleaner', and attach the mop head pad following the instructions in the section entitled 'Attaching the Microfibre Shaped Mop Head Pad'.

**STEP 2:** Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

**STEP 3:** Plug in and switch on the steam cleaner at the mains power supply.

**STEP 4:** Switch the on/off switch to the 'On' position.

**STEP 5:** The water tank will illuminate red to indicate that the steam cleaner is heating up; this will take approx. 25 seconds. Once the steam cleaner has reached the correct temperature, the water tank will illuminate blue, indicating that the steam cleaner is now ready to use.

**STEP 6:** Steam will now run continuously until the water tank is empty, or until the on/off switch is pressed to the 'Off' position.

**STEP 7:** To use the detergent function fill the detergent tank following the instructions in the 'filling detergent tank' section. To release detergent spray during steam cleaning, gently push the detergent spray release button.

**Note:** A full water tank will supply approx. 15 minutes of continuous steam. Steam will run continuously until the water tank is empty.



**Caution:** Do not overspray surfaces with detergent as this will leave them wet after cleaning. The steam cleaner emits jets of very powerful, hot steam. The surface of the mop head will get very hot. Do not touch it.

## Storing the Power Cord

The steam cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the upper and lower cord hooks; the upper cord hook must be in the upright position. To unwrap the power cord and release it from the stored position, pull and twist the upper cord hook 180 ° in a clockwise direction.

Problem	Possible Reason	Possible Solution
The steam cleaner is not producing steam.	The water tank may be empty.	Add water to refill the water tank.
	The steam nozzle may be blocked.	Unplug the steam cleaner from the mains power supply and clean the steam nozzle.
	There is no power to the steam cleaner.	Make sure that the steam cleaner is plugged into the mains power supply.
	There may be a limescale build-up.	Descale the steam cleaner using the instructions in the 'Removing Limescale' section.
	The power button is set to the 'Off' position.	Press the power button to the 'On' position.
The steam cleaner does not turn on.	There is a blown fuse.	Check the fuse by replacement.
	The power cord is not plugged in.	Plug the power cord into a working mains power supply.



## Storage

Remove the microfibre mop head pad, making sure that it has been cleaned following the instructions in the section entitled 'Care and Maintenance'.

Check that the steam cleaner is cool and dry and that the water and detergent tanks are empty before storing in a cool, dry place.

## Specifications

Product code: BEL01097

Input: 220-240 V ~ 50-60 Hz

Output: 1300 W

Water tank capacity: 350 ml

Detergent tank capacity: 200 ml

Waterproof level: IPX4

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

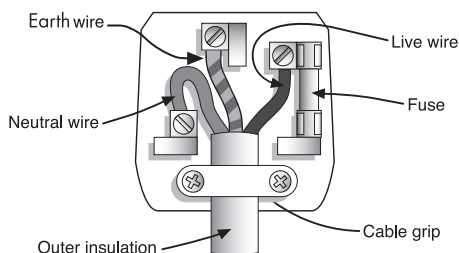

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





\*To be eligible for the extended guarantee, go to **www.beldray.com** and register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
[www.beldray.com](http://www.beldray.com)

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD000000/MD000000/V1