

# Beldray<sup>est 1872</sup>®

Our cordless,  
powerful &  
effective  
spin cleaner



**SPINMAX**  
**CORDLESS**  
INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

**Caution:** The extension tube contains electrical connections. Do not use to suck up water. Do not immerse in water for cleaning. The extension tube should be checked regularly and must not be used if damaged.

## Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 11.1 V 2200 mAh Li-ion rechargeable battery.

## Care and Maintenance

Before attempting any cleaning or maintenance, always switch off and unplug the SpinMax Cordless from the mains power supply. Drain any remaining water or cleaning solution from the detergent bottle.

Wipe the external surface of the SpinMax Cordless with a soft, damp cloth and allow to dry thoroughly.


Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the SpinMax Cordless.

Do not immerse the SpinMax Cordless main body in water or any other liquid.

To clean the mop head pads, follow the washing instructions on the care label.

**Warning:** Only use floor cleaning detergents with the SpinMax Cordless. Seek manufacturer's guidance before using detergent on any floor surfaces.

## Description of Parts

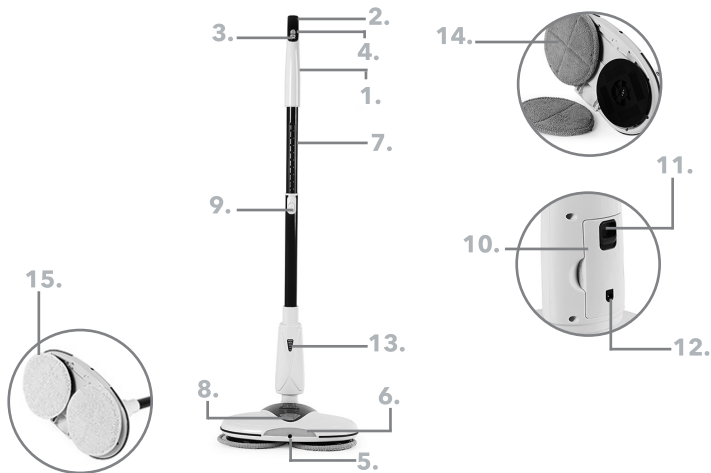

- |                               |  |
|-------------------------------|--|
| 1. SpinMax Cordless main body | 9. Extension tube locking and release button |
| 2. Handle                     | 10. Removable battery pack                   |
| 3. Power button               | 11. Battery Release catch                    |
| 4. Spray button               | 12. Charging port                            |
| 5. Spray nozzle               | 13. LED indicator light                      |
| 6. LED lights                 | 14. Wood/hard floor cleaning pad             |
| 7. Telescopic extension tube  | 15. Wood/hard floor polishing pad            |
| 8. Detergent tank             |  |

## Charging the SpinMax Cordless

Before first use, the SpinMax Cordless must be charged for approx. 4 hours. Subsequent charging times will vary dependent upon use. If the SpinMax Cordless battery becomes drained completely during use, it may take up to 4 hours 30 minutes to fully recharge. The battery pack should be fitted onto the SpinMax Cordless main unit during charging; do not charge the battery pack separately.

**STEP 1:** Before connecting to the mains power supply, attach the battery pack by aligning it with the main unit and sliding into place until it clicks.

**STEP 2:** Connect the mains power adaptor to the charging port on the battery pack.

**STEP 3:** Plug the mains power adaptor into the mains power supply; the LED indicator lights will flash during charging and then remain illuminated once the battery is fully charged.

**STEP 4:** Unplug the mains power adaptor from the mains power supply once the battery is fully charged. Disconnect the mains power adaptor from the charging port on the battery pack.

**Note:** Whilst charging, the battery pack may become warm.

**Warning:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

## Instructions for Use

### Assembling the SpinMax Cordless

**STEP 1:** Standing the SpinMax Cordless main body upright, push the extension tube into the main body until the extension tube-locking button clicks into place.

**STEP 2:** Push the handle onto the extension tube until the handle locking button clicks into place.

**Warning:** Use caution when assembling the SpinMax Cordless to ensure the extension tube and handle are inserted the correct way.

### Filling the Detergent Tank

**STEP 1:** Fill a measuring jug with a solution of tap water and wood or hard floor cleaning detergent. Dilute following the manufacturer's instructions.

**STEP 2:** Add 200 ml of diluted detergent to the SpinMax Cordless detergent tank.

**Note:** Only use tap water to dilute the detergent.

Do not attempt to fill the detergent tank whilst the SpinMax Cordless is in use.

**Caution:** Never add polishing solution directly into the detergent tank as this will damage the SpinMax Cordless. Apply directly onto the floor.

## Installing the Cleaning/Polishing Head Pads

**STEP 1:** Select either the two cleaning pads or the two polishing pads. Lay pads on the floor, position the SpinMax Cordless main body directly over them and press down firmly. The design of the SpinMax Cordless will hold the pads securely in place.

**STEP 2:** To remove the pads lay the SpinMax Cordless onto a flat stable surface. Gently peel the pads away from the main unit and set aside.

**Note:** The pads must be installed correctly before use.

**Caution:** Do not use the SpinMax Cordless without installing the correct mop head pad first.

Do not use the SpinMax Cordless without any mop head pad in place.

## Using the SpinMax Cordless

### Using the SpinMax Cordless on Hard Floors

Do not use the SpinMax Cordless on highly worn or unsealed tiles, or waxed or oiled wood flooring. It is always recommended to test a discreet area of the floor to be cleaned or polished before proceeding to make sure that the SpinMax Cordless will not cause damage. Always check the care and use instructions of the floor with the manufacturer.

### Cleaning Hard Floors

**STEP 1:** Vacuum or sweep the floor to be cleaned; this will remove any loose dirt or dust that may have accumulated and will make the cleaning process more effective.

**STEP 2:** Fill the detergent tank following the instructions in 'Filling the Detergent Tank'.

**STEP 3:** Attach the wood/hard floor cleaning pads, following the instructions in the section entitled 'Installing the cleaning head pads'.

**STEP 4:** Turn on the SpinMax Cordless by pushing the power button.

**STEP 5:** Lightly step on the front of the SpinMax Cordless head to disengage the head lock, pull the handle backwards and angle the SpinMax Cordless as desired.

**STEP 6:** Apply a small amount of the detergent solution to the floor to be cleaned by pressing the spray button.

**STEP 7:** Move the SpinMax Cordless backwards and forwards to clean the area. Repeat the action until the entire floor has been cleaned.

**STEP 8:** Once finished, turn off the SpinMax Cordless by pushing the power button. Remove the wood/hard floor cleaning pads following the instructions in the section entitled 'Installing the Cleaning/Polishing Head Pads'.

**Caution:** Do not press the spray button if the detergent tank is empty.

**Warning:** Never leave the SpinMax Cordless with a wet or damp mop head pad on the floor, as this could cause damage.

## Polishing Hard Floors

**STEP 1:** Vacuum or sweep the floor to be polished; this will remove any loose dirt or dust that may have accumulated and will make the cleaning process more effective. It is recommended that floors are cleaned using the SpinMax Cordless prior to polishing them and are allowed time to dry sufficiently, as this will give the best results.

**STEP 2:** Attach the wood/hard floor polishing pads, following the instructions in the section entitled 'Installing the Cleaning/Polishing Head Pads'.

**STEP 3:** Lightly step on the front of the SpinMax Cordless head to disengage the head lock, pull the handle backwards and angle the SpinMax Cordless as desired.

**STEP 4:** Carefully apply a generous amount of polish solution directly onto the floor surface until it is evenly covered.

**STEP 5:** Turn on the SpinMax Cordless by pushing the power button.

**STEP 6:** Move the SpinMax Cordless backwards and forwards to polish the desired area, taking care not to over polish.

**STEP 7:** Do not walk over the polished floor until it is completely dry.

**STEP 8:** Once finished, turn off the SpinMax Cordless by pushing the power button and carefully lift it away from the area that has been polished.

**Caution:** Do not overspray surfaces with detergent as this will leave them wet after cleaning.

## Cleaning Solutions

The SpinMax Cordless should only be used alongside liquid cleaning solutions. Use specifically formulated cleaning solutions only.

## Storage

Remove the mop head pads and wash for next use.

Check that the SpinMax Cordless is clean and dry and that the water tank is empty before storing in a cool, dry place.



## Troubleshooting

Symptom	Possible Cause	Solution
The SpinMax Cordless will not turn on.	Battery may not be charged.	Charge the battery.
The SpinMax Cordless will not spray.	There may not be enough cleaning solution in the detergent tank.	Add more cleaning solution following the instructions in the section entitled 'Filling the Detergent Tank'.
The SpinMax Cordless will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the battery, following the instructions in the section entitled 'Charging the SpinMax Cordless'.
The battery is not fitted correctly.		Fit the battery pack by aligning it with the main unit and sliding into place until it clicks.

## Specifications

Product code: BEL01047

Battery: 11.1 V 2200 mAh Li-ion

Adaptor input: 110-240V ~ 50/60Hz

Adaptor output: 14.0 V  $\approx$  0.5 A, 7.0 W

Average active efficiency: 82.88 %

Efficiency at low load: 81.78 %

No-load power consumption: 0.071 W

## **UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





\*To be eligible for the extended guarantee, go to [www.beldray.com](http://www.beldray.com) and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK

[www.beldray.com](http://www.beldray.com)

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD080720/MD120820/V1



**ULTIMATE PRODUCTS**  
**HOME OF BRANDS**


Manchester  
OL9 0DD  
United Kingdom  
[www.upgs.com](http://www.upgs.com)

t: +44 (0) 161 627 1400  
f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Aminah Mahmood
Date:	09/09/2020
Project Name:	EEF200704 UPG BEL01047
Type of Artwork:	Instruction Manual
Size:	A5 11 PP
Software Used:	Indesign CC
Typefaces:	Avenir Next, ITC Lubalin Graph

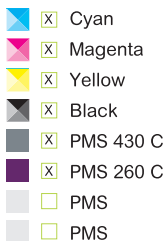

**Artwork Version 1**

**Artwork Scale 1:1**

©2019 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY