

Beldray[®] est 1872

Our **powerful,**
practical & versatile
steam cleaner



14 IN 1 **STEAM CLEANER** INSTRUCTION MANUAL

www.beldray.com

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear.



The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.



Steam



Caution: Hot surface

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the triangular mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.


Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pads are machine washable on a low heat setting.

Descaling the Water Tank and Removing Limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam mop. Limescale can develop over time and can affect the performance of the steam mop. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a steam mop. Always follow the manufacturer's instructions.

Description of Parts

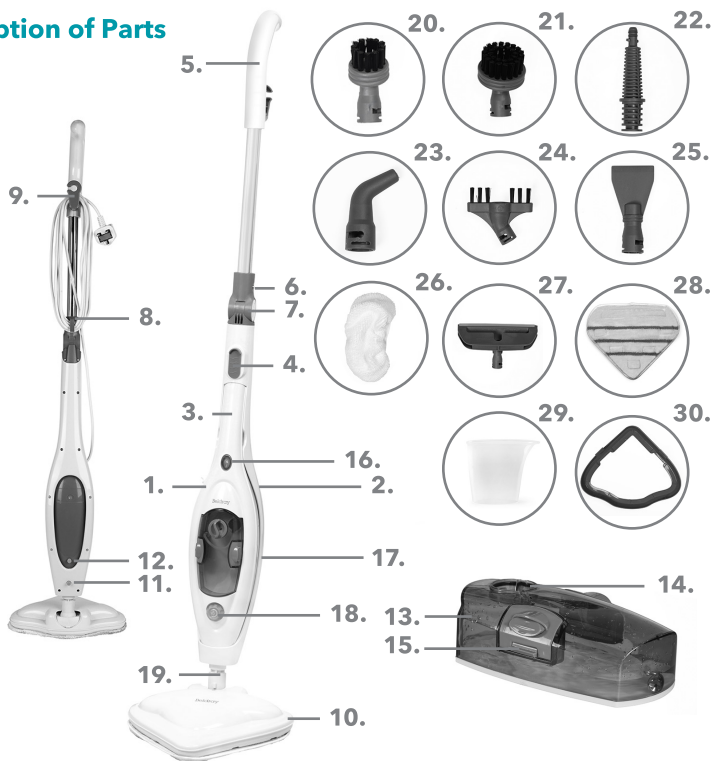

- | | |
|------------------------------------|--|
| 1. 14 in 1 Steam Cleaner main body | 16. On/Off switch |
| 2. Steam cleaner housing | 17. Temperature indicator light(s) |
| 3. Steam cleaner handle | 18. Adjustable steam control dial |
| 4. Main body release latch | 19. Steam nozzle |
| 5. Handle attachment | 20. Small round brush |
| 6. Handle release button | 21. Large round brush |
| 7. Flexi-hinge release button | 22. Straight nozzle |
| 8. Lower cord storage clip | 23. Angled nozzle |
| 9. Upper cord storage clip | 24. Grouting tool |
| 10. Triangular mop head | 25. Scraping tool |
| 11. Mop head release button | 26. Garment and upholstery steamer cloth |
| 12. Attachment release button | 27. Window/mirror cleaner |
| 13. Water tank | 28. Microfibre mop head pad(s) |
| 14. Water tank cap | 29. Measuring jug |
| 15. Water tank release button(s) | 30. Carpet glider |

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

Assembling the 14 in 1 Steam Cleaner

Attaching the Handle Attachment

Insert the handle attachment into the steam cleaner housing, until it clicks into place. The handle can be removed from the steam cleaner housing by pressing the handle release button.

Attaching the Steam Cleaner Main Body to the Steam Cleaner Housing

STEP 1: Align the steam nozzle with the opening at the bottom of the steam cleaner housing and slide downwards to secure in place.

STEP 2: Push the steam cleaner handle into the steam cleaner housing until it clicks into place.

STEP 3: To remove the steam cleaner main body from the steam cleaner housing, pull the main body release latch upwards and carefully lift the steam cleaner main body up and away from the housing.

Attaching the Triangular Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body housing onto the triangular mop head, until the mop head spindle clicks into place.

STEP 2: To remove the triangular mop head, push the mop head release button and carefully pull the triangular mop head away from the steam cleaner main body.

Attaching the Microfibre Mop Head Pad

STEP 1: Remove the triangular mop head from the steam cleaner main body housing, following the instructions in the section entitled 'Attaching the triangular Mop Head'.

STEP 2: Attach the microfibre mop head pad to the triangular mop head by aligning the hook and loop tabs.

STEP 3: Place the triangular mop head into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the triangular mop head to the steam cleaner main body housing.

Attaching the Microfibre Mop Head Pad

STEP 1: Remove the triangular mop head from the steam cleaner main body housing, following the instructions in the section entitled 'Attaching the triangular Mop Head'.

STEP 2: Attach the microfibre mop head pad to the triangular mop head by aligning the hook and loop tabs.

STEP 3: Place the triangular mop head into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the triangular mop head to the steam cleaner main body housing.

Note: The microfibre mop head pad must be installed correctly before use. The carpet glider should only be used on carpets.

Filling the Water Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner main body horizontally on a flat, stable surface

STEP 2: Carefully remove the water tank by pushing in the water tank release buttons and pulling the tank away from the main unit.

STEP 3: Unscrew the water tank release cap in an anticlockwise direction and lift away from the water tank.

STEP 4: Fill the measuring jug with water and pour the contents into the water tank.

Repeat to reach the max. fill mark. Reinsert the water tank cap and twist it clockwise to lock into place.

Note: The water may take a couple of seconds to rise; allow time for this before adding more to the water tank, making sure that it is not overfilled.

Caution: Do not attempt to fill the water tank whilst the steam cleaner is turned on.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the 14 in 1 Steam Cleaner

As an Upright Steam Cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the 14 in 1 Steam Cleaner'.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: The steam cleaner features a flexi-hinge that is ideal for cleaning under furniture. Push the flexi-hinge release button to activate the flexi hinge; deactivate the flexi-hinge by pressing the flexi-hinge button and straightening the handle.

STEP 5: Switch on the steam cleaner using the On/Off switch, the switch will illuminate when the steam cleaner is switched on. Turn the adjustable steam control in a clockwise direction until the desired steam setting is reached. The temperature indicator lights will illuminate red, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature the temperature indicator lights will illuminate blue and steam production will begin.

STEP 6: Turn the adjustable steam control in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

STEP 7: To halt steam production turn the unit off using the On/Off switch.

As a Handheld Steam Cleaner

STEP 1: Remove the steam cleaner main body from the housing following the instructions in the section entitled 'Attaching the Steam Cleaner Main Body to the Steam Cleaner Housing'.

STEP 2: Fill the water tank.

STEP 3: Fully insert the straight nozzle into the steam nozzle by aligning the grooves on the steam nozzle with the grooves on the straight nozzle.

STEP 4: Attach the required accessory to the straight nozzle, using the corresponding arrows as alignment guides. Turn the accessory in a clockwise direction to secure it.

STEP 5: Plug in and switch on the steam cleaner at the mains power supply. Switch the unit on using the On/Off switch.

STEP 6: Once the required temperature has been reached, twist the steam control dial clockwise on the main body to release steam.

STEP 7: To remove the straight nozzle attachment, push the attachment release button and slide the straight nozzle away from the steam cleaner main unit.

Note: A full water tank will supply approx. 20 minutes of continuous steam. Steam will run continuously until the water tank is empty or the adjustable steam control is in the 'Off' position.

Caution: Do not attempt to use the steam cleaner as a handheld steamer whilst the handle is inserted.

Never leave the appliance stationary on a floor area for longer than 15 seconds.

The handheld unit will become hot during use.

Storing the Power Cord

The steam cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the upper and lower cord hooks; the upper cord hook must be in the upright position. To unwrap the power cord and release it from the stored position, pull and twist the upper cord hook 180 ° in a clockwise direction.

Accessories

Accessory	Suggested Use	Further Usage Information
Straight Nozzle	For cleaning awkward areas and crevices.	Is the base attachment for all of the handheld accessories supplied with the steam cleaner. Attach any required accessory onto the straight nozzle.
Window/Mirror Cleaner	Ideal for a streak-free shine, cleaning shower screens, mirrors and glass.	Always check that the glass is not cold or frozen and that the lowest steam setting is selected to prevent damage to the surface.
Small Round Brush Large Round Brush	Both round brush accessories are perfect for cleaning hobs, showers, BBQs, taps and sanitaryware.	The small round brush is best for removing ingrained dirt from hard surfaces. The large round brush is best for stubborn stains and removing residue from kitchen and bathroom surfaces. Always make sure that hot surfaces have cooled to room temperature before using the round brushes.

Angled Nozzle	Good for those hard-to-reach places, such as stovetops, sanitaryware, taps and sinks.	Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at the non-permanent stain, whilst holding a clean cloth near to the marked area to capture any loosened dirt.
Grouting Tool	Ideal for cleaning grout in kitchens and bathrooms.	Use on a low steam setting and apply light pressure.
Scraping Tool	Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard to remove substances. Ideal for use on surfaces such as hobs or for helping to de-ice the freezer.	Always make sure that hot surfaces have cooled to room temperature before using the scraping tool.
Garment and Upholstery Steamer Cloth	Steaming garments, curtains, tablecloths, carpets and upholstery.	Ideal for removing wrinkles from garments, leaving them crease-free and great for refreshing and cleaning upholstery.
Microfibre Mop Head Pad	For the general cleaning of hard floors.	Use a low steam setting for wood floors and a higher steam setting for tiled floors.
Carpet Glider	For ease of use on carpets.	To prevent carpets from becoming wet, use a low steam setting.

Warning: Exercise caution when using the round brushes, as they have very sharp bristles. Never hold the round brushes by the bristles; always use the steam cleaner main body.

Storage

Remove the microfibre mop head pad, making sure that it has been cleaned following the instructions in the section entitled 'Care and Maintenance'.

Check that the steam cleaner is cool and dry and the water tank is empty before storing in a cool, dry place.

Specifications

Product code: BEL01131-VDEEU7

Input: 220-240 V ~ 50 Hz

Output: 1300 W

Water tank capacity: 300 ml

Waterproof level: IPX4

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD130121/MD000000/V1