

Beldray^{est 1872}[®]
FOR **150** YEARS

Our **lightweight,**
cordless &
powerful
window vac



WINDOW VAC

INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.


This appliance is not designed to pick up spills.



Only use this appliance in a vertical position; do not use it in a horizontal position.

If the appliance is used in a horizontal position, water may leak out of the vents. This could cause injury to the user or damage to the appliance.

Using the appliance in a horizontal position will void the warranty.

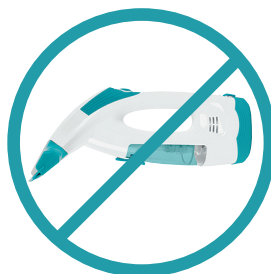

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery or cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Do not use any cell or battery which is not designed for use with the product.



Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Once the batteries have been exhausted, dispose of the unit at a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 3.7 V 2000 mAh Li-ion secondary (rechargeable) battery.

Care and Maintenance

Always switch off and unplug the window vac from the mains power supply before attempting any cleaning or maintenance.

STEP 1: Release the squeegee vacuum head by pressing the squeegee vacuum head locking tab/release and pulling upwards.

STEP 2: Wipe the window vac main body, squeegee vacuum head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

NOTE: The window vac should be cleaned after each use.

Do not use harsh or abrasive cleaners or detergents.

Never immerse the window vac main body in water or any other liquid.

Description of Parts



- | | |
|--|---------------------------|
| 1. Window Vac main body | 6. Charging port |
| 2. Squeegee vacuum head | 7. Charging port cover |
| 3. Squeegee vacuum head locking tab/release button | 8. Water tank |
| 4. On/Off button | 9. Water tank plug |
| 5. Charging indicator light | 10. 60 ml max. fill level |
| | 11. Handle |

Instructions for Use

Before First Use

Before using the window vac for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the window vac in water or any other liquid.

Check that the squeegee vacuum head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

Assembling the Cordless Window Cleaning Vacuum

STEP 1: Attach the squeegee vacuum head by pushing the squeegee vacuum head locking tab/release button and inserting it onto the top of the window vac main body, until it locks into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

STEP 2: Make sure that the water tank plug is firmly in place; failure to do so may result in a water leak that may damage the appliance.

Note: The squeegee vacuum head will only clip onto the window vac main body one way.

Charging the Window Vac

Before first use, the window vac must be charged for approx. 3 hours. Subsequent charging times will take approx. 2-3 hours.

STEP 1: Connect the lead from the mains power adaptor to the charging port on the window vac.

STEP 2: Plug the mains power adaptor into the mains power supply; the charging indicator light will flash blue to signal that the battery is charging. Once the battery is fully charged, the charging indicator light will stop flashing and remain constantly lit.

NOTE: Whilst charging, the window vac may become warm.

CAUTION: Exercise caution when charging the window vac; it must be stood upright on a dry, stable surface, away from other appliances.

WARNING: Do not leave the window vac unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the window vac from the mains power supply immediately.

Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

Using the Window Vac

STEP 1: Apply dilute window cleaning solution to window following the manufacturer's instructions.

STEP 2: Turn on the window vacuum by pressing the 'On/Off' button.

STEP 3: Place the squeegee vacuum head against the window surface in a vertical position.

STEP 4: Clean the window from top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears and leave the window with a streak-free finish.

STEP 5: The window vac can be used to remove any excess water that remains on the window surface. Whilst switched on, hold the window vac vertically where the excess water has collected and allow it to suck up the liquid.

STEP 6: Turn off the window vac by pressing the 'On/Off' button.

NOTE: Check that the water tank plug is firmly in position to avoid leakage of water from the tank.

WARNING: Do not use the window vac to pick up anything other than water or diluted window cleaning concentrate.

Emptying the Water Tank

STEP 1: Switch off and unplug the window vac from the mains power supply.

STEP 2: Detach the water tank plug from the front of the water tank and tilt it to drain away any excess water.

STEP 3: Fix the water tank plug back onto the water tank.

NOTE: The water tank must be emptied after each use.

WARNING: Do not overfill the 60 ml water tank.

Storage

Check that the window vac is cool, clean and dry and that the water tank is empty before storing in a cool, dry place.

NOTE: If the battery is exhausted, it is recommended to charge the window vac slightly before storage. This will help to prolong the life of the battery. The window vac may need to be recharged after storage, before the next use.

.Troubleshooting

Symptom	Cause	Solution
The window vac will not turn on.	The window vac has run out of charge.	Charge the window vac following the instructions in the section entitled 'Charging the Window Vac'.
Water is leaking from the air vents.	The water has exceeded the 60 ml max. fill level. Spirit or foam detergent has been used to clean the surface of the mirror or window. The window vac has been used horizontally.	Empty the water tank following the instructions in the section entitled 'Emptying the Water Tank'. Use conventional window cleaning concentrate as opposed to spirit or foam detergents. The window vac must only be used in a vertical position during operation.
The window vac is leaving streaks on the surface.	The squeegee vacuum head is dirty. There is too much window cleaning concentrate on the surface of the mirror or window.	Clean the squeegee vacuum head with a soft, damp cloth and leave to dry naturally. Adjust the dilution of the window cleaning concentrate.

Specifications

Product code: BEL0749N-150

Battery: 3.7 V 2000 mAh Li-ion battery (included)

Adaptor Input: : 100-240 V AC 50/60 Hz 0.2 A Max

Adaptor Output: 5.0 V $\equiv$ 0.8 A, 4.0 W

Average Active Efficiency: 73.78 %

Efficiency at Low Load (10 %): 67.80 %

No Load Power Consumption: 0.06 W

IPX 4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\perp$)

FOR UK USE ONLY - Plug fitting details (where applicable).

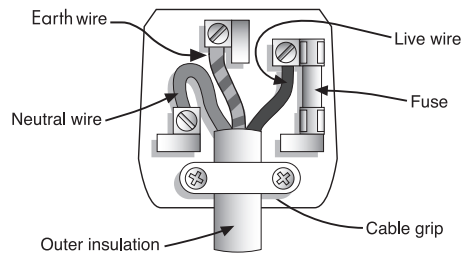

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\perp$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD231121/MD000000/V1