

Beldray[®] est 1872

FOR **150** YEARS

How does it work?



**FILL WITH
TAP WATER**



ADD SALT



**CHARGE WITH
ELECTRICITY**



**CLEAN WITH
POWERFUL
SANITISER**



ANTIBAC
SPRAY & CLEAN
INSTRUCTION MANUAL



www.beldray.com

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Only use the appliance with the power supply unit provided.

Keep the appliance out of the reach of children.

Keep the appliance away from heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Do not use hot or boiling water to make sterilised water.

Do not boil the finished sterilised water or mix with any other cleaning solutions.

Do not use the appliance on any unsealed hard floor surfaces, leather, carpet or any soft fabrics/materials.

WARNING: Do not drink sterilised water or spray it onto the skin or into the eyes. If contact has been made, wash the affected area with copious amounts of clean water and seek medical advice.


Care and Maintenance

Wipe the spray mop with a soft, damp cloth and allow to dry thoroughly.

Hand-wash the microfibre pad in warm, soapy water and allow to dry naturally.

It is recommended to clean the inside of the refillable cartridge if it is used for electrolysis more than once. Add vinegar to the water tank after use, shake it and soak the metal electrolysis net for about 3 minutes. After cleaning with vinegar, rinse thoroughly with tap water.

Description of Parts

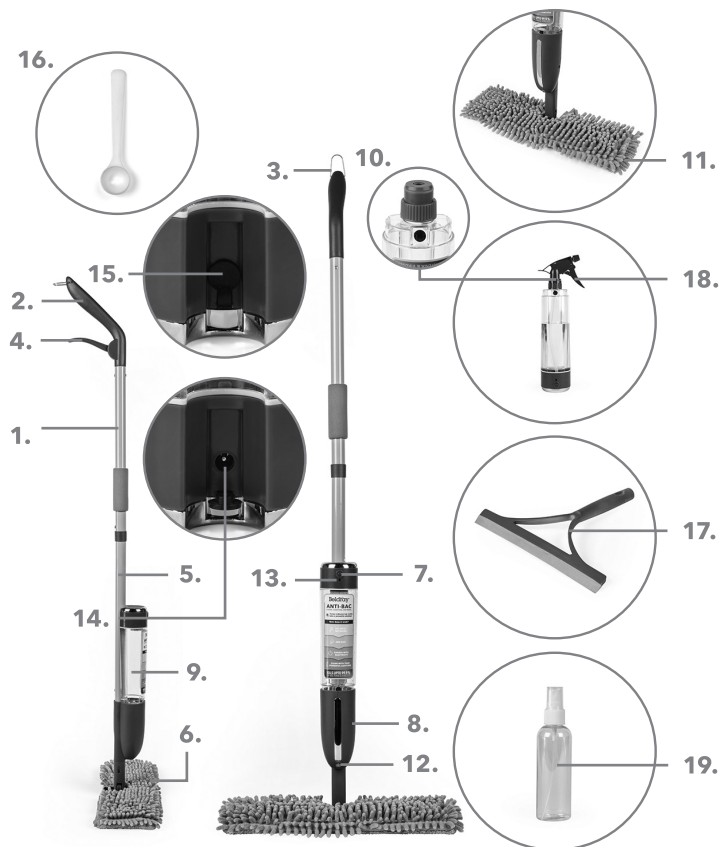

1. Antibac Spray & Clean main unit
2. Handle
3. Metal hanging hook
4. Spray trigger
5. Lower tube
6. Mop head
7. Power button
8. Cartridge holder
9. 400 ml refillable mop cartridge
10. Cartridge cap

11. Double-sided microfibre pad
12. Spray nozzle
13. Indicator light
14. Adaptor port
15. Adaptor port cap
16. 3 g measuring spoon
17. Window squeegee
18. Handheld spray trigger
19. 100 ml mini Spray bottle

Instructions for Use

Assembling the Antibac Spray & Clean

STEP 1: Attach the lower tube to the mop head by pushing it downwards until it locks into position.

STEP 2: Slot the handle into the lower tube securely until it clicks.

STEP 3: Slide the mop head into the double-sided microfibre pad and secure into place using the fasteners.

Filling the Mop Cartridge

STEP 1: Detach the mop cartridge from the cartridge holder by inverting the spray mop so that the mop head is at the top, and then carefully pulling the mop cartridge down and away from the cartridge holder.

STEP 2: Unscrew the cartridge cap and fill the mop cartridge with cold tap water and one measuring spoon of table salt. Replace the cartridge cap.

STEP 3: To replace the mop cartridge, carefully push it into the cartridge holder, with the spray mop still inverted, until it locks into position.

WARNING: Check that the mop cartridge is the correct way up when removing it from the lower tube to prevent spillages. Only add water and table salt to the cartridge.

Using the Sanitiser Function

STEP 1: To use the sanitiser function, first detach and fill the mop cartridge following the instructions in the section entitled 'Filling the Mop Cartridge'.

STEP 2: Place the mop cartridge on a level surface and connect the mains power adaptor to the adaptor port on the mop cartridge.

STEP 3: Plug the mains power adaptor into the mains power supply and switch on. Push the power button on the mop cartridge to begin the sterilisation process; the indicator light will illuminate. After approx. 5 minutes the indicator light will switch off, signalling the sterilisation process is complete.

STEP 4: Switch off and unplug the mains power adaptor from the mains power supply once the sterilisation process is complete. Disconnect the mains power adaptor from the adaptor port on the mop cartridge. Attach the mop cartridge to the spray mop main unit.

NOTE: The sterilised water generated during the sterilisation process is effective for approx. 30 minutes. After 30 minutes, effectiveness is lowered considerably.

The electrolysed water solution destroys 99.9 % of bacteria and viruses, including P.aeruginosa and E.coli when applied for 30 seconds, and Influenza A H1N1 when applied for 10 minutes. Efficacy varies depending on the surface treated and the treatment time.

WARNING: Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

Using the Antibac Spray & Clean

STEP 1: Assemble the spray mop following the instructions in the section entitled 'Assembling the Antibac Spray & Clean'.

STEP 2: Fill the mop cartridge following the instructions in the section entitled 'Filling the Mop Cartridge'.

STEP 3: Once the sterilisation process is complete, reattach the mop cartridge. Control the spray function by gently squeezing the spray trigger.

Using the Handheld Spray Trigger

The mop cartridge can also be used as a spray bottle, which is ideal for use in conjunction with the window squeegee.

STEP 1: To convert the mop cartridge, remove the mop cartridge lid. Replace it with the handheld spray trigger and screw in a clockwise direction to lock into place.

STEP 2: Control the spray function by gently squeezing the spray trigger. Turn the spray nozzle to the left or right to choose between a more concentrated or wider spray.

OPTIONAL: Fill the mini spray bottle with sterilised water solution to use as a light alternative or as an on-the-go sanitiser.

Storage

Before storing the spray mop, remove the double-sided microfibre pad and wash following the instructions in the section entitled 'Care and Maintenance' and rinse the mop cartridge thoroughly with clean water.

Check that the spray mop and accessories have dried fully before reattaching the mop cartridge to the spray mop main unit.

Store in a cool, dry place.

Specifications

Product code: BEL01121-150

Adaptor Input: 100-240 V ~ 50/60 Hz

Adaptor Output: 5.0 V  1.0 A, 5.0 W

Average active efficiency: 73.97 %

Efficiency at low load (10 %): 59.63 %

No load power consumption: 0.058 W



**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD031220/MD020321/V1