

**Beldray**<sup>est 1872</sup>  
FOR **150** YEARS

**Multifunctional  
& versatile**



**STICK VAC**  
TWO IN ONE  
INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use this appliance if any of the openings are blocked.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

### **Thermal Cut-out Device**

If the dust container and HEPA filter are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit.

If the vacuum cleaner cuts out, press the power switch to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

### **Dos and Don'ts**

#### **Do:**

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.

#### **Don't:**

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

### **Care and Maintenance**


Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Make sure that the HEPA filter is kept clean and is replaced when it becomes worn.

## Description of Parts

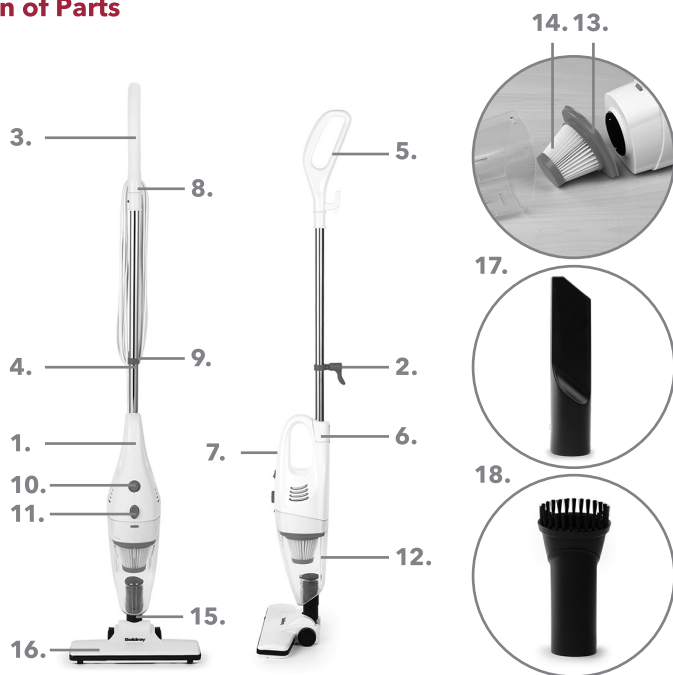

- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| 1. Stick Vac Two in One main unit | 10. Power switch                  |
| 2. Quick release cord hook        | 11. Dust container release button |
| 3. Extension pole handle          | 12. Dust container                |
| 4. Extension pole                 | 13. HEPA filter                   |
| 5. Upright vacuum handle          | 14. Mesh filter cover             |
| 6. Locking clip                   | 15. Air inlet                     |
| 7. Handheld vacuum handle         | 16. Floor head                    |
| 8. Upper cord hook                | 17. Crevice tool                  |
| 9. Lower cord hook                | 18. Brush tool                    |

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Using the Stick Vac Two in One

The Stick Vac Two in One is ideal for quick clean ups around the home and makes light work of cleaning stairs, car upholstery and curtains. Simply attach the floor head and extension handle to turn the nifty handheld unit into an upright vacuum that is perfect for hard floors and carpets.

### Assembling the Upright Vacuum Handle

Before using as an upright vacuum cleaner for the first time, the upright vacuum handle must be assembled.

**STEP 1:** Align the tab on the extension pole with the indent on the extension pole handle.

**STEP 2:** Press the tab inwards whilst pushing the pole into position until the tab clicks into place.

### Using as an Upright Vacuum Cleaner

**STEP 1:** Once the upright vacuum handle has been assembled, align the groove on the upright vacuum handle with the indent on the handheld unit.

**STEP 2:** Insert the upright vacuum handle into the vacuum cleaner main body until the locking clip secures it into place.

**STEP 3:** Place the floor head onto the floor and slot the air inlet onto the floor head.

**STEP 4:** Plug in and switch on the vacuum cleaner at the mains power supply.

**STEP 5:** Turn it on by pressing the power switch.

**STEP 6:** Press the power switch once more to turn off the vacuum cleaner.

### Using as a Handheld Vacuum Cleaner

**STEP 1:** Once the vacuum cleaner is turned off, press the locking clip and then carefully pull the extension handle away from the vacuum cleaner main body.

**STEP 2:** Remove the floor head by pulling it away from the air inlet.

**STEP 3:** Select the attachment to be used and place it securely onto the air inlet. The crevice tool is ideal for cleaning hard-to-reach areas such as under car seats, behind radiators and in-between sofa cushions. The brush tool is ideal for cleaning fabric.

**STEP 4:** Once the attachment is secure, plug the vacuum cleaner into the mains power supply and turn it on by pressing the power switch.

**STEP 5:** Turn off the vacuum cleaner by pressing the power switch once more.

## Emptying the Dust Container

It is important to empty the dust container regularly. This will help to preserve suction and prolong the life of the vacuum cleaner.

**STEP 1:** Switch off and unplug the vacuum cleaner from the mains power supply.

**STEP 2:** Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release button and pulling the dust container away from the unit.

**STEP 3:** Carefully remove the HEPA filter from the dust container and empty it, disposing of any dust. If there is any dust or other residue remaining on the HEPA filter surface, clean it according to the instructions provided in the section entitled 'Cleaning the Dust Container and HEPA Filter'.

**STEP 4:** Empty the dust container over a bin, slowly and carefully to reduce the amount of dust released back into the atmosphere.

**STEP 5:** Reinsert the HEPA filter into the dust container. Replace the dust container into the vacuum cleaner main body by holding the dust container at a slight angle and pushing it upwards toward the vacuum cleaner main body until it clicks into position.

**NOTE:** Do not use the vacuum cleaner if the dust container is filled past the max. fill mark, as this could damage the unit or cause injury to the user.

## Cleaning the Dust Container and HEPA Filter

It is important to keep the dust container and HEPA filter clean from dust and dirt, to allow air to flow freely around the vacuum cleaner. This will help to preserve suction and prolong the life of the vacuum cleaner.

The HEPA filter can only be accessed when the dust container has been removed.

**STEP 1:** Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

**STEP 2:** Once the dust container is empty, the HEPA filter can be lifted out of the dust container.

**STEP 3:** Remove the mesh filter cover from the HEPA filter by undoing the fastening. Clean the mesh filter cover by rinsing carefully under cold water.

**STEP 4:** Hold the HEPA filter over a waste bin, preferably outdoors and gently shake off any dust and debris. Once the majority of the dust and dirt has been removed, clean off any residue by rinsing the filter under cold water. Allow to dry thoroughly.

**STEP 5:** Wash the dust container in clean, warm water and allow to dry thoroughly.

**STEP 6:** Once all of the parts have dried fully, refit the HEPA filter and the mesh filter cover back into place and replace the dust container.

**NOTE:** If the dust container and filters are not cleaned regularly, the thermal cut-out device will activate. For further details, see

the section entitled 'Thermal Cut-out Device'.

**WARNING:** Do not clean the filters using detergent. Always allow the filters to air dry; never use external heat sources, such as a radiator to dry it.

## Storage

The vacuum cleaner should be cool, clean and dry before storing in a cool, dry place. The vacuum cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the quick release cord hook and the lower cord hook, making sure that the quick release cord hook is in the upright position. To unwrap the power cord, twist the quick release cord hook 180 ° in a clockwise direction to release the cord from the stored position.

## Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The air inlet is blocked.  The dust container is almost full.  The HEPA filter is blocked.	Disconnect the attachments and remove the blockage.  Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.  Clean the HEPA filter following the instructions in the section entitled 'Cleaning the Dust Container and HEPA Filter'.
The vacuum cleaner has cut out.	The thermal cut-out device has activated due to restricted airflow around the unit and has cut power to the motor to protect the vacuum cleaner.	Switch off and unplug the vacuum cleaner from the mains power supply. Empty the dust container and clean the HEPA filter following the instructions in the section entitled 'Cleaning the Dust Container and HEPA Filter'. Allow the vacuum cleaner to cool for approx. 1 hour.

## Specifications

Product code: BEL0770-150

Input: 220-240 V ~ 50-60 Hz

Output: 600 W

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

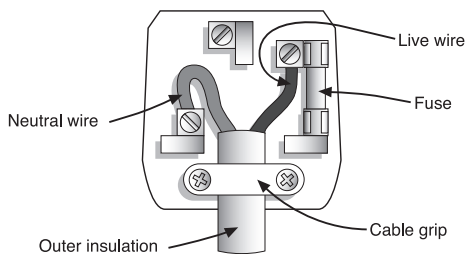

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

**It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



\*To be eligible for the extended guarantee, go to [guarantee.upgs.com/beldray](http://guarantee.upgs.com/beldray) and register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

[www.beldray.com](http://www.beldray.com)

©Beldray Trademark. All rights reserved.



CD040222/MD000000/V1