

Beldray[®] est 1872
FOR **150** YEARS

**No drips,
no streaks
quick & easy**



WINDOW CLEANING VAC

INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.

This appliance is not designed to pick up spills.

Only use this appliance in a vertical position; do not use it horizontally.

If the appliance is used in a horizontal position, water may leak out of the vents. This could cause injury to the user or damage to the appliance.

Using the appliance in a horizontal position will void the warranty.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit/use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use this appliance outdoors.

Do not use the appliance with hot water or caustic cleaning detergents.

Do not use the appliance for anything other than its intended use.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories and before cleaning or user maintenance.

The use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be



used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use.

Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 3.7 V 2000 mAh Li-ion rechargeable battery (non-removable).

Care and Maintenance

Always switch off and unplug the window-cleaning vac from the mains power supply before attempting any cleaning or maintenance.

STEP 1: Clean the microfibre wipe pad in warm, soapy water; rinse and dry thoroughly.

STEP 2: Release the squeegee head by pressing the squeegee head locking tab/release button and pulling the head upwards and away from the window vac main body.


STEP 3: Wipe the window vacuum main body, squeegee head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

The window vacuum should be cleaned after each use.

Do not use harsh or abrasive cleaners or detergents.

Never immerse the window vacuum main body in water or any other liquid.

Description of Parts

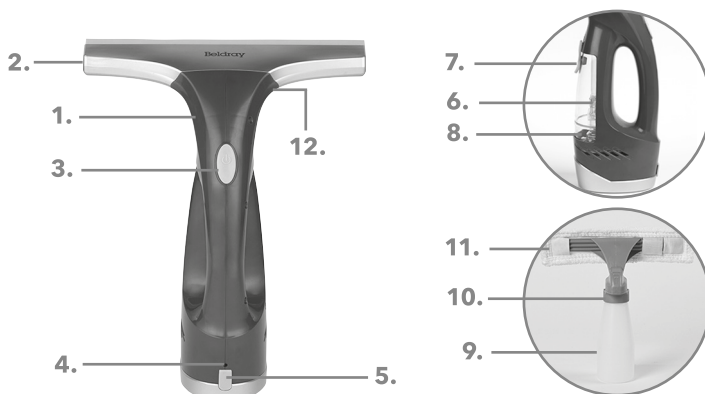

- | | |
|----------------------------------|--|
| 1. Window Cleaning Vac main body | 8. Max. fill level |
| 2. Squeegee vacuum head | 9. Spray bottle |
| 3. On/Off button | 10. Spray nozzle head |
| 4. Indicator light | 11. Wiper attachment with microfibres wipe pad |
| 5. Charging port | 12. Squeegee head locking tab/ release button |
| 6. 60 ml water tank | |
| 7. Water tank plug | |

Instructions for Use

Before First Use

Before using the window vac for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the window vac in water or any other liquid.

Check that the squeegee vacuum head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

Charging the Window Vac

Before first use, the window vac must be charged for approx. 3 hours. Subsequent charging times will take approx. 2-3 hours.

STEP 1: Connect the lead from the mains power adaptor to the charging port on the window vac.

STEP 2: Plug the mains power adaptor into the mains power supply; the charging indicator light will flash to signal that the battery is charging. Once the battery is fully charged, the charging indicator light will stop flashing and remain constantly lit.

NOTE: Whilst charging, the window vac may become warm.

CAUTION: Exercise caution when charging the window vac; it must be stood upright on a dry, stable surface, away from other appliances.

WARNING: Do not leave the window vac unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the window vac from the mains power supply immediately.

Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

Assembling the Window Cleaning Vac

Attach the squeegee head by pushing the squeegee head locking tab/release button and inserting the head onto the top of the window cleaning vac main body, until it locks into position.

Assembling the Spray Bottle

STEP 1: Add the spray head to the top of the spray bottle and twist in a clockwise direction to secure it into position.

STEP 2: Pull the microfibre wipe pad over the wiper attachment, allowing the elastic edges to hold it in place. Secure it using the hook and loop tabs.

Using the Window Cleaning Vacuum

STEP 1: Fill the spray bottle with a mixture of water and diluted window cleaning concentrate (not included) following the manufacturer's instructions.

STEP 2: Use the spray bottle and the microfibre wipe pad to wash over the area of window to be cleaned.

STEP 3: To turn on the window vac, press the On/Off button; push it again to turn it off.

STEP 4: Place the squeegee head against the window surface in a vertical position.

STEP 5: Clean the window from the top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears on the window surface.

STEP 6: The window vac can now be used to remove any excess water remaining on the window surface. Whilst switched on, hold the window vac vertically where the excess water has collected and allow it to suck up the liquid.

NOTE: To lock the nozzle on the spray bottle when it is not in use, twist it in a clockwise direction.

The indicator light on the window vac will flash blue approx. 10–15 seconds before the battery runs out of charge.

The window vac is not designed to pick up large quantities of liquid from horizontal surfaces e.g. spilled drink.

WARNING: Do not use the window vac to pick up anything other than water or diluted window cleaning concentrate. It is recommended to use conventional window cleaning concentrate as opposed to spirit or foam detergents, as these can damage the window vac.

Emptying the Water Tank

STEP 1: Switch off and unplug the window vac from the mains power supply.

STEP 2: Detach the water tank plug from the front of the water tank and tilt it to drain away any excess water.

STEP 3: Fix the water tank plug back onto the water tank.

NOTE: The water tank should be emptied after each use.

WARNING: Do not allow the water tank to fill beyond the max. fill level, as this may cause water to leak from the vents and could damage the window vac.

Storage

Check that the window vac is cool, clean and dry and that the water tank is empty before storing in a cool, dry place.

NOTE: If the battery is exhausted, it is recommended to charge the window vac slightly before storage. This will help to prolong the life of the battery. The window vac may need to be recharged after storage, before the next use.

Troubleshooting

Symptom	Cause	Solution
The window vac will not turn on.	The window vac has run out of charge.	Charge the window vac following the instructions in the section entitled 'Charging the Window Vac'.
Water is leaking from the air vents.	<p>The water has exceeded the max. fill level.</p> <p>Spirit or foam detergent has been used to clean the surface of the mirror or window.</p> <p>The window vac has been used horizontally.</p>	<p>Empty the water tank following the instructions in the section entitled 'Emptying the Water Tank'.</p> <p>Use conventional window cleaning concentrate as opposed to spirit or foam detergents.</p> <p>The window vac must only be used in a vertical position during operation.</p>
The window vac is leaving streaks on the surface.	<p>The squeegee vacuum head is dirty.</p> <p>There is too much window cleaning concentrate on the surface of the mirror or window.</p>	<p>Clean the squeegee vacuum head with a soft, damp cloth and leave to dry naturally.</p> <p>Adjust the dilution of the window cleaning concentrate.</p>



Specifications

Product code: BEL01105

Battery: 3.7 V 2000 mAh Li-ion

Adaptor Input: 100-240 V ~ 50/60 Hz

Adaptor Output: 5.0 V **==** 0.8 A 4.0 W

Average active efficiency: 73.78 %

No load power consumption: 0.06 W

Water tank volume: 60 ml

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

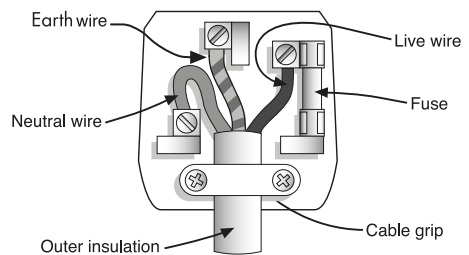

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray/ and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD071221/MD000000/V1