

Beldray[®] est 1872

FOR **150** YEARS

Our **practical,**
compact &
lightweight
vacuum
cleaner



COMPACT
VAC LITE
INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use this appliance if any of the openings are blocked.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted airflow.

If the vacuum cleaner cuts out, press the power button to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

Care and Maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Clean the HEPA filter, exhaust filter and mesh filters after every removal of the dust container.

To clean the inside of the dust container it is possible to remove the cyclonic cone.



Dos and Don'ts

DO:

Check that the filters are kept clear of obstruction.

Make sure that the dust container and filters are cleaned regularly to preserve suction and to prolong the life of the vacuum cleaner.

Keep the accessories free from a build-up of dust and dirt.

DON'T:

 
Use the vacuum cleaner without the filters or dust container in position.

Use the vacuum cleaner to pick up liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Empty the dust container indoors.

Pull or lift the vacuum cleaner by its power supply cord.

Description of Parts

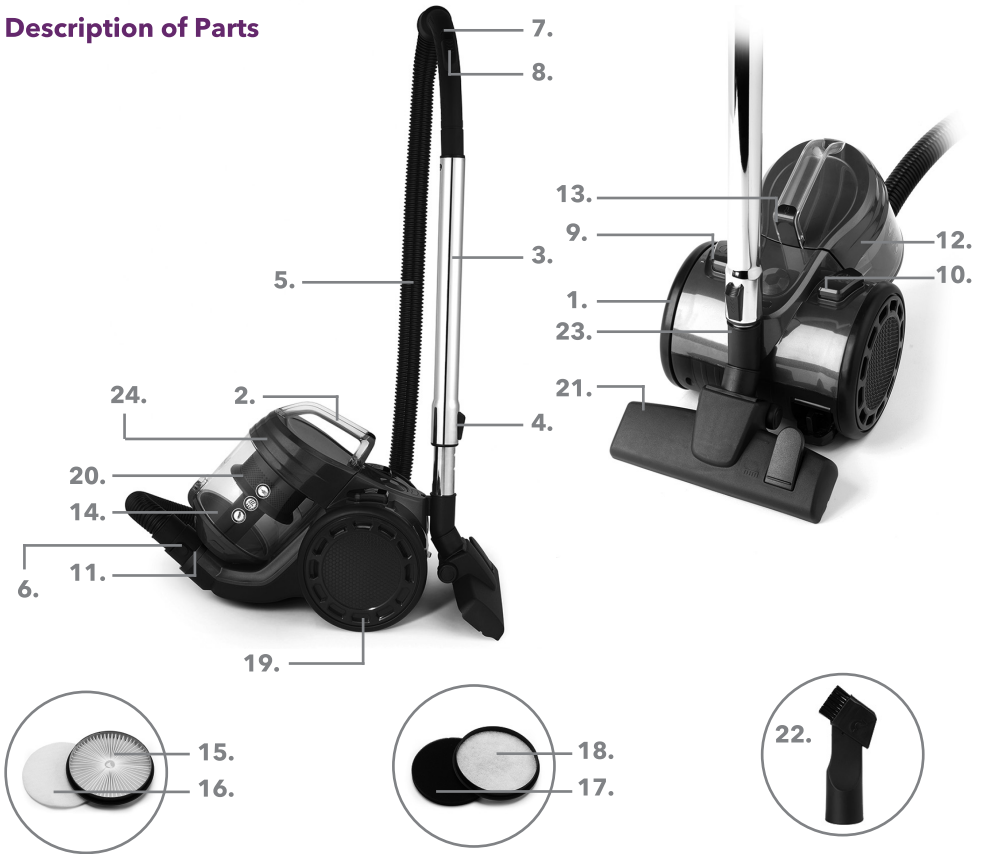

1. Compact Vac Lite main unit
2. Handle
3. Telescopic extension tube
4. Telescopic extension tube button
5. Suction hose
6. Suction hose lock
7. Suction hose neck
8. Air valve
9. Power button
10. Cord rewind button
11. Air inlet
12. Dust container

13. Dust container release catch
14. Dust container base release clip
15. HEPA filter
16. Mesh filter
17. Exhaust sponge filter
18. Exhaust mesh filter
19. Removable hub cap
20. Cyclonic cone
21. Floor brush
22. Brush/crevice tool
23. Storage clip
24. Dust container cover

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

Assembling the Compact Vac Lite

Switch off and unplug the vacuum cleaner from the mains power supply before fitting any accessories onto the air inlet.

STEP 1: Fit the dust container by pushing it onto the vacuum cleaner main unit, aligning the latch with the indent on the unit.

STEP 2: To attach the suction hose, pinch the suction hose lock and insert into the air inlet, ensuring that it locks into position.

Using the Telescopic Extension Tube

 
 
The floor brush and brush/crevice tool both fit onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Fit the telescopic extension tube by pushing the large opening of the telescopic extension tube over the end of the suction hose neck (1).

STEP 2: Push the chosen attachment onto the end of the telescopic extension tube (2).

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.

STEP 4: Release the telescopic extension tube button to lock the telescopic extension tube into position at the selected length.

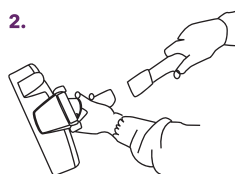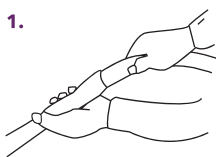



Using the Floor Brush

STEP 1: Push the floor brush onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

STEP 2: Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes for use on carpet and switching it backwards lowers the brushes for cleaning hard floors.

STEP 3: Carefully pull out the power supply cord until it is at a suitable length; do not exceed the red mark. Plug it into the mains power supply.

  STEP 4: Turn on the vacuum cleaner by pressing the power button; press again to turn off.

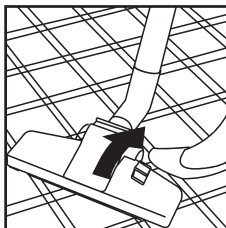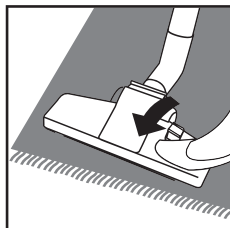

NOTE: Open the air valve on the suction hose when vacuuming carpets.

Using the Brush/Crevise Tool

The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach. The brush tool is perfect for cleaning shelves, cupboards and windowsills.

STEP 1: Push the brush/crevice tool onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.

STEP 2: Select which attachment is to be used by rotating the head to either the crevice or brush setting.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

NOTE: Do not use the suction hose neck without an accessory attached.

After Use

STEP 1: Turn off the vacuum cleaner by pressing the power button.

STEP 2: Switch off and unplug the vacuum cleaner from the mains power supply.

STEP 3: Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum.

WARNING: Hold onto the plug to guide the power supply cord back into the vacuum cleaner. Failure to do so may cause damage to the vacuum cleaner or injury to the user.



Emptying the Dust Container

Before emptying the dust container, switch off and unplug the vacuum cleaner from the mains power supply. It is recommended to empty the dust container outdoors.

STEP 1: Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release catch and pulling the dust container away.

STEP 2: Holding the dust container over a bin or refuse bag, pull the dust container base release clip to open the dust container. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. Shake the dust container gently to dislodge any stubborn dust.

STEP 3: To close the dust container, push the base closed and secure the dust container release catch back into position.

STEP 4: Replace the dust container by pushing it into the vacuum cleaner main unit, aligning the latch with the indent.

WARNING: Do not use the vacuum cleaner if the dust container is filled past the Max. fill mark, as this could damage the unit or cause injury to the user.

Cleaning the Dust Container, HEPA Filter and Mesh Filter

The filters can only be accessed when the dust container has been removed. The cyclonic cone can be removed from the dust container to make cleaning easier.

STEP 1: Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, close it.

STEP 3: Holding the handle, rotate the dust container cover in an anticlockwise direction from the 'locked' position to the 'unlocked' position, and remove the dust container cover.

STEP 4: Pull the HEPA filter away from the main unit and remove the mesh filter.

STEP 5: Shake off the HEPA filter and mesh filter until the majority of the dust has been removed, then wash them under clean, warm water and allow to dry thoroughly.

STEP 6: Lift the cyclonic cone from the dust container. Wash the dust container and cyclonic cone in clean, warm water and allow to dry thoroughly.

STEP 7: Once all of the parts have dried fully, reinsert the cyclonic cone into the dust container, aligning the slots on the unit. Place the cyclonic cone and slot the mesh filter, then the HEPA filter back on top.

STEP 8: Replace the dust container cover and lock back into place by rotating it in a clockwise direction.

NOTE: If the dust container, cyclonic cone, HEPA filter and mesh filter are not cleaned regularly, the thermal cut-out device will activate. For further details, see the section entitled 'Thermal Cut-Out Device'.

WARNING: Do not clean the HEPA filter and mesh filter using detergent. Always allow the HEPA filter and mesh filter to air dry; never use external heat sources, such as a radiator to dry them. Do not wring or twist the mesh filter as this will cause damage. The HEPA filter and mesh filter must be fully dry before refitting into the vacuum cleaner.

Cleaning the Exhaust Sponge Filter and Exhaust Mesh Filter

The exhaust filters are located behind the right wheel on the vacuum cleaner main unit.

STEP 1: To remove the exhaust sponge filter and exhaust mesh filter for cleaning, rotate the removable hub cap in an anticlockwise direction and pull it away from the wheel.

STEP 2: Remove the exhaust sponge filter and exhaust mesh filter from the exhaust filter housing.

STEP 3: Shake off the filters until the majority of the dust has been removed, then wash them under clean, warm water and allow to dry thoroughly.

STEP 4: Once the exhaust sponge filter and exhaust mesh filter have dried fully, slot them back into the exhaust filter housing and replace the removable hub cap, locking it back into place by rotating it in a clockwise direction.

WARNING: Do not clean the exhaust sponge filter and exhaust mesh filter using detergent. Always allow the exhaust sponge filter and exhaust mesh filter to air dry; never use external heat sources, such as a radiator to dry them. Do not wring or twist the mesh filter as this will cause damage. The exhaust sponge filter and exhaust mesh filter must be completely dry before refitting into the vacuum cleaner.

Storage

The vacuum cleaner can be stored compactly by clipping the floor brush and telescopic tube to the back of the vacuum cleaner.

Check that the vacuum cleaner is cool, clean and dry before storing in a clean, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The telescopic extension tube, floor brush, brush/crevice tool brush or air inlet is blocked.	The telescopic extension tube, floor brush, brush/crevice tool brush or air inlet is blocked.
	The dust container is almost full.	The dust container is almost full.
	The filters are blocked.	The filters are blocked.
The vacuum cleaner has cut out or stopped working.	The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect the vacuum cleaner.	Switch off and disconnect the vacuum cleaner from the mains power supply. Empty the dust container and clean the HEPA filter, exhaust sponge filter and mesh filters. Allow the vacuum cleaner to cool for approx. 1 hour.

Static Electricity

The vacuum cleaner may build up static electricity during use. This can result in static electric shocks when touching metal components of the vacuum cleaner. There is no need to worry if this happens. Discharge the vac by touching the extension tube against other metal objects nearby.

Specifications

Product code: BEL0700PURWK-150
 Rated Voltage: 220-240 V ~ 50-60 Hz
 Rated Wattage: 700 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

 
The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

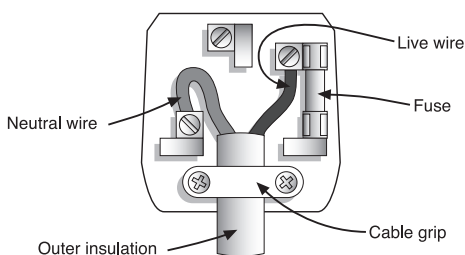

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray/ and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD180117/MD040221/V4

