

**Beldray**<sup>®</sup> est 1872  
FOR **150** YEARS



# **CORDLESS**

## SCRUBBER PRO

INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please retain instructions for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided. This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

**CAUTION:** Do not use the appliance with hot water or with caustic cleaning agents.

## Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.



To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This product is fitted with a 4.8 V 800 mAh Ni-Mh battery (non-removable).

## Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the cordless scrubber from the mains power supply and allow it to cool sufficiently.

**STEP 1:** Wipe the cordless scrubber main body with a soft, damp cloth and allow to dry thoroughly.

**STEP 2:** Clean the polishing pad in warm, soapy water; rinse and dry thoroughly.

**STEP 3:** Rinse the brush attachments under warm water. Allow to air dry thoroughly.


**NOTE:** The attachments are not suitable for dishwasher use.

**WARNING:** The cordless scrubber should be cleaned after each use. Do not use harsh or abrasive cleaners or detergents.

Do not turn on the cordless scrubber when carrying out any care or maintenance of the unit.

Never immerse the cordless scrubber main body in water or any other liquid.

Description of Parts

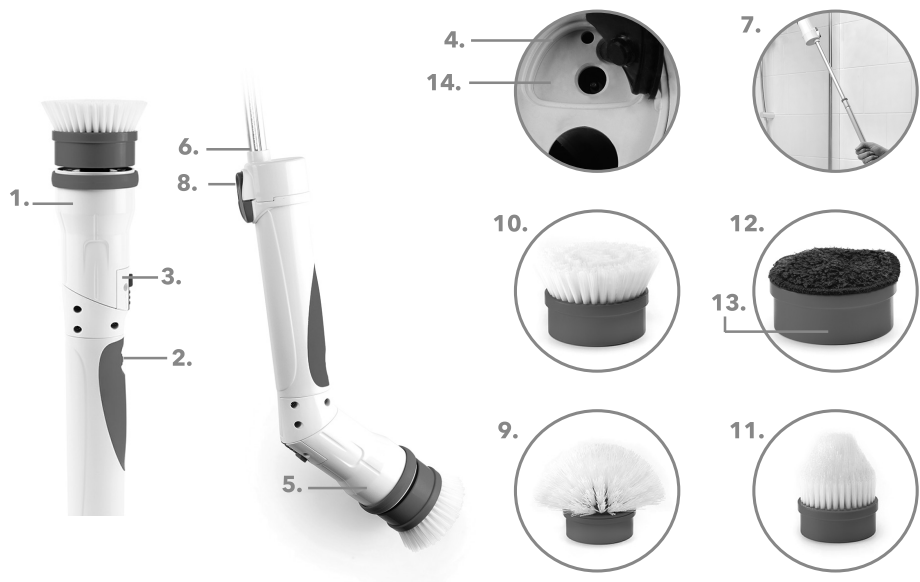

- |                                    |  |
|------------------------------------|--|
| 1. Cordless Scrubber Pro main body | 8. Telescopic extension handle locking tab |
| 2. On/off button                   | 9. Scrubbing brush                         |
| 3. Flexi-head switch               | 10. Heavy-duty brush                       |
| 4. Charging indicator light        | 11. Crevice brush                          |
| 5. Attachment adaptor              | 12. Polishing pad                          |
| 6. Extension handle inlet          | 13. Polishing pad base                     |
| 7. Telescopic extension handle     | 14. Charging port                          |



## Instructions for Use

### Before First Use

Before using the cordless scrubber for the first time, wipe the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the cordless scrubber in water or any other liquid.

### Charging the Cordless Scrubber Pro

Before first use, the cordless scrubber must be charged for approx. 6 hours. Subsequent charging times will take approx. 5–6 hours.

**STEP 1:** If fitted, remove the extension handle by pushing the locking tab in and pulling the extension handle out of the extension handle inlet.

**STEP 2:** Connect the mains power adaptor to the charging port on the cordless scrubber.

**STEP 3:** Plug in and switch on the mains power adaptor at the mains power supply. The charging indicator light will flash red to signal that the battery is charging. Once the battery is fully charged, the charging indicator light will switch off.

**NOTE:** The cordless scrubber may become warm whilst charging.

**CAUTION:** Exercise caution when charging the cordless scrubber; it must be positioned on a dry, stable surface away from other heat-emitting appliances.

**WARNING:** Do not leave the cordless scrubber unattended whilst charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the cordless scrubber from the mains power supply immediately.

Do not use any other adaptor than that supplied, as this could cause damage.

### Assembling the Cordless Scrubber Pro

**STEP 1:** Choose the required attachment.

The scrubbing brush is best for large jobs such as cleaning tiles and grouting.

The crevice brush is ideal for corners, door tracks and tight spaces.

The heavy-duty brush is perfect for tough jobs, which may require a deeper clean.

The polishing pad helps to achieve the perfect finish.

**STEP 2:** Fit the chosen attachment onto the attachment adaptor by lining up the tabs and pushing until it locks into position.

**STEP 3:** Carefully insert the extension handle into the extension handle inlet until it locks into position.

**STEP 4:** To extend the telescopic extension handle, hold onto the cordless scrubber firmly and rotate the telescopic extension handle in an anticlockwise direction. Extend to the desired length and then rotate clockwise until secure.

**STEP 5:** If required, press the flexi-head switch forward and rotate the flexi-head. Do not do this when the cordless scrubber is switched on.

**NOTE:** The extension handle can be removed easily for storage by pushing the locking tab in and pulling the extension handle out of the extension handle inlet.

## Using the Cordless Scrubber Pro

If charging, switch off and unplug the cordless scrubber from the mains power supply and disconnect the mains power adaptor from the cordless scrubber main body before use.

**STEP 1:** Wet the intended area and apply the desired cleaning product, following the manufacturer's instructions.

**STEP 2:** Fit the chosen attachment, following the instructions in the section entitled 'Assembling the Cordless Scrubber Pro'.

**STEP 3:** Place the tip of the chosen attachment onto the surface that requires cleaning.

**STEP 4:** Whilst firmly holding the handle, press the on/off button to turn on the cordless scrubber.

**STEP 5:** Slowly move the brush over the desired surface. Do not apply pressure as the cordless scrubber works best when applied lightly to the surface.

**STEP 6:** Switch off the cordless scrubber by pressing the on/off button.

**NOTE:** Check that the attachment is securely fitted before using the cordless scrubber.

**WARNING:** Always use rubber gloves and appropriate eyewear to avoid contact from splashing of soaps or detergents on skin and/or eyes whilst the cordless scrubber is on and when installing/removing attachments.

Always follow the manufacturer's instructions when using cleaning products.

## Troubleshooting

| Problem  | Possible Reason                                 | Possible Solution                                   |
|--|---|---|
| The cordless scrubber will not turn on.              | The battery is exhausted.                       | Charge the cordless scrubber.                       |
| The cordless scrubber is not removing dirt or grime. | Too much pressure is being used on the surface. | Use less pressure when using the cordless scrubber. |
|  | There is not enough charge in the unit.         | Charge the cordless scrubber.                       |

## Storage

Check that the cordless scrubber is cool, clean and dry before storing in a cool, dry place.

**NOTE:** If the battery is completely exhausted, it is recommended to charge the cordless scrubber slightly before storage. This will help to prolong the life of the battery.

## Specifications

Product code: BEL0783WK-150

Battery: 4.8 V 800 mAh Ni-Mh

Adaptor input: 100-240 V ~ 50/60 Hz 0.2 A

Adaptor output: 7 V  0.2 A 1.4 W

Average active efficiency: 70.4 %

No load power consumption: 0.05 W



**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

**It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



\*To be eligible for the extended guarantee,  
go to **<https://guarantee.upgs.com/beldray/>** and  
register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

[www.beldray.com](https://www.beldray.com)

©Beldray Trademark. All rights reserved.

CD040121/MD310322/V2