

Beldray[®] est 1872
FOR **150** YEARS

**Our lightweight,
practical &
versatile steam
cleaner**



12 IN 1
STEAM CLEANER
INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not immerse the appliance in water or any other liquid.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those

supplied with this appliance, as this may cause damage.

Do not use the appliance on leather, wax polished furniture or floors, vinyl or laminate floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens. Switch off the appliance and disconnect it from the mains power supply and allow it to cool before changing or fitting accessories and before any cleaning and maintenance.

Use of an extension cord with the appliance is not recommended. This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: The appliance emits very hot steam; always exercise extreme caution during use.

WARNING: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.



STEAM



CAUTION: Hot surface



Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank once the steam cleaner main body has cooled and clean it after every use.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pads are machine washable on a low heat setting.

Always use a mild detergent and lay it flat to dry.


Never use bleach or fabric softener when washing the microfibre mop head pad.

WARNING: Do not turn on the steam cleaner during cleaning.

Descaling the Water Tank and Removing Limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam cleaner. Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturer's instructions.

Description of Parts

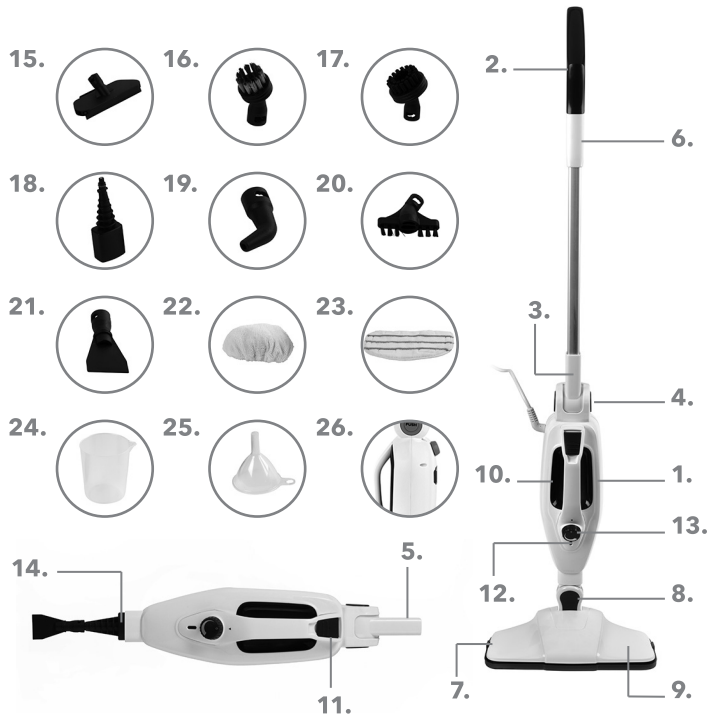

- | | |
|------------------------------------|--|
| 1. 12 in 1 Steam Cleaner main body | 14. Steam nozzle |
| 2. Handle | 15. Window/mirror cleaner |
| 3. Handle release button | 16. Wire round brush |
| 4. Flexi-hinge release button | 17. Large round brush |
| 5. Lower cord storage clip | 18. Accessory adaptor |
| 6. Upper cord storage clip | 19. Angled nozzle |
| 7. Mop head | 20. Grouting tool |
| 8. Accessory release button | 21. Scraping tool |
| 9. Carpet glider | 22. Garment and upholstery steamer cloth |
| 10. 350 ml water tank | 23. 2 microfibre mop head pads |
| 11. Water tank cap | 24. Measuring jug |
| 12. Power indicator light | 25. Funnel |
| 13. Adjustable steam control dial | 26. Anti-calc filter |



Instructions for Use

Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

Assembling the 12 in 1 Steam Cleaner

Attaching the Handle

Insert the assembled handle into the steam cleaner main body, until it clicks into place.

The assembled handle can be removed from the steam cleaner main body by pressing the handle release button.

Attaching the Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body onto the mop head, until the mop head spindle clicks into place.

STEP 2: To remove the mop head, press the accessory release button while pulling the steam cleaner main body away in an upwards direction.

Attaching the Microfibre Mop Head Pad

STEP 1: Remove the mop head from the steam cleaner main body, following the instructions in the section entitled 'Attaching the Mop Head'.

STEP 2: Attach the microfibre mop head pad to the mop head by aligning the hook and loop tabs.

STEP 3: Place the mop head into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the mop head to the steam cleaner main body.

NOTE: The microfibre mop head pad must be installed correctly before use. The carpet glider should only be used on carpets.

Filling the Water Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner main body horizontally on a flat, stable surface.

STEP 2: Carefully lift the water tank cap.

STEP 3: Fill the measuring jug with water and pour the contents into the water tank, using the funnel. Repeat until the water tank is full and then replace the water tank cap.

NOTE: The water may take a couple of seconds to rise; allow time for this before adding more to the water tank, making sure that it is not overfilled.

CAUTION: Do not attempt to fill the water tank whilst the steam cleaner is turned on, as this could cause damage to the appliance or injury to the user.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the 12 in 1 Steam Cleaner

As an Upright Steam cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the 12 in 1 Steam cleaner'.

STEP 2: Fill the water tank.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: The steam cleaner features a flexi-hinge that is ideal for cleaning under furniture. Push the flexi-hinge fully in towards the main unit to activate it; deactivate the flexi-hinge by pressing the flexi-hinge button and straightening the handle.

STEP 5: Turn the adjustable steam control in a clockwise direction until the power indicator light illuminates, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature, steam will be produced automatically.

STEP 6: Turn the adjustable steam control in a clockwise direction to increase the amount of steam; turn in an anticlockwise direction to decrease it.

As a Handheld Steam cleaner

STEP 1: Remove the handle by pressing the handle release button and pulling it up and away from the steam cleaner main body.

STEP 2: Fill the water tank.

STEP 3: Fully insert the accessory adaptor into the steam nozzle.

STEP 4: If necessary, attach the required accessory to the accessory adaptor, using the corresponding arrows as alignment guides. Turn the accessory in a clockwise direction to secure it.

STEP 5: Plug in and switch on the steam cleaner at the mains power supply.

STEP 6: Turn the adjustable steam control in a clockwise direction. Once the steam cleaner has reached the correct temperature, steam will be produced automatically.

NOTE: A full water tank will supply approx. 15 minutes of continuous steam. Steam will run continuously until the water tank is empty or the adjustable steam control is in the 'O' position.

CAUTION: Do not attempt to use the steam cleaner as a handheld steamer whilst the handle is inserted. Never leave the steam cleaner stationary on a floor area for longer than 15 seconds.

The handheld unit will become hot during use.

Accessories

| Accessory | Suggested Use | Further Usage Information |
|--------------------------------------|---|--|
| Accessory adaptor | | The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner. |
| Window/mirror cleaner | Ideal for a streak-free shine, cleaning shower screens, mirrors and glass. | Always check that the glass is not cold or frozen and that the lowest steam setting is selected to prevent damage to the surface. |
| Grouting tool | Ideal for cleaning grout in kitchens and bathrooms. | Use on a low steam setting and apply light pressure. |
| Garment and upholstery steamer cloth | Steaming garments, curtains, tablecloths, carpets and upholstery. | Ideal for removing wrinkles from garments, leaving them crease-free and great for refreshing and cleaning upholstery. |
| Scraping tool | Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard- to-remove substances. Ideal for use on surfaces such as hobs or for helping to de-ice the freezer. | Always make sure that hot surfaces have cooled to room temperature before using the scraping tool. |
| Angled nozzle | Good for those hard-to-reach places, such as stovetops, sanitary ware, taps and sinks. | Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at the non-permanent stain, whilst holding a clean cloth near to the marked area to capture any loosened dirt. |

| | | |
|-------------------------|--|---|
| Wire round brush | Both round brush accessories are perfect for cleaning hobs, showers, BBQs, taps and sanitary ware. | The wire round brush is best for removing ingrained dirt from hard surfaces. |
| Large round brush | | The large round brush is best for stubborn stains and removing residue from kitchen and bathroom surfaces. Always make sure that hot surfaces have cooled to room temperature before using the round brushes. |
| Microfibre mop head pad | For the general cleaning of hard floors. | Use a low steam setting for wood floors and a higher steam setting for tiled floors. |
| Carpet glider | For ease of use on carpets. | To prevent carpets from becoming wet, use a low steam setting. |

WARNING: Exercise caution when using the wire round brush, as it has very sharp bristles. Never hold the wire round brush by the bristles; always use the steam cleaner main body.

Storing the Power Cord

The steam cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the upper and lower cord hooks; the upper cord hook must be in the upright position. To unwrap the power cord and release it from the stored position, pull and twist the upper cord hook 180 ° in a clockwise direction.

Storage

Remove the microfibre mop head pad, making sure that it has been cleaned following the instructions in the section entitled 'Care and Maintenance'.

Check that the steam cleaner is cool and dry, and the water tank is empty before storing in a cool, dry place.

Specifications

Product code: BEL01611

Input: 220-240 V ~ 50-60 Hz

Output: 1300 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

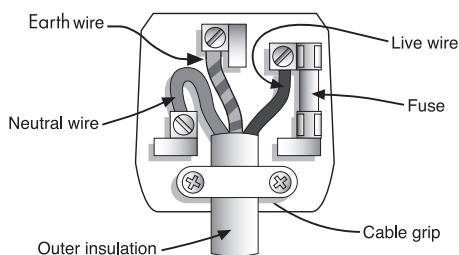

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 1149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



*To be eligible for the extended guarantee, go to **guarantee.upgs.com/beldray** and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 1149 Köln. **Germany.**

www.beldray.com

©Beldray Trademark. All rights reserved.



CD290722/MD081122/V2