

# Beldray<sup>est 1872</sup>®

**Our lightweight,  
versatile &  
easy-to-charge  
vacuum  
cleaner**



## **REVO**

### **PET PLUS+ CORDLESS**

**INSTRUCTION MANUAL**



[www.beldray.com](http://www.beldray.com)

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided. This appliance should not be operated by means of an external timer or separate remote control system. This appliance is intended for domestic use only. It should not be used for commercial purposes.

## **Battery Safety**

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage battery packs.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose battery packs to heat or fire as they may explode.

Do not subject battery packs to mechanical shock.

Do not dispose of exhausted battery packs in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

This product is fitted with an 11.1 V 2200 mAh Li-ion battery pack (non-removable)

## **Care and Maintenance**

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Do not immerse the vacuum cleaner in water or any other liquid. Keep the HEPA filter clean after every removal of the dust container.

## **Dos and Don'ts**

### **DO:**

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.


### **DON'T:**

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

## Description of Parts

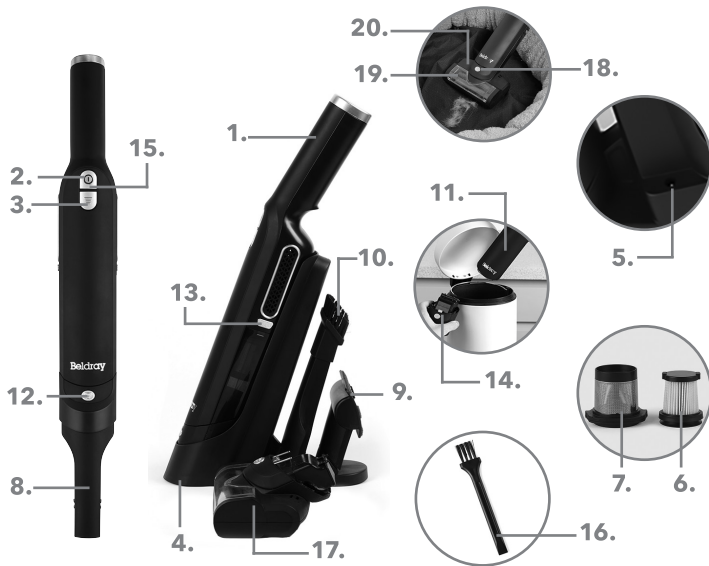

- |                                      |   |
|--------------------------------------|---|
| 1. Revo Pet Plus+ Cordless main unit | 11. Dust container                        |
| 2. Power button                      | 12. Dust container front release button   |
| 3. Boost button                      | 13. Dust container rear release button(s) |
| 4. Charging base                     | 14. Dust container cover                  |
| 5. Charging port                     | 15. Indicator light                       |
| 6. HEPA filter                       | 16. Filter cleaning brush                 |
| 7. Filter cone                       | 17. Pet tool                              |
| 8. Crevice tool                      | 18. Pet tool release button               |
| 9. Upholstery tool                   | 19. Brush bar                             |
| 10. Brush tool                       | 20. Brush bar release tab                 |

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Charging the Revo Pet Plus<sup>+</sup> Cordless

Before first use, the vacuum cleaner must be charged for approx. 4-5 hours. Subsequent charging times will vary dependent on use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4-5 hours to fully recharge.

**STEP 1:** Check that the vacuum cleaner is switched off.

**STEP 2:** Secure the vacuum cleaner into position in the charging base and connect the mains power adaptor to the charging port.

**STEP 3:** Plug the mains power adaptor into the mains power supply; the indicator light will flash red during charging. Once the battery is fully charged, the indicator light will stop flashing and turn blue.

**NOTE:** Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

**WARNING:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

### Using the Revo Pet Plus<sup>+</sup> Cordless

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The upholstery and brush tools are useful for removing dust and dirt from folds in fabrics, curtains and upholstery, as well as from shelves, cupboards and windowsills.

**STEP 1:** Check that the vacuum cleaner is switched off and remove it from the charging base.

**STEP 2:** If required, fit the selected attachment by firmly inserting it into the air inlet. The brush tool does not insert into the air inlet directly; it must first be attached to the crevice tool.

**STEP 3:** Turn on the vacuum cleaner by pressing the power button. Press the boost button to use the maximum power setting; the indicator light will illuminate blue. To use the minimum power setting, press the boost button again; the indicator will illuminate red.

**NOTE:** The indicator light will flash when the battery is running low and needs to be charged.

**WARNING:** Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position.

Clean the HEPA filter regularly to preserve suction.

### Fitting the Pet Tool

**STEP 1:** Check that the vacuum cleaner is switched off and remove it from the charging base.

**STEP 2:** Remove the dust container cap by pushing the dust container front release button and sliding the cap away from the unit.

**STEP 3:** Fit the pet tool by first aligning the metal pins on the pet tool with the inlet holes on the main unit. Slide the pet tool onto the main unit and firmly insert into place.

**WARNING:** Do not use the pet tool on pets.

### Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

**STEP 1:** Hold the vacuum cleaner with the dust container facing upwards. Press the dust container front release button and carefully remove the dust container cover from the dust container.

**STEP 2:** Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

**STEP 3:** Refit the dust container cover by aligning it with the vacuum cleaner main unit and pushing into place until it clicks.

**NOTE:** It is recommended that the dust container is emptied outdoors.

### Cleaning The Pet Tool

The pet tool has a removable brush bar for easy cleaning.

**STEP 1:** Switch off the vacuum cleaner and remove the pet tool by pressing the pet tool release button and pulling it away from the main unit.

**STEP 2:** Slide the brush bar release tab to release the brush bar and lift it out of the floor brush.

**STEP 3:** Remove any built-up dust, debris and hair from the brush bar and floor brush.

**STEP 4:** Replace the brush bar into the floor brush by aligning the tabs and sliding the brush bar release tab to the side, allowing the brush bar to fit into place.

## Cleaning the HEPA Filter and Filter Cone

The HEPA filter can only be accessed when the dust container is removed.

**STEP 1:** After emptying the dust container following the instructions in the section entitled 'Emptying the Dust Container', remove the dust container by pressing both of the dust container rear release buttons at the same time and sliding the dust container away from the main unit.

**STEP 2:** Remove the HEPA filter and filter cone by pulling them away from the dust container. Rotate the HEPA filter in an anticlockwise direction to the unlocked position and then lift away from the filter cone.

**STEP 3:** Shake the HEPA filter until the majority of the dust has been removed, then rinse the filter and filter cone under clean, warm water and allow to dry naturally.

**STEP 4:** Once both are fully dry, place the HEPA filter back into the filter cone and rotate it in a clockwise direction to lock it in place.

**STEP 5:** Refit the filter cone into the dust container. Replace the dust container by pushing it into the main unit, aligning the latch with the indent.

**NOTE:** The HEPA filter and filter cone should be thoroughly cleaned at least once every two weeks.

Do not clean the HEPA filter using detergent or use external heat sources, such as a radiator to dry it.

Always clean the HEPA filter and filter cone with the brush provided and only when the dust container is empty.

**WARNING:** Do not reassemble or use the vacuum cleaner until the HEPA filter and filter cone have fully dried, as this could cause damage.

## Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place. Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

## Troubleshooting

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Secure the vacuum cleaner into the charging base and then switch it on at the mains power supply.
	The vacuum cleaner isn't fully inserted into the charging base.	Check that the vacuum cleaner is fully secured into the charging base.
The suction is poor.	The air inlet or attachment is blocked.	Disconnect the attachment and clear any blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the   Dust Container'.
	The HEPA filter is blocked.	Clean the filter following the instructions in the section entitled 'Cleaning the HEPA filter and filter cone'.
	The battery is running out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Revo Pet Plus+ Cordless'.
The vacuum cleaner has stopped working.	The battery has run out of charge.	The battery has run out of charge.

## Specifications

Product code: BEL01111

Battery: 11.1 V  2200 mAh

Li-ion (included)

Adaptor input: 100-240 V ~ 50/60 Hz 0.4 A

Adaptor output: 14 V  0.5 A 7.0 W

Average active efficiency: 81.38 %

Efficiency at low load (10 %): 71.43 %

No load power consumption: 0.066 W

Dust container capacity: 100 ml



**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.  
Edmund-Rumpler Straße 5, 1149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



\*To be eligible for the extended guarantee, go to **guarantee.upgs.com/beldray** and register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Edmund-Rumpler Straße 5, 1149 Köln. **Germany.**

[www.beldray.com](http://www.beldray.com)



©Beldray Trademark. All rights reserved.

CD170123/MD000000/V1