

est 1872
Beldray®

Our **sturdy,**
practical
& **efficient**
heated airer



HEATED AIRER
WITH WINGS
INSTRUCTION MANUAL



www.beldray.com

Please retain instruction for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if it has been installed in its intended operating position and they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised

This product is not a toy – children should be supervised to ensure that they do not play with the product.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance.

Nominal voltage is still present in this product as long as the product is connected to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Keep furniture, curtains and other flammable material at least 1 metre away from the product.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.
Do not operate the product with wet hands.
Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.
Do not leave the product unattended whilst connected to the mains power supply or when in use.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not use this product for extended periods of time.
Do not leave the product plugged in or operating overnight.
Do not use the product for anything other than its intended use.
Do not use this product outdoors.
Do not attempt to move the product whilst it is in use.
Do not put objects into any of the openings.
Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.
Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents. The product should be used on a stable, heat-resistant surface. The product must not be located immediately below or next to a mains power supply.
Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.
Use of an extension cord with the product is not recommended. This product is intended for domestic use only. It should not be used for commercial purposes.
CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
Hot surface – do not touch the hot section or heating components of the product.
This product is intended only for drying textiles washed in water

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

WARNING: In order to avoid a hazard for very young children, this product should be installed so that the lowest heated rail is at least 600 mm above the floor.

Do not exceed maximum load of 15 kg.

Care and Maintenance


Before attempting any cleaning or maintenance, unplug the clothes airer from the mains power supply and allow it to cool fully.

Clean the clothes airer with a soft, damp, lint-free cloth and dry thoroughly.

Do not immerse the clothes airer in water or any other liquid.

Do not use harsh or abrasive detergents or scourers.

Description of Parts

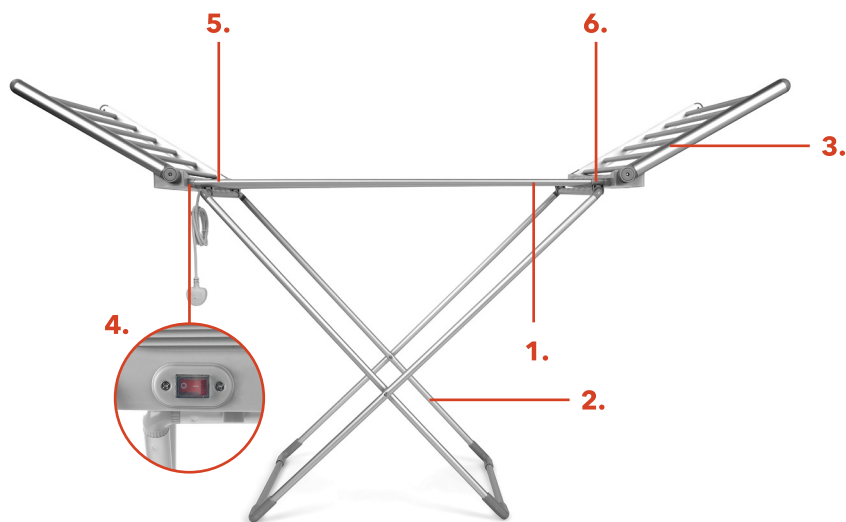

- 1. Electric Clothes Airer main unit
- 2. Foldable stand
- 3. Foldable wings

- 4. On/Off switch
- 5. Inner sliding clips
- 6. Outer sliding clips

Instructions for Use

Assembling the Electric Clothes Airer.

Before plugging the clothes airer into the mains power supply, the clothes airer needs to be assembled.

STEP 1: Rest the clothes airer main unit upside down on the floor with the wings folded underneath, and the inner and outer sliding clips facing upwards.

STEP 2: Identify the wider of the two legs on the foldable stand and fasten this to the outer sliding clips on the main unit.

STEP 3: Fasten the narrower of the two legs onto the inner sliding clips on the main unit; then lift up the clothes airer and flip it the right way up so that it stands on the floor. Open up each of the foldable wings, so that the metal pole closest to the plastic body rests on it.

The clothes airer can now be plugged into the mains power supply and is ready for use.

CAUTION: Take care when assembling the clothes airer, as it is possible for loose clothing or fingers to become trapped and cause injury to the user.

Operating the Electric Clothes Airer

Once the clothes airer has been assembled following the instructions in the section entitled 'Assembling the Electric Clothes Airer', it is ready to use.

STEP 1: Hang up the damp garments as required. As much water as possible should be removed prior to hanging, as this will prevent the clothes airer collapsing under the total weight of the wet fabric.

STEP 2: Once the clothes airer is loaded, plug it in and turn it on using the on/off switch; this will illuminate indicating that the clothes airer is turned on.

STEP 3: Once the garments are dry, switch off the clothes airer by pressing the on/off switch to the off position, the light on the switch will turn off.

STEP 4: Remove the garments with care, as the clothes airer rails may still be hot.

NOTE: For a faster drying time, spin the garments in a washing machine prior to hanging.

WARNING: Do not load the clothes airer beyond 15 kg.

Storage

The clothes airer can be stored in tall, narrow places by simply folding the wings and moving the inner and outer sliding clips to one side; the clothes airer should fold flat.

CAUTION: When folding the clothes airer, keep any loose clothing or fingers clear of the collapsing parts.

Specifications

Product code: EH1156

Input: 220-240 V ~ 50-60 Hz

Output: 230 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

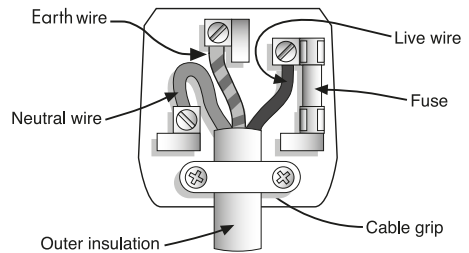

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



*To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/beldray/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.



CD131022/MD000000/V1