

Beldray[®] est 1872

With smart, precise & adaptable
RIGHTemp technology



RIGHTemp STEAM STATION INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



Caution: The appliance emits very hot steam; always exercise extreme caution during use.



Hot surface – do not touch the hot section or heating components of the appliance.



Warning: Danger of scalding.

Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply and allow it to cool sufficiently.

STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If garments have burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Getting Started

Remove the iron from the box.

Remove any packaging from the iron.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Right Temp Steam Station

Measuring Cup

Instruction manual

Features

3000 W power

1.5 L water tank

Ceramic soleplate

Variable steam control

LED display

Auto shut-off

Self-clean function

1.9 m power cord

Includes measuring cup

Description of Parts



1. Right temp Steam Station handheld unit
2. On/off button
3. Programme button
4. Self Clean button
5. Cleaning indicator
6. Low water indicator
7. High setting indicator
8. Eco mode indicator
9. Auto shut-off indicator

10. Steam control trigger
11. Ceramic soleplate
12. Safety lock
13. Cord guard
14. Cord storage
15. Base unit
16. Water tank
17. Easy-fill cap

Instructions for Use

Before First Use

Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.

STEP 1: Plug in and switch on the iron at the mains power supply, press the on/off button and then place the iron onto the cloth. Press the steam control trigger for approx. 15-20 seconds.

STEP 2: Repeat this 2-3 times, waiting approx. 10 seconds in-between each burst; this will remove any impurities from the ceramic soleplate.

Do not immerse the iron in water or any other liquid.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Fit the handheld unit to the base unit and lock into position using the safety lock.

STEP 3: Fill the measuring jug with water, without exceeding the max. fill mark.

Carefully pour the contents of the measuring jug into the water tank via the easy-fill cap.

STEP 4: Close the easy-fill cap.

Caution: Do not let the iron run dry, if this occurs, the low water indicator will flash and the handheld unit will switch off, refill the water tank and continue ironing.

Do not overfill the water tank.

Warning: Do not fill the water tank with hot water.

Never add aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the Right Temp Steam Station

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: Press the on/off button to switch the iron on. The iron does not need the temperature changing, as the temperature is optimal for ironing all fabric types.

STEP 4: Select the desired steam setting to be used by pressing the programme button. The high setting provides the most steam, whilst the eco setting provides less steam and allows ironing for longer periods.

STEP 5: Once the temperature indicator light has stopped flashing, hold the steam control trigger to iron with steam.

STEP 6: After use, press the off button to switch off the iron. Place the handheld unit onto the base unit and lock into position using the steam lock. Switch off the iron at the mains power supply and unplug the iron. Allow to cool thoroughly.

Note: Allow the iron to fully heat up before pressing the steam control trigger; not doing so may cause water to leak from the soleplate.

To iron without steam, select either steam setting and do not press the steam control trigger.

Rest the handheld unit on the base unit when not in use.

Caution: The cord may become hot during use; do not touch it.

Warning: The iron will be at an optimal temperature for all clothing, however not all fabrics are able to be steamed, check the clothing's care label and try steaming a small area if unsure.

Vertical Steam Ironing

STEP 1: Hang up the item to be vertically steamed.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the iron at the mains power supply.

STEP 4: Turn on the iron by pressing the on/off button.

STEP 5: Use the programme button to select the high steam setting.

STEP 6: Hold the iron approx. 20 cm away from the item and press the steam control trigger.

Note: If the temperature of the iron drops, water will drip from the soleplate. If this occurs, release the steam control trigger and allow the temperature of the iron to rise for approx. 30 seconds.

Steam Burst Function

The iron is fitted with a steam burst function to create a large shot of steam quickly.

STEP 1: Turn on the iron and allow to heat up following the instructions in the section titled 'Ironing with Steam'.

STEP 2: Once the iron has reached the required temperature, press the steam control trigger twice in quick succession. This will create a powerful 2-second steam burst.

Note: Make sure that the iron has enough water and the temperature indicator light has stopped flashing to avoid water dripping when using the steam burst function.

Caution: The burst will be powerful and the steam will be very hot, take care to avoid scalding.

Boil-dry Function

If the iron runs out of water when using steam, the low water indicator will flash and the iron will switch off. Switch off and unplug the iron from the mains power supply and fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

Auto Shut-off Function

When the iron is stationary for more than 10 minutes, it will beep 6 times before automatically switching off. To prevent it from doing so, press the steam trigger.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate. It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

STEP 1: Fill the water tank to the max. fill mark, following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the iron at the mains power supply within reach of a sink.

STEP 3: Press the on/off button to turn the iron on.

STEP 4: Carefully hold the iron over a sink, making sure that the power supply cord and plug are kept away from the ceramic soleplate and remain dry.

STEP 5: Press the clean button until the cleaning indicator flashes. Hot water and steam will expel from the steam holes along with any impurities. After a few minutes the iron will beep 3 times showing the iron has finished self-cleaning.

STEP 6: Set the iron unit down onto the base unit and then turn off the iron using the on/off button. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

STEP 7: When the iron has sufficiently cooled, wipe it with a soft, damp cloth.

STEP 8: Plug the iron into the mains power supply and switch on. Turn the iron on using the on/off button.

STEP 9: Select the high steam setting using the programme button.

STEP 10: Once the temperature indicator light has stopped flashing, use the iron on an old piece of fabric to remove any excess water and impurity build-up from in the steam holes.

Note: Water may be ejected from the steam holes whilst the iron is heating up.

Caution: Never use the self-clean function whilst the iron is in use; only press it when the iron is safely held over a sink.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage. Position the iron on the rubber support on the base unit; this will help to prevent the ceramic soleplate from getting scratched.

Lock the iron into place using the safety lock when storing.

Troubleshooting

Warning: To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

Problem	Possible Cause	Possible Solution
The iron will not heat up.	The iron is not connected to the mains power supply. The iron is not switched on. The fuse in the mains plug has blown.	Plug in and switch on the iron at the mains power supply. Plug in and switch on the iron at the mains power supply. Press the on/off button to switch the iron on. Replace the fuse on the plug with one of the same rating.
No steam is being emitted from the iron.	There is insufficient water in the water tank. The pump is still drawing water from the water tank.	Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'. Press and hold the steam trigger a while longer to allow the water to pump into the iron; this should take approx. 1 minute.
Excess water is dripping from the ceramic soleplate.	There is condensation inside the ceramic soleplate.	Allow the iron to heat up fully before use.

The iron has switched off.	There is no water in the water tank. The auto shut-off function has activated.	Follow the instructions in the section entitled 'Boil-dry Function'. Follow the instructions in the section entitled 'Auto Shut-off Function'.
----------------------------	---	---

Specifications

Product code: BEL0905
Input: 220-240 V ~ 50/60 Hz
Output: 3000 W
Water tank capacity: 1.5 L

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

 
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

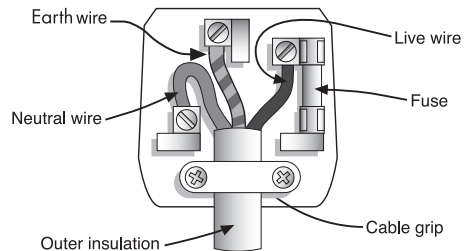

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD030619/MD000000/V1

