

Beldray[®]

Est 1872

Nobody Does It Better

Mini Convector Heater

Instruction Manual



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not cover this appliance.

Do not block the air intake of the appliance; place in an open, well-ventilated space.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

The appliance should be used on a stable, heat resistant surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use, any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid overheating, do not cover the appliance.

Warning: Normal voltage is still present in this appliance as long as the appliance is connected to the electrical source. Always unplug the appliance when not in use.

Caution: Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Caution: In order to avoid a hazard due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, nor should it be connected to a circuit that is regularly switched on and off by the utility.



Caution: Hot surface. Do not touch the hot section or heating components of the appliance.



This appliance is in the 'On' position when plugged into the mains power supply. The appliance and heat indicator light will cycle on and off during operation in order to maintain the selected temperature or anti-frost function.

When the appliance is set to the anti-frost function, it will automatically switch on when the temperature in the room drops below 10 degrees.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Mini Convector Heater

Screws

Wall plug

Mounting bracket

Instruction manual

Features

450 W


Wall mountable or floor standing

Overheat protection

Adjustable thermostat

145 cm cable

Description of Parts

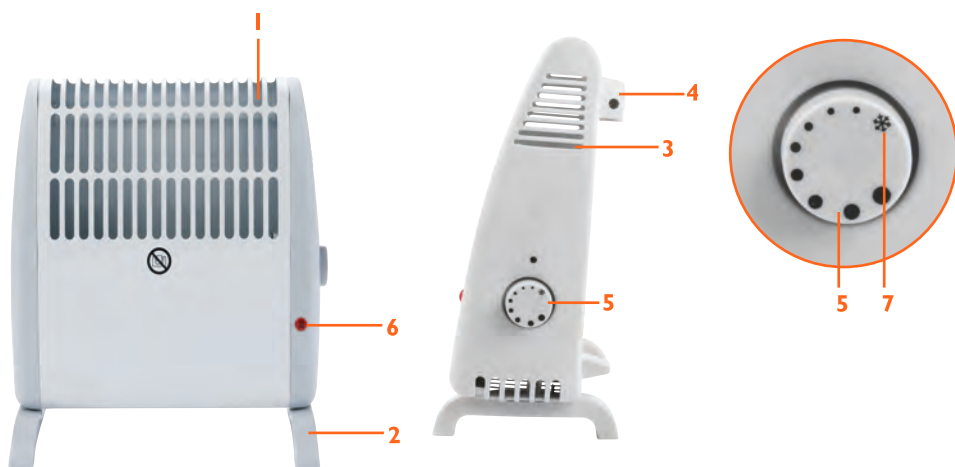

1. Hot air outlets
2. Removable feet
3. Air intake
4. Mounting bracket

5. Adjustable temperature control dial
6. Heat indicator light
7. Anti-frost function

Instructions for Use

Assembling the Mini Convector Heater as a Freestanding Unit

Before using the Mini Convector Heater for the first time, the feet must be fitted to the base using the screws provided. Ensure that the feet elevate the Mini Convector Heater at least 30 mm from the floor.

Once the feet have been attached, place the Mini Convector Heater on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials.

Ensure that the air intake on the base of the Mini Convector Heater is not blocked. It is recommended that the Mini Convector Heater be placed a minimum of 100 cm away from objects above it, 120 cm away from furniture and other flammable materials and lifted at least 30 mm from the floor.

Note: When using Mini Convector Heater for the first time, a slight odour may be emitted. This is normal and will subside after a few uses.

Assembling the Mini Convector Heater as a Wall Mounted Unit

Remove the mounting bracket from the Mini Convector Heater by unscrewing the nuts from the back of the appliance.

Using a pencil, mark holes on the wall indicating the position for the Mini Convector Heater to be mounted. Check that the marks are level, using a spirit level if necessary.

Drill holes where the marks have been drawn, then fix the bracket to the wall using wall plugs (not supplied). Screw tightly to the wall.

Attach the Mini Convector Heater to the mounting bracket, then lock it by securing it with the bracket nuts.

Note: When using the Mini Convector Heater for the first time, a slight odour may be emitted. This is normal and will subside after a few uses.

Connect the Mini Convector Heater to the mains power supply and it is ready for use.

Using the Mini Convector Heater

Plug the Mini Convector Heater into the mains power supply and turn it on.

Use the adjustable temperature control dial to adjust the temperature. The heat indicator light will illuminate to show that it is heating up.

The Mini Convector Heater automatically cycles on and off during operation, in order to maintain the correct temperature.

The Mini Convector Heater is also fitted with a thermal safety cut-out device; if it gets too hot, it will automatically switch off. Once sufficiently cool, it will turn on again.

This Mini Convector Heater has an anti-frost function. When connected to the mains power supply, if the adjustable temperature control dial is pointing to the 'frost' symbol and the room temperature reaches 10 °C, it will automatically operate.

Cleaning and Maintenance

Before attempting any cleaning or maintenance, unplug the Mini Convactor Heater from the mains power supply and allow it to cool sufficiently.

Clean the exterior surface of the Mini Convactor Heater with a soft, damp cloth and allow to dry thoroughly.

Do not allow water to get into the Mini Convactor Heater.

Never immerse the Mini Convactor Heater in water or any other liquid.

Clean the Mini Convactor Heater frequently to remove any dust that gathers when left unused for long periods of time.

Storage

Ensure that the Mini Convactor Heater is cool, clean and dry.

Store the Mini Convactor Heater in a cool, dry place.

Specification

Product Code: EH0800

Operating Voltage: 220–240 V ~ 50 Hz

Output: 450 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL wire and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

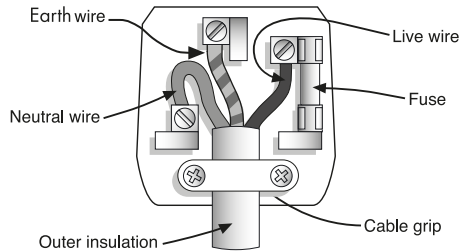

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



