

Beldray

Est. 1872

Nobody Does It Better

7 Fin Oil Radiator

Instruction Manual



THE **SCIENCE**
BEHIND HEAT

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

Safety Instructions

Do not use the appliance until fully assembled as described in this manual.

Check that the voltage indicated on the rating plate corresponds to your local network before plugging the appliance into the mains power supply.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Do not leave the appliance unattended.

Never immerse the appliance in water or any other liquid.

Do not let the appliance come into contact with water; avoid placing the appliance in a room with increased moistness.

Do not operate the appliance if it has been dropped or damaged in any way.

If the supply cord or plug is damaged, a qualified engineer must replace it in order to avoid a hazard.

This appliance contains no user serviceable parts. A qualified engineer should carry out all repairs.

Improper repairs may place the user at risk of harm.

Always unplug the appliance from the mains power supply when it is not in use and before any cleaning or maintenance.

Unplug the appliance from the mains power supply using the plug; never remove it using the cord.

Never use the appliance with wet hands, especially when plugging it into the mains power supply.

Place the appliance in the upright position on the floor, at least 90cm away from the wall and any furniture.

Do not run the mains cable under carpets, rugs, etc.

Keep the appliance away from flammable objects.

Do not touch the appliance when it is in use, as it gets very hot. Always use the handle when moving.

Do not use the appliance outdoors.

This appliance is for domestic use only and should not be used for commercial purposes.

Description of Parts



Instructions for Use

Assembly

Do not operate the oil filled radiator without the castors attached.

Operate the oil filled radiator in the upright position, with the castors firmly placed on the floor. Place the oil filled radiator body upside down on a scratch-free surface, ensuring that it is stable and will not fall.

Unscrew the wing nuts from the U-shaped bolt provided, attach the U-shaped bolt to the U-facing flange between first and second fins (near the front cover).

To attach the castor mounting plate to the oil filled radiator body, insert the threaded ends of the U-shaped bolt into the holes on the castor mounting plate.

Screw the wing nuts back to the U-shaped bolt and fasten securely.

Note: Do not over-tighten as this may damage the oil filled radiator flange.

Unscrew the spherical nut from the castor, align the shaft to the hole of the castor mounting plate, insert and screw on the spherical nut.

Repeat these steps for securing the rear castors.

Note: The rear castors must be mounted between the end two fins.

Using the Oil Radiator

Ensure that the oil filled radiator is placed on a flat, stable surface.

Set all of the controls to the Off position and plug the oil filled radiator into the mains power supply.

Turn the thermostat knob clockwise to the Max. position and switch on the oil filled radiator to the desired heat, as follows:

Switch I – Low heat

Switch II – Medium heat

Switch I + II – High heat

When the room reaches the desired temperature, slowly turn the thermostat knob anticlockwise until the power light goes out. The thermostat can now be left at this setting. As soon as the room temperature has dropped below the set temperature, the radiator will switch on automatically until the set temperature is reached again.

To change the room temperature setting, turn the thermostat knob clockwise to raise the temperature and anticlockwise to lower it.

The oil filled radiator has an overheat protection system that turns it off when it gets too hot.

To turn the oil filled radiator off, turn all of the controls to Off and unplug the oil filled radiator from the mains power supply.

Using the Timer

To set the timer, turn it clockwise.

Never turn it anticlockwise as this may break it.

The small switch on the timer has two functions:

I – Radiator is always on

⊕ – Timer function is on

Turn the timer function on.

There are 96 small plastic pins on the timer, each correspond to 15 minute intervals.

Push the pins outwards according to the time you want the heater to turn on, then push the pins inwards corresponding to the time you want the oil filled radiator to turn off.

Do not use the timer function unattended.

The oil filled radiator will not operate if the timer is set to the ⊕ position with the pins not activated according to the times required.

If the oil filled radiator loses its electrical supply, the timer should be reset when switched on again.

The power light will illuminate when the timer is set to the On position or when the timing function is activated.

Cleaning and Maintenance

The oil filled radiator should be cleaned regularly to remove any dust on the surface of the fins. Before attempting any cleaning or maintenance, ensure that the oil filled radiator has completely cooled and unplug it from the mains power supply.

Wipe down the oil filled radiator with a soft, damp cloth and dry thoroughly. Do not use harsh abrasives or detergents.

Do not scrape the surface of the fins with sharp or hard tools, as this will damage the paint coating and could result in rusting.

Storage

Before storing the oil radiator, ensure that it has completely cooled.

To store, wind the cord around the bobbin on the oil filled radiator below the controls.

Store the oil filled radiator in cool, dry and clean place.

Specification

Model: EH0885

Voltage: 220-240Vac 50Hz

Power: 1500W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)


Brown Live (L)

Green/Yellow Earth ()

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

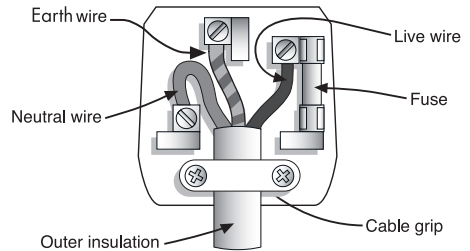

UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



