

Beldray[®]

Est 1872

Nobody Does It Better

Ceramic PTC Heater

Instruction Manual



THE **SCIENCE**
BEHIND HEAT



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not cover this appliance.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

The appliance should be used on a stable, heat resistant surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use and before performing any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid overheating, do not cover the appliance.

Warning: Do not use this appliance in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Warning: Normal voltage is still present in this appliance as long as the

appliance is connected to the electrical source. Always unplug the appliance when not in use.

Warning: In order to avoid a hazard, due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit this is regularly switched on and off by the utility.

Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Caution: Hot surface. Do not touch the hot section or heating components of the appliance.



Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside of the box and either store or dispose of safely.

In the Box

PTC Ceramic Heater

Instruction manual

Features

1500 W

Two heat settings: 750 W/1500 W

Cool air function

Overheat protection

Thermal cut-out device

Portable with carry handle

Tip over switch

Adjustable thermostat

Power indicator light

Description of Parts



1. Main body
2. Carry handle
3. Adjustable thermostat
4. Power indicator light

5. Heat control dial
6. Lattice mesh guard
7. Rubber feet

Instructions for Use

Before First Use

When using this Ceramic PTC Heater for the first time, a slight odour may be emitted. This is normal and will subside after a few uses.

Place the Ceramic PTC Heater on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials. Check that the air intake on the rear of the Ceramic PTC Heater is not blocked.

Using the Ceramic PTC Heater

Plug the Ceramic PTC Heater into the mains power supply.

To operate the Ceramic PTC Heater, first turn the adjustable thermostat to the maximum setting. Using the heat control dial, select the desired heat output. The first position (I) will operate the Ceramic PTC Heater on a low heat setting (750 W) and the second position (II) will operate the Ceramic PTC Heater on a high heat setting (1500 W).

When using the warm or hot heat settings and after the Ceramic PTC Heater has heated up to the desired temperature, the adjustable thermostat can be used to finely regulate the temperature. Turn the adjustable thermostat clockwise to increase the heat output and anticlockwise to reduce it.

To use the cool air function, turn the heat control dial to the cool setting, indicated by the fan symbol.

To turn off the Ceramic PTC Heater, turn the heat control dial to the 'Off' position (O) and turn the adjustable thermostat to the minimum setting.

Thermal Cut-Out Device

This Ceramic PTC Heater is fitted with a thermal safety cut-out system, built-in to prevent it overheating. Should the Ceramic PTC Heater start to overheat, the thermal safety cut-out system will automatically operate and the Ceramic PTC Heater will switch off. If this occurs, unplug the Ceramic PTC Heater from the mains power supply and allow it to cool sufficiently before switching it back on.

The Ceramic PTC Heater will only resume normal operation when it has been switched back on manually.

Stability Safety Cut-Out

This Ceramic PTC Heater is fitted with a stability safety cut-out. This automatically switches off the Ceramic PTC Heater if it is not in the upright position. Once the Ceramic PTC Heater has been correctly placed in an upright position, it will resume normal operation.

Cleaning and Maintenance

Always unplug the Ceramic PTC Heater from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the exterior of the Ceramic PTC Heater with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the Ceramic PTC Heater.

Do not immerse the Ceramic PTC Heater in water or any other liquid.

Storage

Ensure that the Ceramic PTC Heater is completely cool.

Store in a cool, dry place.

Specification

Product Code: EH0949

Power supply: 220–240 V ~ 50Hz

Power: 1500 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

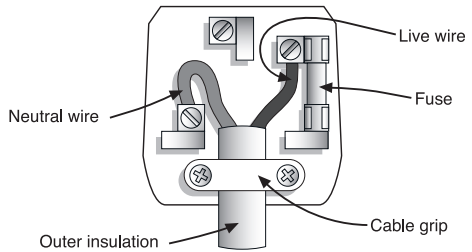

UP Global Sourcing,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



