

Beldray^{Est. 1872}

Nobody Does It Better

Mini USB Tower Fan Instruction Manual



THE **SCIENCE**
BEHIND COOL

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

In the Box

Mini USB Tower Fan

USB Cable

Instruction Manual

Features

3 adjustable cooling speeds

L.E.D function

USB powered for desktop use

4W

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. Only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Always use the appliance on a flat, stable surface.

If the USB cable is broken, do not use and ensure that a qualified electrician fixes it.

Keep the USB cable away from heat and sharp edges that could cause damage.

Keep the USB cable away from children.

Keep the unit free from dust, lint etc.

Keep the appliance away from heat sources or other heat emitting appliances, direct sunlight, humidity, water or any other liquid.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not operate the unit if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the appliance after a malfunction or if it has been dropped or damaged in any way.

Do not leave the appliance unattended whilst connected to the computer.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use the appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Always unplug the appliance after use and before any cleaning or user maintenance.

Warning: Do not cover this appliance.

Description of Parts



Instructions for Use

When setting up the Mini USB Tower Fan, ensure that there is sufficient ventilation. Place the fan on a flat, stable surface, plug the USB cable jack into the Mini USB Tower Fan and insert the USB connection into a USB port.

To turn on the Mini USB Tower Fan, press the 'On/Off' button and then press the 'Speed' button; this will activate the fan. To adjust the cooling speed, press the 'Speed' button repeatedly. The selected cooling speed will be illuminated on the indicator panel, 'I' being the slowest speed and 'III' being the highest.

The LED light can be turned on by pressing the LED button.

To deactivate the fan, press the ON/OFF button.

Note: When using the Mini USB Tower Fan for the first time, a slight odour may be emitted.

This is normal and will soon subside.

Caution: Do not cover the fan head.

Care and Maintenance

Always disconnect the Mini USB Tower Fan and wait until the fan has stopped completely before performing any cleaning or user maintenance.

Clean the Mini USB Tower Fan with a soft, damp, lint free cloth and dry thoroughly.

Do not immerse the Mini USB Tower Fan in water or any other liquid.

Do not use abrasive cleaning solvents or scouring pads to clean the Mini USB Tower Fan as these can damage the surface.

Storage

Before storing, ensure that the Mini USB Tower Fan is cool, clean and dry.

Specification

Input: 5V DC

Output: 4W MAX.

UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



