

Beldray[®]

Est 1872

Nobody Does It Better

Marseille Panoramic Electric Stove

Instruction Manual



THE **SCIENCE**
BEHIND HEAT



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this appliance for extended periods of time.

Do not use the appliance for anything other than its intended use.

Do not cover this appliance.

Do not block the air intake of the appliance; place in an open, well ventilated space.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

Do not lift the appliance by the front panel.

The appliance should be used on a stable, heat resistant surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use, any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid overheating, do not cover the appliance.

Warning: Do not use this appliance in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Warning: Normal voltage is still present in this appliance as long as the appliance is connected to the electrical source. Always unplug the appliance when not in use.

Warning: In order to avoid a hazard, due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit this is regularly switched on and off by the utility.

Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Caution: Hot surface. Do not touch the hot section or heating components of the appliance.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Electric Stove

4 Legs

8 Screws

Instruction Manual

Features

2000 W heater

3 side viewing

Adjustable thermostat

Thermal cut-out device

Black cast effect finish

 
Free-standing

Log flame effect

'Flame without heat' setting

LED flame effect

Description of Parts

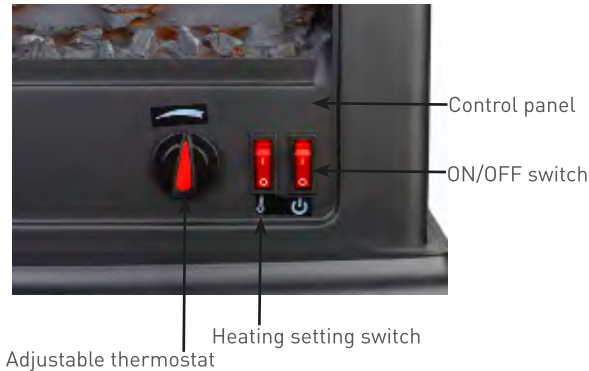

Instruction for use

Before First Use

When using this Marseille Panoramic Electric Stove for the first time, a slight odour may be emitted. This is normal and will subside after a few uses.

Place the Marseille Panoramic Electric Stove on a flat, stable, heat-resistant surface, at least 1 metre away from furniture, curtains or any other flammable materials.

If placing the stove in an alcove, make sure that there is at least 150 mm of space on all sides, to ensure good air circulation.

The stove must not be located over a mains power socket. The mains power socket must always be accessible in order to disconnect the stove from the mains power supply for cleaning, maintenance or when replacing a bulb.

Check that the fan air vent is not blocked. Keep hearth rugs and other soft furnishings away from the front of the stove. They could obstruct the free flow of hot air from the fan and damage both the soft furnishings and the stove.

Caution: The Electric Stove should be free from noticeable vibrations when it is in operation; vibrations may cause damage to the appliance. Ensure that the Electric Stove is turned off before moving or attempting any cleaning.

 
 
Assembling the Marseille Panoramic Electric Stove

Before assembling the Marseille Panoramic Electric Stove, make sure that you have read through all of the instructions and that you have all of the parts necessary to complete the assembly.

Note: A handy tip is to store all the small parts in a container.

Tools required: Cross head screwdriver.


Lay the main body upside down on a padded surface so that the underside of the stove is accessible. Attach the leg to the stove by inserting the tab on the top of the leg into the corresponding slot on the bottom of the stove. Insert two screws into the predrilled holes and tighten securely using a screwdriver. Repeat for the remaining three legs.

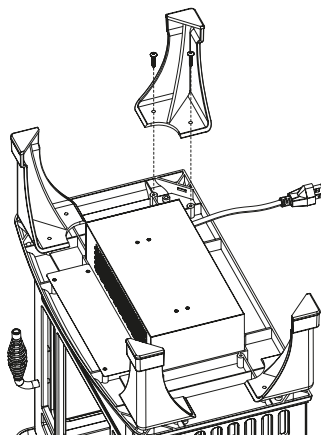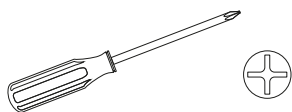


Using the Marseille Panoramic Electric Stove

Step 1: Plug the Marseille Panoramic Electric Stove into the mains power supply.

Step 2: To turn on the flame effect simply press the ON/OFF switch  located behind the glass door.



Step 3: To turn on the heating setting, turn the adjustable thermostat clockwise to the maximum heating setting. Switch on the heating setting by pressing the  button.

Step 4: To regulate the temperature, use the adjustable thermostat. To reduce the room temperature, turn the adjustable thermostat anticlockwise. To increase the room temperature, rotate the adjustable thermostat clockwise.

Note: The Marseille Panoramic Electric Stove will only heat up if the 'ON/OFF' switch  is in the 'ON' position.

Control Panel

The control panel is located on the front of the Marseille Panoramic Electric Stove underneath a cover. The control panel features the following controls:

Control	Function
Adjustable thermostat.	Can be used to control the room temperature.
 Heating setting switch.	Can be used to operate the heating setting, or left off to use the 'flame without heat' setting.
 'ON/OFF' switch.	Can be used to operate the 'flame without heat' setting. Note: the 'ON/OFF' switch must be 'ON' to use any other functions.

Thermal Cut-Out Device

The Marseille Panoramic Electric Stove is fitted with a thermal safety cut-out device, built-in to prevent the appliance overheating. Should the Marseille Panoramic Electric Stove begin to overheat, the thermal safety cut-out device will automatically activate and the stove will switch off. When the thermal safety cut-out device activates, the Marseille Panoramic Electric Stove should be unplugged from the mains power supply and left to cool for approximately 15 minutes. The Marseille Panoramic Electric Stove has cooled sufficiently, the appliance can be reconnected to the mains power supply and will resume normal operation.

Note: Before turning the Marseille Panoramic Electric Stove back on, check that there is nothing obstructing the airflow or blocking the air intake into the appliance.

Care and Maintenance

Always unplug the Marseille Panoramic Electric Stove from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance.

Wipe the exterior of the Marseille Panoramic Electric Stove with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the Marseille Panoramic Electric Stove.

Do not use polishes or abrasive materials to clean the glass of the Marseille Panoramic Electric Stove.

Do not immerse the Marseille Panoramic Electric Stove in water or any other liquid

Troubleshooting

Problem	Cause	Solution
No heat or light is being emitted from the Marseille Panoramic Electric Stove.	There may be a problem with the power supply to the Marseille Panoramic Electric Stove.	Check the mains power supply by plugging in a working appliance. If the mains power supply is functional and the cord or plug of the Marseille Panoramic Electric Stove is suspected to be faulty, have it checked by a qualified electrician.
No heat is being emitted from the Marseille Panoramic Electric Stove.	<p>The adjustable thermostat is not set to above the current room temperature.</p> <p>The power button has not been switched on.</p> <p>The thermal cut-out device has operated.</p>	<p>Check that the thermostat on the stove is set above the current room temperature.</p> <p>Check that the power switch has been switched on and that the that the heat setting switch is switched on too.</p> <p>Refer to the "thermal cut-out device" section.</p>

Specification

Product Code: EH0982

Bulb: Non Replaceable LEDs

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 
If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

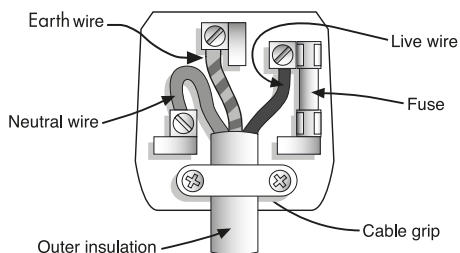

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



