 


Beldray[®]

Est 1872

Nobody Does It Better

Inset Electric Fire Instruction Manual

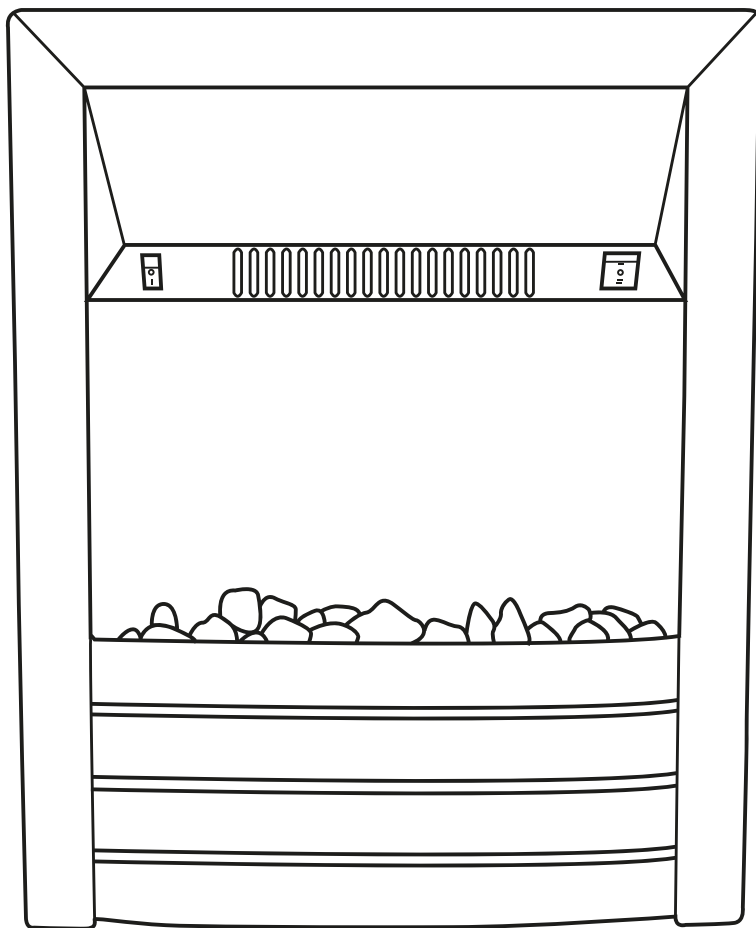

THE **SCIENCE**
BEHIND HEAT



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this appliance for extended periods of time.

Do not use the appliance for anything other than its intended use.

Do not cover this appliance.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

The appliance should be used on a stable, heat resistant surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid overheating, do not cover the appliance.

Warning: This appliance is not equipped with a device to control the room's temperature. Do not use this appliance in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Warning: Normal voltage is still present in this appliance as long as the appliance is connected to the electrical source. Always unplug the appliance when not in use.

Warning: In order to avoid a hazard, due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit this is regularly switched on and off by the utility.

Caution: Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Caution: Hot surface. Do not touch the hot section or heating components of the appliance.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

In the Box

Inset Electric Fire main unit

Removable frame

Coal effect pieces

Fixing pack

Instruction manual

Features

2000 W

 
2 heat settings 1000 W/2000 W

Thermal cut-out device

Overheat protection

100 % LED flame effect

Description of Parts

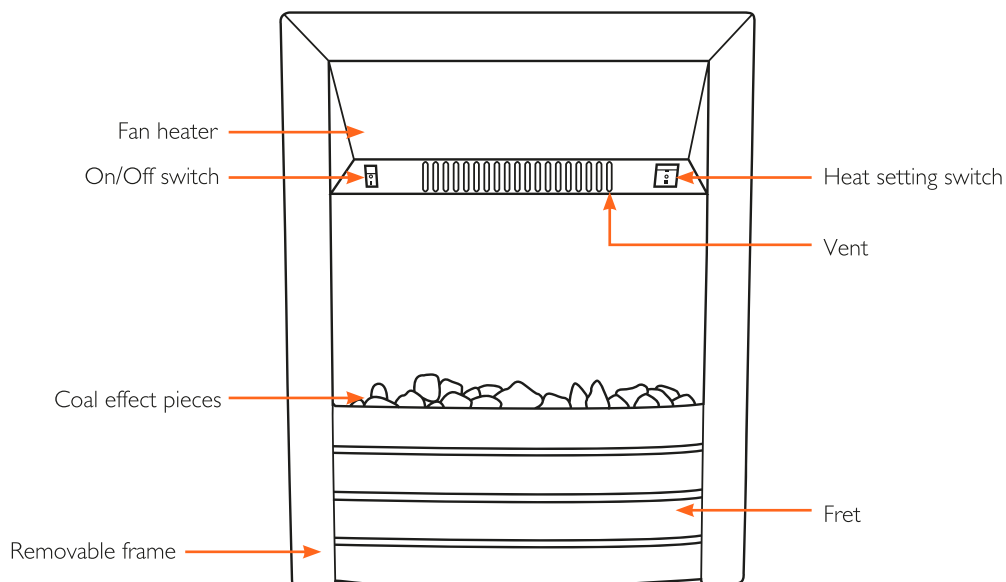

Instructions for Use

Advice Before Fitting

Please retain all of the packaging until you have checked and counted all of the parts and the contents of the fixing pack against the parts list (In the Box).

The fixing pack contains small items, which should be kept away from young children.

It is suggested that all of the fixing pack contents are placed into a container, to reduce the risk of losing any small pieces.

Installation Guide

Do not connect the Inset Electric Fire main unit to the mains power supply until all of the instructions have been read, fully understood and the Inset Electric Fire has been properly and securely fitted.


The minimum safe distances must be observed.

Do not lift the Inset Electric Fire by the removable frame.

Note: The Inset Electric Fire is suitable for installation into a location that has an opening size within the guidelines shown below:

Dimension	Minimum	Maximum
Width	390 mm	483 mm
Height	555 mm	590 mm
Depth	110 mm	125 mm

 The minimum clearance required to allow for sufficient ventilation is shown below:

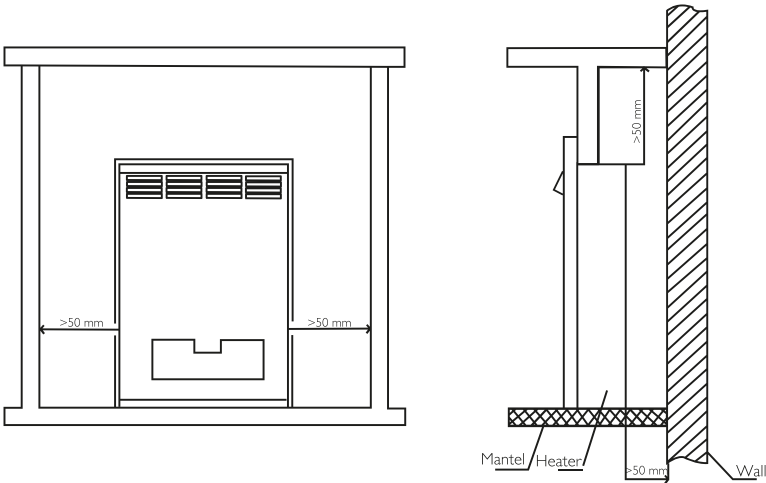

Freestanding

The Inset Electric Fire can be placed in any location as a free-standing unit, as long as the Inset Electric Fire is kept approximately 1 m clear from any combustible objects.

Securing the Inset Electric Fire to a Fire Chamber Based on Minimum Dimensions

 
STEP 1: Ensure that the Inset Electric Fire is switched off and unplugged from the mains power supply.

STEP 2: Remove the four screws from the back of the removable fascia and then pull it up and away from the Inset Electric Fire main unit.

STEP 3: Using a pencil, mark the centre of the opening in which the Inset Electric Fire will fit. From this point, measure 215.5 mm to the left and then again to the right, marking the points. Measure 560 mm from the floor up and mark this final point.

STEP 4: Drill where the holes have been marked and insert the two screws, leaving a 2 mm gap.

STEP 5: Carefully lift the Inset Electric Fire, hook it onto the screws and lower it into position.

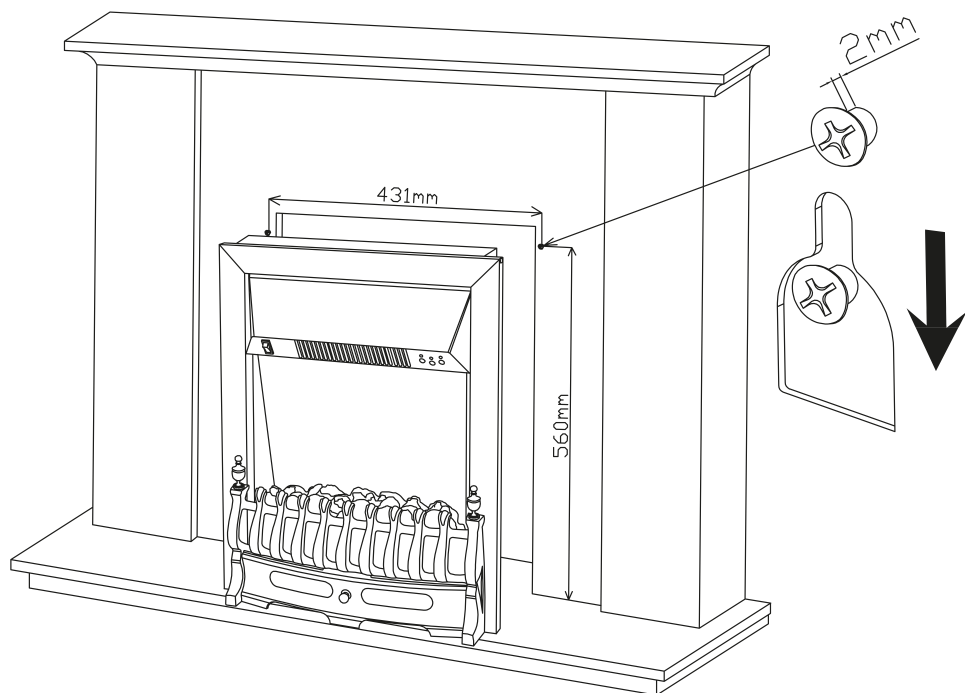

Using the Inset Electric Fire

The Inset Electric Fire is operated using two switches both of which are located on the canopy.

	Symbol shown	Operation
On/Off switch	○	○ = Off, = On (and flame)
Heat setting switch	– = ○	1000 W Heat Setting 2000 W Heat Setting No heat

STEP 1: Ensure that the Inset Electric Fire is plugged in and switched on at the mains power supply.

STEP 2: Switch on the Inset Electric Fire using the 'On/Off' switch located on the left hand side of the fan heater. This will also turn on the flame effect.

STEP 3: Select the desired heat output by flicking the heat setting switch located on the right hand side of the fan heater, to the relevant position.

To operate the Inset Electric Fire on a low heat setting (1000 W) flick the heat setting switch to '–'. To operate the Inset Electric Fire on a high heat setting (2000 W) flick the heat setting switch to the '=' position.

STEP 4: The Inset Electric Fire can also be operated with just the flame setting; to do so flick the heat setting switch to '○'.

STEP 5: Switch off the Inset Electric Fire using the 'On/Off' switch located on the left hand side of the fan heater.

Note: The Inset Electric Fire must be switched on for any of the heat settings to work.

Thermal Cut-Out Device

The Inset Electric Fire is fitted with a thermal safety cut-out device, built-in to prevent it from overheating. Should the Inset Electric Fire start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

Switch off the Inset Electric Fire using the 'On/Off' switch located on the left hand side of the fan heater.

Ensure that the Inset Electric Fire is unplugged from the mains power supply and allow it to cool for approximately 15 minutes.

Clear any blockages present on the vent, being careful not to damage the Inset Electric Fire.

Plug in and switch on the Inset Electric Fire at the mains power supply.

Trouble Shooting

Symptom	Solution
The Inset Electric Fire is not operating.	Ensure that the Inset Electric Fire is plugged in and switched on at the mains power supply. The thermal safety cut-off may have been activated. To check, unplug the Inset Electric Fire from the mains power supply and allow it to cool for approximately 15 minutes. Plug in and switch on the Inset Electric Fire at the mains power supply before trying again. Unplug the Inset Electric Fire from the mains power supply and check the plug to see if the fuse needs replacing.

Care and Maintenance

Always unplug the Inset Electric Fire from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance.
Wipe the exterior of the Inset Electric Fire with a soft, damp cloth and dry thoroughly.
Do not use harsh or abrasive cleaning detergents or scourers as this may cause damage.

Specification

Supply: 220–240 V~ 50 Hz
Rated Power: 1000, 2000 W
Lighting: LED (non-replaceable)

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

 
The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

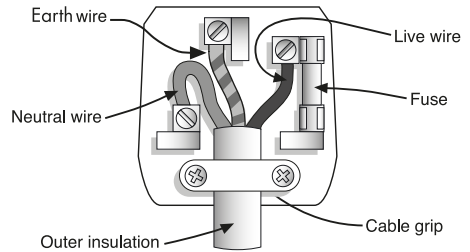

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



