

Beldray[®]

Est. 1872

Nobody Does It Better

Premium 16 Inch Gun Metal Pedestal Fan Instruction Manual



THE SCIENCE
BEHIND COOL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Getting Started

Remove the product from the box

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

16 inch Gun Metal Pedestal Fan

Front grill

Rear grill

4 grill-locking screws

Grill screw with nut

Fan blade unit

Fan blade screw

Motor assembly

Motor assembly fixing screw

Adjustable base pole

Base

Base support weight

Base-locking screw

Tilting head set screw

Height adjustment screw

Washer

Instruction manual

Features

Adjustable tilting head

4 aluminium blades

3 speed settings

Oscillating function

 
Height adjustable up to 1.4 m

50 W power

Fan blade diameter: 40 cm approx.

Input: 220–240 V, 50 HZ

Description of Parts

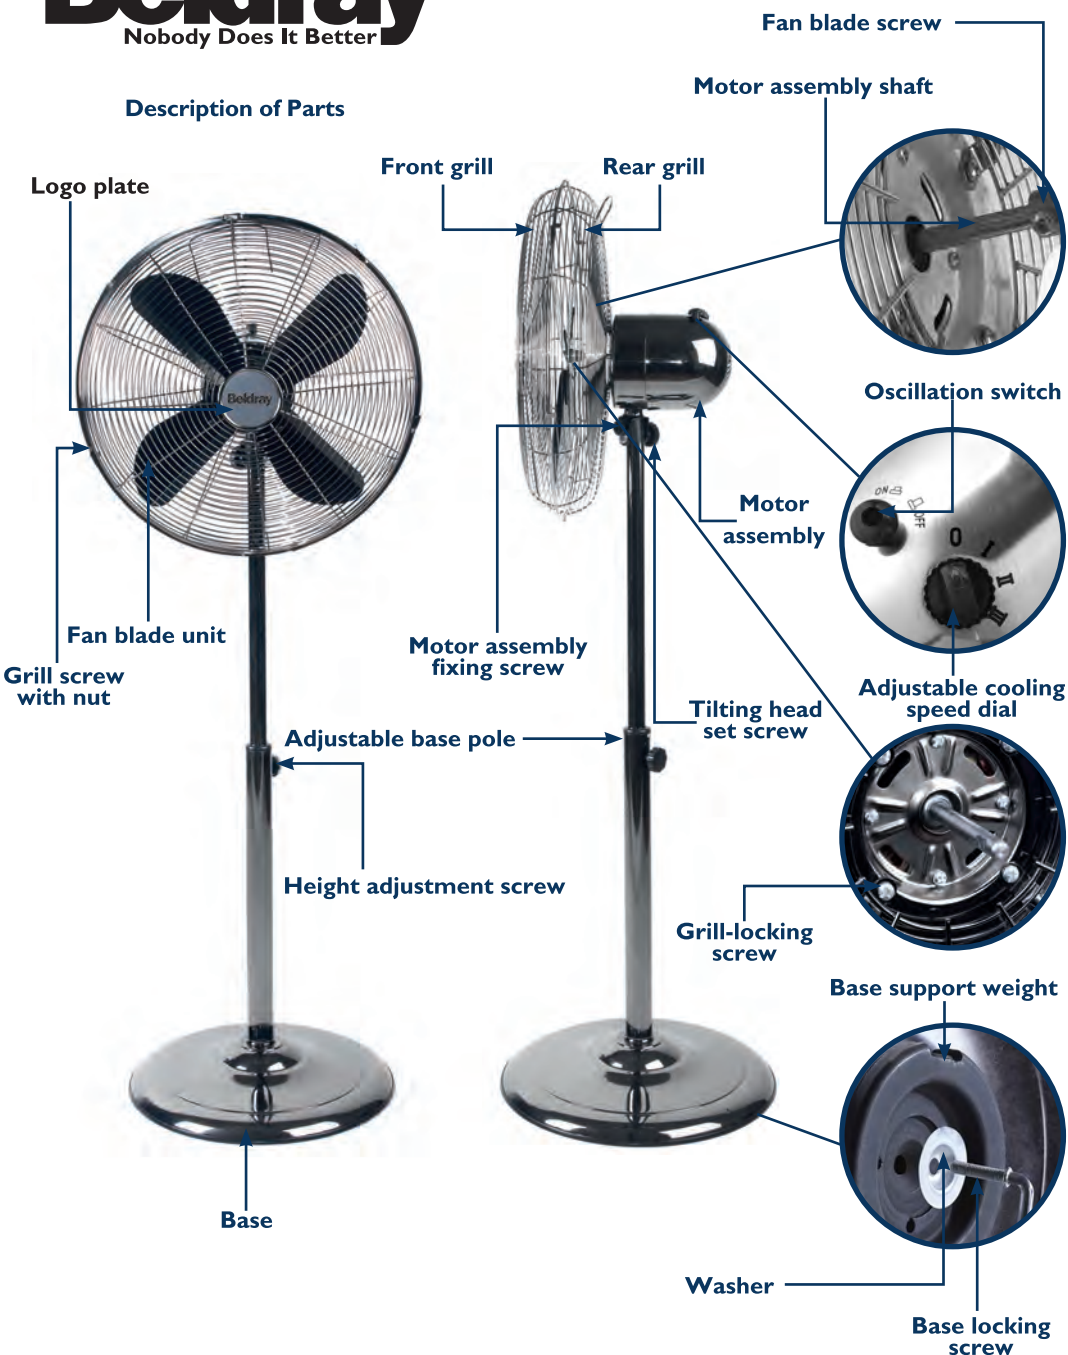

Assembling the Gun Metal Pedestal Fan

Assembling the Fan Head

STEP 1: Lay the motor assembly on a flat surface, ensuring that the motor assembly shaft is facing upwards.

STEP 2: Position the rear grill over the motor assembly shaft and attach it to the motor assembly using the four grill-locking screws.

STEP 3: Place the fan blade unit onto the motor assembly shaft and secure it using the fan blade screw.

STEP 4: Open the clips around the outer edge of the front grill and position it onto the rear grill. Fasten the clips around the outer edge of the front grill to lock the grills into position, ensuring that the fan blade and motor unit are protected.

STEP 5: Insert the grill screw through the hole at the bottom of the front and rear grill, then place the nut onto the grill screw and tighten it in a clockwise direction to secure the grills together.

Assembling the Fan Base

STEP 1: Insert the adjustable base pole through the hole in the base.

STEP 2: Turn the base pole with base upside down and feed the base support weight, followed by the washer, onto the bottom of the adjustable base pole.

STEP 3: Secure the base support weight and washer into position by fitting the base-locking screw and turning it in a clockwise direction.

Attaching the Fan Base to the Fan Head

STEP 1: Release the motor assembly fixing screw by turning it in an anticlockwise direction until the locking handle has been removed, then take out the set screw.

STEP 2: Remove the tilting head set screw by twisting it in an anticlockwise direction.

STEP 3: Loosen the height adjustment screw by twisting it in an anticlockwise direction, then pull out the inner adjustable base pole. Tighten the height adjustment screw by twisting it in a clockwise direction to secure the adjustable base pole into position.

STEP 4: Insert the adjustable base pole in-between the motor assembly brackets, ensuring that the holes in the motor assembly brackets align with the holes in the inner adjustable base pole.

STEP 5: Replace the set screw, then screw on the locking handle to secure the adjustable base pole to the motor assembly.

STEP 6: Reinsert the tilting head set screw and tighten it by turning it in a clockwise direction.

Note: Take care not to overtighten the height adjustment screw as this may damage the Gun Metal Pedestal Fan.

Instructions for Use

Ensure that the Gun Metal Pedestal Fan is unplugged from the mains power supply. Place the Gun Metal Pedestal Fan on a flat, stable surface, ensuring that there is sufficient distance between the Gun Metal Pedestal Fan and any objects that could get damaged or caught in the rotating fan blades.

Tilting the Fan Head

STEP 1: Loosen the tilting head set screw by twisting it in an anticlockwise direction.

STEP 2: Tilt the fan head until it is at the desired angle.

STEP 3: Twist the tilting head set screw in a clockwise direction to lock the fan head into its new position.

Adjusting the Height of the Gun Metal Pedestal Fan

STEP 1: Loosen the height adjustment screw by twisting it in an anticlockwise direction.

STEP 2: Pull out the inner pole of the adjustable base pole until the Gun Metal Pedestal Fan is at the desired height.

STEP 3: Twist the height adjustment screw in a clockwise direction to retighten and secure the height of the Gun Metal Pedestal Fan.

Caution: Take care not to overtighten the height adjustment screw.

Using the Gun Metal Pedestal Fan

STEP 1: Plug in and switch on the Gun Metal Pedestal Fan at the mains power supply.

STEP 2: To turn on the Gun Metal Pedestal Fan, select the desired cooling speed by turning the adjustable cooling speed dial to any one of the positions numbered 1–3, 3 being the strongest cooling speed setting.

STEP 3: Activate the oscillation function by pushing down the oscillation switch; the Gun Metal Pedestal Fan will begin to turn left and right. To stop the Gun Metal Pedestal Fan from turning, pull up the oscillation switch.

STEP 4: Turn off the Gun Metal Pedestal Fan by turning the adjustable cooling speed dial to 0.

Caution: Do not cover the fan head.

Caution: This is not a desk fan. Do not place the Gun Metal Pedestal Fan on a desk as this could affect the stability of the product.

Care & Maintenance

Always wait until the Gun Metal Pedestal Fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

Wipe the Gun Metal Pedestal Fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the Gun Metal Pedestal Fan in water or any other liquid.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the Gun Metal Pedestal Fan, as this may cause damage.

Specification

Product code: EH1101

Input: 220–240 V ~ 50 Hz

Power: 50 W

Fan blade diameter: 40 cm approx.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{1}{=}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{1}{=}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{1}{=}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 
If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

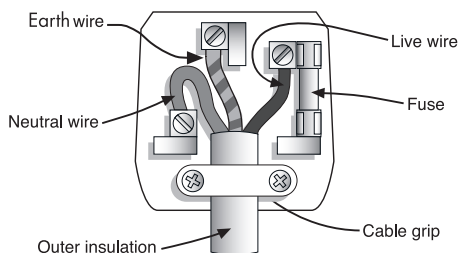

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD271113/MD281014/V3