

Beldray[®] Est 1872

Nobody Does It Better

Electric Clothes Airing Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Safety Instructions

Do not use the appliance until it is fully assembled as described in this manual.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower, or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function. The appliance should be used on a stable surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use prior to storage or any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

Do not move the appliance whilst in use.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600 mm above the floor.

Warning: This appliance is intended only for drying textiles washed in water.

Caution: When folding the appliance take care, as it is possible for loose clothing or fingers to become trapped and cause injury to the user.

 **Caution:** Hot surface when in use, ensure that the appliance has fully cooled prior to any user maintenance or cleaning.

Warning: Do not exceed maximum load of 15 kg

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Electric Clothes Airer

Electric Clothes Airer foldable stand

Instruction manual

Features


220 W power

Foldable

Aluminium frame

1.4 m power cord

Description of Parts

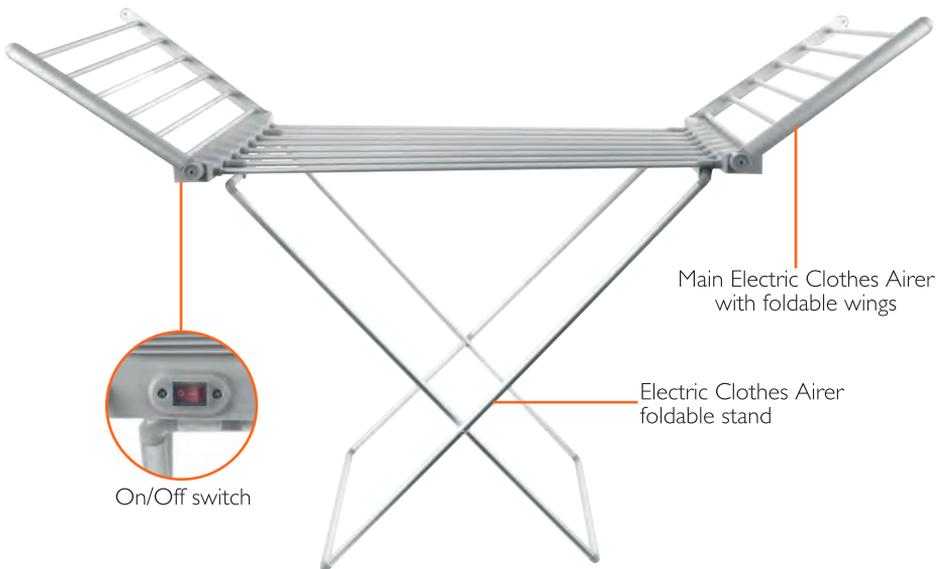

Instructions for Use

Assembling the Electric Clothes Airer.

Before plugging the Electric Clothes Airer into the mains power supply, the appliance needs to be assembled.

Open up the Electric Clothes Airer foldable stand so that the shorter leg length rests on the ground.

Holding the main Electric Clothes Airer unit, clip the wider leg length of the foldable stand onto the two outer hooks.

Next fasten the inner clips onto the inside leg, the Electric Clothes Airer should now be free-standing.

Open up each of the foldable wings, so that the metal pole closest to the plastic body rests on it. The Electric Clothes Airer can now be plugged into the mains power supply.

Caution: When installing the Electric Clothes Airer take care, as it is possible for loose clothing or fingers to become trapped and cause injury to the user.

Operating the Electric Clothes Airer

Follow the assembly instructions as described in the section entitled 'Assembling the Electric Clothes Airer'.

Once the Electric Clothes Airer is ready to use, begin to hang up the damp garments. Ensure that as much water as possible is removed prior to hanging, as this will prevent the Electric Clothes Airer collapsing under the total weight of all the wet fabric.

When the Electric Clothes Airer is loaded, turn it on using the On/Off switch; the button will illuminate indicating that the Electric Clothes Airer is turned on.

Once the garments are dry, turn off the Electric Clothes Airer by turning the On/Off switch to the 'Off' position, the light on the switch will turn off.

Remove the garments with care, as the Electric Clothes Airer rails may still be hot.

Warning: Do not load the Electric Clothes Airer beyond 15 kg.

Tip: For a faster drying time ensure that the garments are spun in a washing machine prior to hanging.

Storage

The Electric Clothes Airer can be stored in tall, narrow places by simply folding the wings, then sliding the guides for the stand to one side; the Electric Clothes Airer should fold flat.

Caution: When folding the Electric Clothes Airer ensure that any loose clothing or fingers are kept clear of the collapsing parts.

Cleaning and Maintenance

Before attempting any cleaning or maintenance, unplug the Electric Clothes Airer from the mains power supply and allow it to cool fully.

Clean the Electric Clothes Airer with a soft, damp, lint-free cloth and dry thoroughly.

Do not immerse the Electric Clothes Airer in water or any other liquid.

Do not use harsh or abrasive detergents or scourers.

Technical Specification

Product code: EHI I56BMFOB

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ()

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

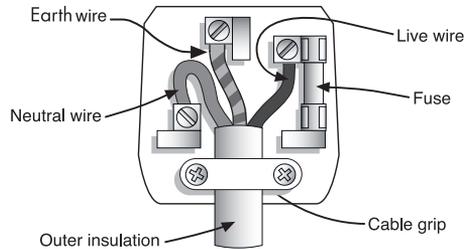

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Imported and Distributed by:
B&M Retail Ltd., The Vault, Dakota Drive,
Estuary Commerce Park, Liverpool L24 8RJ. UK.
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD250714/MD280714/V2