

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Heated Under Blanket

### Instruction Manual



THE **SCIENCE**  
BEHIND HEAT



[www.beldray.com](http://www.beldray.com)



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should not use this product due to their inability to react to overheating.

This product can be used by children aged from 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, only if they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children over the age of 3 years should not use this product unless the controls have been preset by a parent or guardian or the child has been adequately instructed on how to operate the controls safely.

Children younger than 8 years should only switch the product on/off, if it has been placed or installed in its intended normal operating position, if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

Particular attention should be given where children and vulnerable people are present.

This product contains no user serviceable parts. Attempts to repair may place the user at risk of harm.

If the supply cord or plug is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Never put the power cord near to or in contact with the hot parts of the product.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

This product should not be operated by means of an external timer or separate remote control system.

Do not immerse the controller or plug in water or any other liquid.  
Do not leave the product unattended whilst connected to the mains power supply.  
Do not leave the product unattended whilst it is in use.  
Do not use the product for anything other than its intended use.  
Do not use the product outdoors.  
Do not clean the product with abrasive chemicals or materials as they may damage the product and impair future function.  
Do not use the product folded or tucked in.  
Do not insert pins into the product.  
Do not use this product on an adjustable bed.  
Do not pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.  
Do not dry clean the product.  
Do not use bleach or harsh cleaning detergents as they may damage the heating element.  
Do not use the product when it is wet.  
Only operate the product using the controller supplied with the product.  
Always unplug the product after use and before any cleaning or maintenance.  
Always use the lowest heat setting when the bed is occupied.  
Ensure that the product has cooled fully after use, before cleaning or storing away.  
Ensure that the product is not too big for the bed.  
Avoid extended use of this product as a build-up of heat could cause overheating of the body (heatstroke).  
Avoid creasing the product.  
The product should not be left on overnight or for a long period of time.  
This product should not be used whilst sleeping.  
Keep pets away from the product.  
When not in use, always turn off the product and unplug it from the mains power supply.  
This product must not be used by persons insensitive to heat or by other vulnerable persons who are unable to react to overheating.  
This product is not intended for use in hospitals.  
This product is intended for domestic use only. It should not be used for commercial purposes.

## Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and store or dispose of safely.

## In the Box

Heated Under Blanket with controller

Tie down strings

Instruction manual

## Features

Overheat protection

100 % non-woven, white polyester

Three heat settings with one controller

Secure safety connector


Tie down design

Machine washable

Power: 220–240 V

Single size: 60 x 120 cm - 35 W

## Description of Parts

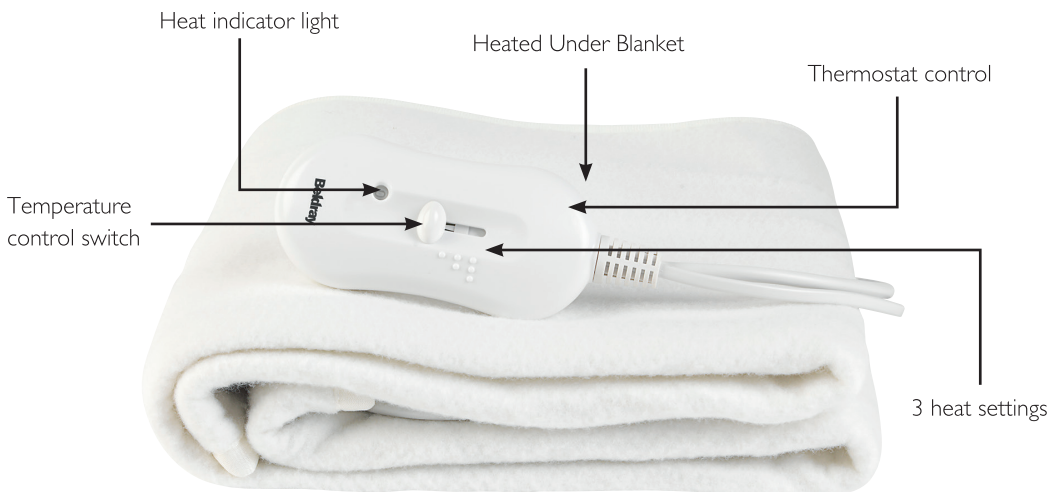

## Instructions for Use

**STEP 1:** Fit the Heated Under Blanket to the bed with the controller positioned at the bed head end.

**STEP 2:** Smooth the Heated Under Blanket so that there are no creases or folds and then secure it by tightening and tying the strings provided. Take care not to overtighten the strings.

**STEP 3:** Connect the Heated Under Blanket to the mains power supply.

**STEP 4:** To operate the Heated Under Blanket, select the low heat setting ('1'), the medium heat setting ('2') or the high heat setting ('3') by sliding the temperature control switch on the controller forwards.

		Suggested Use
0	Off	
1	Low heat	Reading in bed.
2	Medium heat	If a slightly higher temperature is required.
3	High heat	Preheating the bed.



**STEP 5:** Allow the Heated Under Blanket to preheat the bed. Once heated, switch off the Heated Under Blanket by sliding the thermostat control switch to the 'Off' position ('0').

**STEP 6:** Unplug the Heated Under Blanket from the mains power supply.

**Warning:** Do not have the controller set to a high heat setting whilst the bed is occupied; always switch it to the low heat setting. The high heat setting should only be used to preheat the bed.

Unplug the Heated Under Blanket from the mains power supply when it is not in use.

## Care and Maintenance

Before attempting any cleaning or maintenance, switch off the Heated Under Blanket and unplug it from the mains power supply.

Disconnect the controller from the Heated Under Blanket using the retaining clip on the connector. Do not immerse the controller in water or any other liquid.

The Heated Under Blanket has waterproof heating elements, making it safe to immerse in water and wash either by hand or by machine.

**Note:** Check the wiring between the two stickers. If there is any damage, stop using the Heated Under Blanket immediately.

**Caution:** Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

**Warning:** Do not dry clean the Heated Under Blanket.

## Hand-washing the Heated Under Blanket

**STEP 1:** Ensure that the controller has been disconnected from the Heated Under Blanket.

**STEP 2:** Immerse the Heated Under Blanket in water mixed with a hand-wash detergent and wash by hand.

**Caution:** Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

## Machine Washing the Heated Under Blanket

**STEP 1:** Ensure that the controller has been disconnected from the Heated Under Blanket.

**STEP 2:** Wash the Heated Under Blanket on a 'Wool' or 'Delicates' cycle, or according to the washing machine manufacturer's instructions, with a neutral detergent or mild soap powder, at a maximum temperature of 40 °C.

**Caution:** Do not use high speed or extra spin cycles to clean the Heated Under Blanket.

## Drying the Heated Under Blanket

**STEP 1:** Drape the Heated Under Blanket over a clothing line and allow it to dry naturally; do not use pegs to secure the Heated Under Blanket in place.

**Caution:** Never use any form of direct heat to dry the Heated Under Blanket, such as radiators, heaters or hairdryers.

Ensure that the Heated Under Blanket is completely dry before reconnecting the controller and refitting back onto the bed.

## Checking for Wear and Damage

Ensure that the Heated Under Blanket is checked regularly for signs of wear or damage. If the Heated Under Blanket shows signs of wear or damage or if it has been misused or does not work, discontinue use immediately. Return the Heated Under Blanket to the supplier who will advise on whether it is still safe to use.

**Warning:** If the Heated Under Blanket shows any of the following signs of wear or damage, stop using immediately:

- Fraying fabric
- Scorch marks
- Exposed elements or internal parts
- Creasing or folding (which pose a risk of the Heated Under Blanket overheating)
- Soiling
- Damp/wet patches
- Tie down strings damaged or missing
- Worn flex cable or damage to plug
- Loose electrical connections

### Troubleshooting

Problem	Cause	Solution
The Heated Under Blanket is not heating up.	The fuse may have blown.	Check the fuse by replacement.

### Storage

When the Heated Under Blanket is not in use, it should be lightly folded and stored in a cool, dry place.

Do not place items on top of the Heated Under Blanket whilst it is in storage, as this may damage it.

### Specifications

Product code: EH1284

Supply: 220–240 V 50 Hz

Power: 35 W

Control: TWK-I/T4B



## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

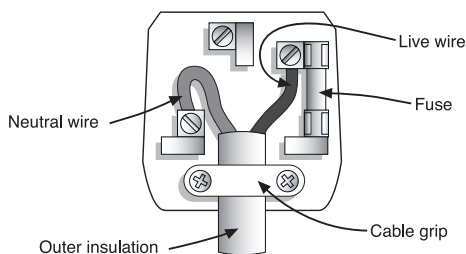

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## **UP Global Sourcing**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Manufactured by:  
UP Global Sourcing,  
Victoria Street, Manchester OL9 0DD, UK

+44 (0)333 577 9820  
[customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.

Made in China.

CDI30716/MD000000/V1