

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## Heated Under Blanket

### Instruction Manual



THE **SCIENCE**  
BEHIND HEAT



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep the product away from other heat emitting products.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

The product should be used on a stable, heat-resistant surface.

The product must not be located immediately below or next to a mains power supply.

Always unplug the product after use and before any cleaning or maintenance.

Always ensure that the product has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended.

This product is intended for domestic use only. It should not be used for commercial purposes.

**Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

**Warning:** In order to avoid overheating, do not cover the product.

This product is not equipped with a device to control the room's temperature. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

## Dos and Don'ts

### Do:

Always use the lowest heat setting when the bed is occupied.  
Check that the Heated Under Blanket is not too big for the bed.  
Keep pets away from the Heated Under Blanket.

### Do not:

Use Heated Under Blanket product folded or tucked in.  
Use the Heated Under Blanket on an adjustable bed.  
Use the Heated Under Blanket for an extended period of time, as a build-up of heat could cause overheating of the body (heatstroke).  
Use the Heated Under Blanket whilst sleeping.  
Use the Heated Under Blanket if you are insensitive to heat or a vulnerable person who is unable to react to overheating.  
Insert pins into the Heated Under Blanket.  
Pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.  
Leave the Heated Under Blanket on overnight or for a long period of time.  
Crease the Heated Under Blanket.

## Care and Maintenance

Before attempting any cleaning or maintenance, switch off the Heated Under Blanket and unplug it from the mains power supply.  
Disconnect the controller from the Heated Under Blanket using the retaining clip on the connector.  
Do not immerse the controller in water or any other liquid.  
The Heated Under Blanket has waterproof heating elements, making it safe to immerse in water and wash either by hand or by machine.

**Note:** Check the wiring between the two stickers. If there is any damage, stop using the Heated Under Blanket immediately.

**Caution:** Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

**Warning:** Do not dry clean the Heated Under Blanket.



## Checking for Wear and Damage

Check the Heated Under Blanket regularly for signs of wear or damage. If the Heated Under Blanket shows signs of wear or damage, has been misused or does not work, discontinue use immediately. Return the Heated Under Blanket to the supplier who will advise on whether it is still safe to use.

**Warning:** If the Heated Under Blanket shows any of the following signs of wear or damage, stop using immediately:

- Fraying fabric
- Scorch marks
- Exposed elements or internal parts
- Creasing or folding (which pose a risk of the Heated Under Blanket overheating)
- Soiling
- Damp/wet patches
- Tie down strings damaged or missing
- Worn flex cable or damage to plug
- Loose electrical connections

## Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and store or dispose of safely.

## In the Box

Heated Under Blanket with controller

Tie down strings

Instruction manual

## Features

Overheat protection

100 % non-woven, white polyester

Three heat settings with one controller

Secure safety controller

Tie down design

Machine washable


Power: 220–240 V

Single size: 60 x 120 cm – 35 W

Double size: 107 x 120 cm – 60 W

King size: 120 x 130 cm – 70 W

## Description of Parts

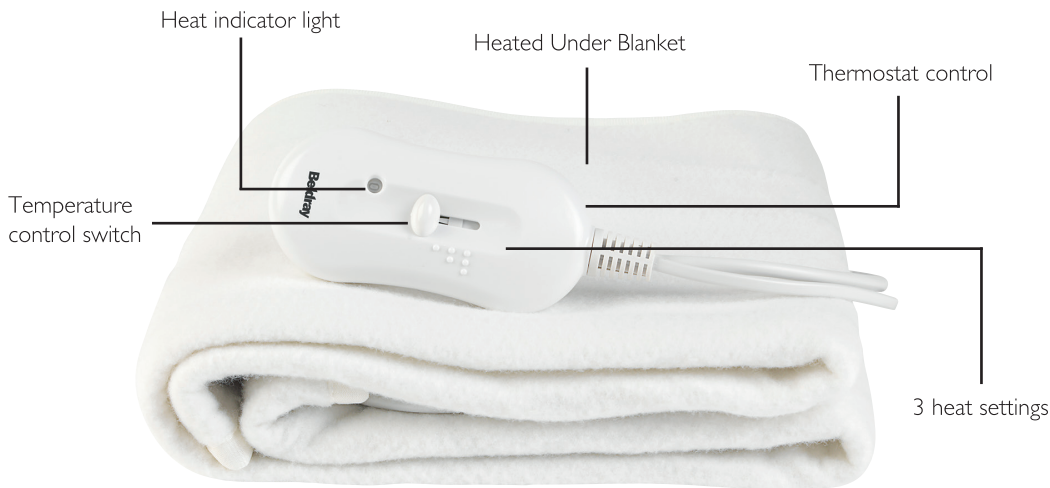

## Instructions for Use

**STEP 1:** Fit the Heated Under Blanket to the bed with the controller positioned at the bed head end.

**STEP 2:** Smooth the Heated Under Blanket so that there are no creases or folds and then secure it by tightening and tying the strings provided. Take care not to overtighten the strings.

**STEP 3:** Connect the Heated Under Blanket to the mains power supply.

**STEP 4:** To operate the Heated Under Blanket, select the low heat setting ('1'), the medium heat setting ('2') or the high heat setting ('3') by sliding the temperature control switch on the controller forwards.

		Suggested Use
0	Off	
1	Low heat	Reading in bed.
2	Medium heat	If a slightly higher temperature is required.
3	High heat	Preheating the bed.



**STEP 5:** Allow the Heated Under Blanket to preheat the bed. Once heated, switch off the Heated Under Blanket by sliding the thermostat control switch to the 'Off' position ('0').

**STEP 6:** Unplug the Heated Under Blanket from the mains power supply.

**Warning:** Do not have the controller set to a high heat setting whilst the bed is occupied; always switch it to the low heat setting. The high heat setting should only be used to preheat the bed. Unplug the Heated Under Blanket from the mains power supply when it is not in use.

### Washing and Drying the Heated Under Blanket

The controller must be disconnected from the Heated Under Blanket before it is washed or dried.

### Hand-washing the Heated Under Blanket

Immerse the Heated Under Blanket in water mixed with a hand-wash detergent and wash gently by hand.

**Caution:** Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

### Machine Washing the Heated Under Blanket

Wash the Heated Under Blanket on a 'Wool' or 'Delicates' cycle or according to the washing machine manufacturer's instructions, with a neutral detergent or mild soap powder at a max. temperature of 40 °C.

**Caution:** Do not use high speed or extra spin cycles to clean the Heated Under Blanket.

### Drying the Heated Under Blanket

Drape the Heated Under Blanket over a clothing line and allow it to dry naturally; do not use pegs to secure the Heated Under Blanket in place.

**Caution:** Never use any form of direct heat to dry the Heated Under Blanket, such as radiators, heaters or hairdryers. Make sure that the Heated Under Blanket is completely dry before reconnecting the controller and refitting back onto the bed.

### Troubleshooting

Problem	Cause	Solution
The Heated Under Blanket is not heating up.	The fuse may have blown.	Check the fuse by replacement.

### Storage

When the Heated Under Blanket is not in use, it should be lightly folded and stored in a cool, dry place.

Do not place items on top of the Heated Under Blanket whilst it is in storage, as this may damage it.

### Specifications

Single size: 60 x 120 cm – 35 W (EH1284)

Double size: 107 x 120 cm – 60 W (EH1285)

King size: 120 x 130 cm – 70 W (EH1286)

Supply: 220–240 V 50 Hz

Control: TWK-I/T4B

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\equiv$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

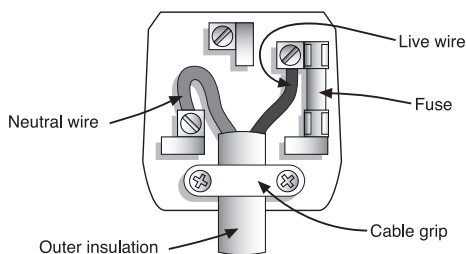

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## **UP Global Sourcing UK Ltd.,**

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Go to <http://guarantee.upgs.com/beldray>  
to register your product for a 2 year guarantee



Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.

CDI10717/MD000000/V1

