

Beldray[®]

Est. 1872

Nobody Does It Better

Premium 360 ° Pedestal Fan Instruction Manual



THE **SCIENCE**
BEHIND COOL



www.beldray.com

Please read all instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.
Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Warning: Do not cover this product.

Cell Battery

Ensure that the battery compartment is secure.

Only a battery of the same or equivalent type as those recommended should be used with this product.

Only use those batteries recommended.

Batteries are to be inserted with the correct polarity and should not be exposed to excessive heat sources such as fire and direct sunlight.

Replace a full set of batteries at any one time.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the product to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

The supply terminals are not to be short-circuited.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not mix old and new batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery to mechanical shock.

Do not dispose of the battery in your household waste.

To dispose of the battery, take it to your local recycling station. Contact your local government offices for details.

This product requires a CR2025 3 V button cell battery (included).

Getting Started

Remove the product from the box.

Remove all packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

360 ° Pedestal Fan

Front grill

Rear grill

Rear grill-locking ring

Fan blade unit

Fan blade screw

Motor assembly

Adjustable base pole

Height adjustment cap

Head set screw

Base

4 base feet

4 base locking screws

Remote control

Instruction manual

Features

Adjustable tilting head

5 powerful blades

3 speed settings

360 ° oscillating function

Separate 'up and down' oscillation function


7.5 hour timer function

Height adjustable up to 1.5 m

55 W power

Black and silver metal finish

Description of Parts

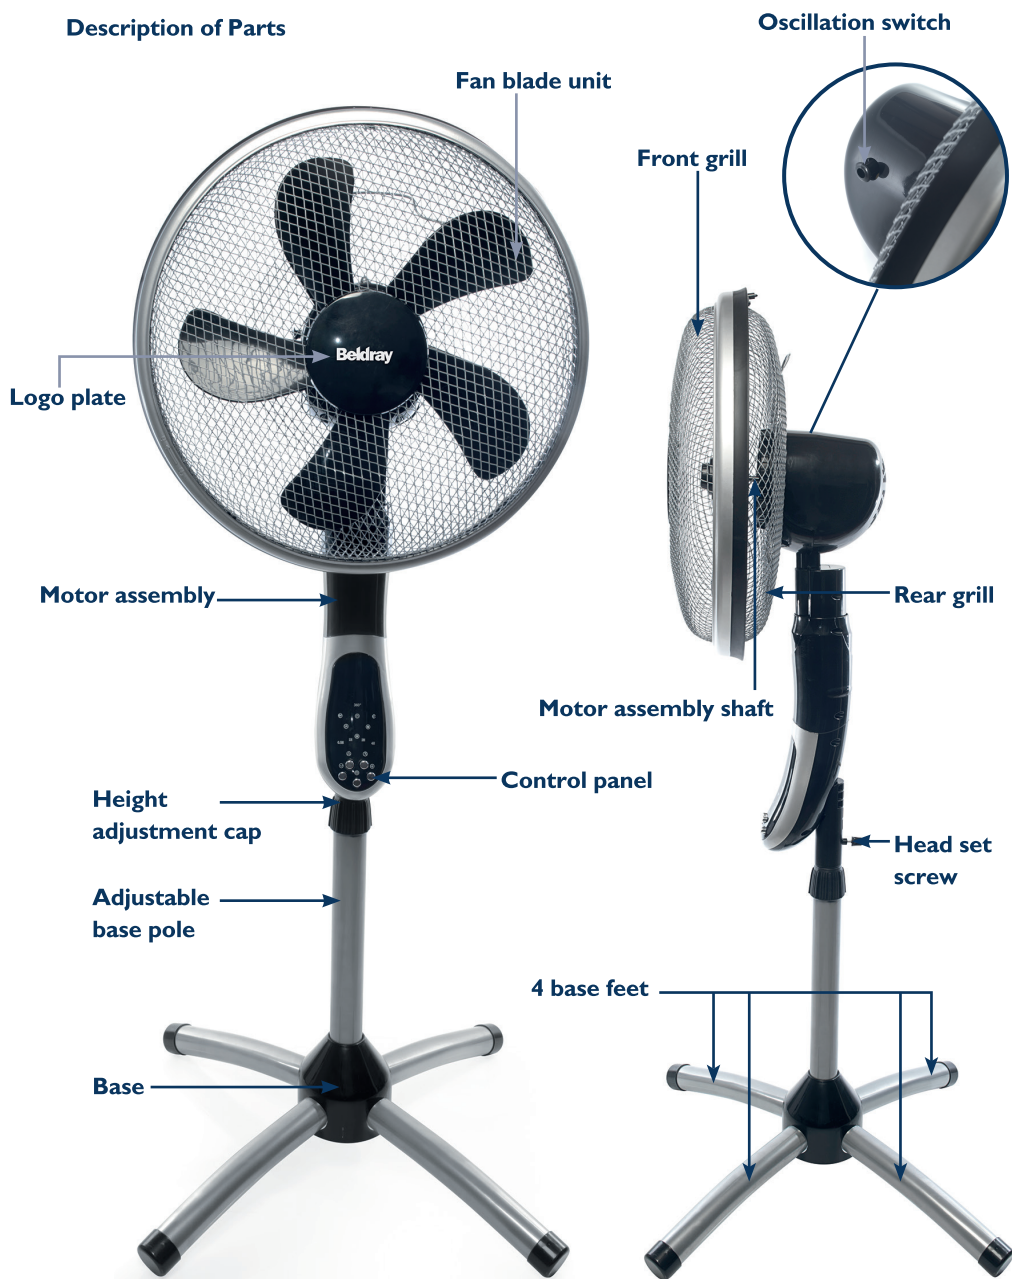

Assembling the 360 ° Pedestal Fan

Assembling the Fan Head

STEP 1: Lay the motor assembly on a flat surface, ensuring that the motor assembly shaft is facing upward.

STEP 2: Remove the rear grill-locking ring by twisting it in an anticlockwise direction.

STEP 3: Position the rear grill over the motor assembly shaft with the handle facing upward, ensuring that the locators fit through the corresponding holes. Secure the rear grill in place by reattaching the rear grill-locking ring and turning it in a clockwise direction.

STEP 4: Place the fan blade unit onto the motor assembly shaft and secure it using the fan blade screw.

STEP 5: Attach the front grill by aligning the unlock symbol with the corresponding line on the rear grill. Ensuring that the fan blade and motor unit are protected, twist in a clockwise direction to lock the grills into position.

STEP 6: Insert the grill screw through the hole at the top of the rear grill and carefully tighten it in a clockwise direction to secure the grills together.

Assembling the Fan Base

STEP 1: Attach the four base feet to the base by inserting them through the slots in the base, ensuring that the screw holes are aligned.

STEP 2: Insert the base locking screws through each of the four holes and carefully tighten in a clockwise direction to lock the base feet into position.

Attaching the Fan Base to the Fan Head

STEP 1: Loosen the height adjustment cap by twisting it in an anticlockwise direction, then pull out the inner adjustable base pole; the base pole and base may need to be turned upside down to make this process easier.

STEP 2: When the adjustable base pole is at the desired height, tighten the height adjustment cap by twisting it in a clockwise direction to secure the adjustable base pole into position.

STEP 3: Release the head set screw by turning it in an anticlockwise direction, then slot the fan head onto the adjustable base pole.

STEP 4: Carefully turn the head set screw in a clockwise direction to lock the fan head into position.

Note: Take care not to overtighten the height adjustment cap and head set screw as this may cause damage to the 360 ° Pedestal Fan.

Instructions for Use

Ensure that the 360 ° Pedestal Fan is unplugged from the mains power supply. Place the 360 ° Pedestal Fan on a flat, stable surface, ensuring that there is sufficient distance between the 360 ° Pedestal Fan and any objects that could get damaged or caught in the rotating fan blades.

Adjusting the Height of the 360 ° Pedestal Fan

STEP 1: Loosen the height adjustment cap by twisting it in an anticlockwise direction.

STEP 2: Pull out the inner pole of the adjustable base pole until the 360 ° Pedestal Fan is at the desired height.

STEP 3: Twist the height adjustment cap in a clockwise direction to retighten and secure the height of the 360 ° Pedestal Fan.

Caution: Take care not to overtighten the height adjustment cap.

Using the 360 ° Pedestal Fan

The 360 ° Pedestal Fan comes complete with a fitted control panel and a remote control, allowing the user to operate each of its functions either manually or remotely. To do so, follow the instructions in the below sections.

Caution: Do not cover the fan head.

Caution: This is not a desk fan. Do not place the 360 ° Pedestal Fan on a desk as this could affect the stability of the product.

Turning the 360 ° Pedestal Fan On and Off

STEP 1: Plug in and switch on the 360 ° Pedestal Fan at the mains power supply.

STEP 2: To turn on the 360 ° Pedestal Fan, press the  button.

STEP 3: Turn off the 360 ° Pedestal Fan by pressing the  button once more.


Using the Cooling Speed Settings


STEP 1: Push the  button once to set the 360 ° Pedestal Fan to a low cooling speed.

STEP 2: Press the  button until the desired speed is reached; the corresponding indicator light will illuminate to indicate that the desired cooling speed is operational.

Using the Variable Cooling Speed Functions


The 360 ° Pedestal Fan can be set to automatically vary the cooling speed.


STEP 1: To activate the 'outdoor breeze' mode, press the  button once; the 360 ° Pedestal Fan will automatically cycle through each of the cooling speed settings and the corresponding indicator light will illuminate to show that it is doing so.

STEP 2: Press the  button once more to stop this mode; the 360 ° Pedestal Fan will now enter 'sleep' mode, where it will automatically switch back to the preselected cooling speed and will occasionally speed up.

Using the Oscillation Function

The 360 ° Pedestal Fan has both a horizontal and vertical oscillation function.

STEP 1: Activate the horizontal oscillation function by pressing the  button; the 360 ° Pedestal Fan will begin to oscillate 360 ° horizontally in one direction and the corresponding indicator light will illuminate to show that it is doing so.

STEP 2: Press the  button once more to stop the function.


STEP 3: To activate the vertical oscillation function, push down the oscillation switch; the 360 ° Pedestal Fan will begin to oscillate vertically.


STEP 4: Pull up the oscillation switch to stop the function.

Note: It is possible to use both oscillation functions at the same time.

Using the Timer Function

The timer function allows the user to set the 360 ° Pedestal Fan to automatically switch off after a predetermined amount of time.

STEP 1: Press the  button once to switch on the timer function

STEP 2: To set the timer function, press the  button until the desired operational time is reached; the 360 ° Pedestal Fan will now automatically switch off when the timer has reached zero.

Note: The timer function can be set to any time between 30 minutes and 7 hours 30 minutes.

Remote Operation

The 360 ° Pedestal Fan comes complete with a remote control for conveniently adjusting the settings, the buttons on the remote control are identical to those on the 360 ° Pedestal Fan main body.

Battery Replacement

The remote control requires a CR2025 3 V button cell battery for use. If the button cell battery becomes exhausted:

STEP 1: Locate the battery compartment; this can be found on the back of the remote control.

STEP 2: To open the battery compartment, push the release catch on the left hand side and pull out the battery compartment.

STEP 3: Carefully remove the exhausted button cell battery and dispose of it following the instructions in the section entitled 'Battery Safety'.

STEP 4: Place a new button cell battery into the slot in the battery compartment, ensuring that the battery's positive side is facing upward.

STEP 5: Slide the battery compartment back into the remote control until it clicks into position.

Note: Ensure that the battery compartment is secure before use.

Care & Maintenance

Always wait until the 360 ° Pedestal Fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

Wipe the 360 ° Pedestal Fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the 360 ° Pedestal Fan in water or any other liquid.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the Retro Pedestal Fan, as this may cause damage.

Specification

Product code: EH133I

Input: 220–240 V ~ 50 Hz

Power: 55 W

Fan blade diameter: 40 cm approx.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

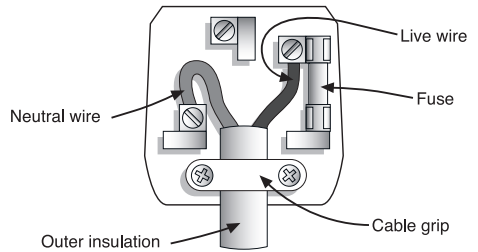

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:
UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

© 2016 Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.
CD260914/MD000000/V1