


# Beldray<sup>®</sup>

Est. 1872

Nobody Does It Better

## USB Mini Fan Instruction Manual

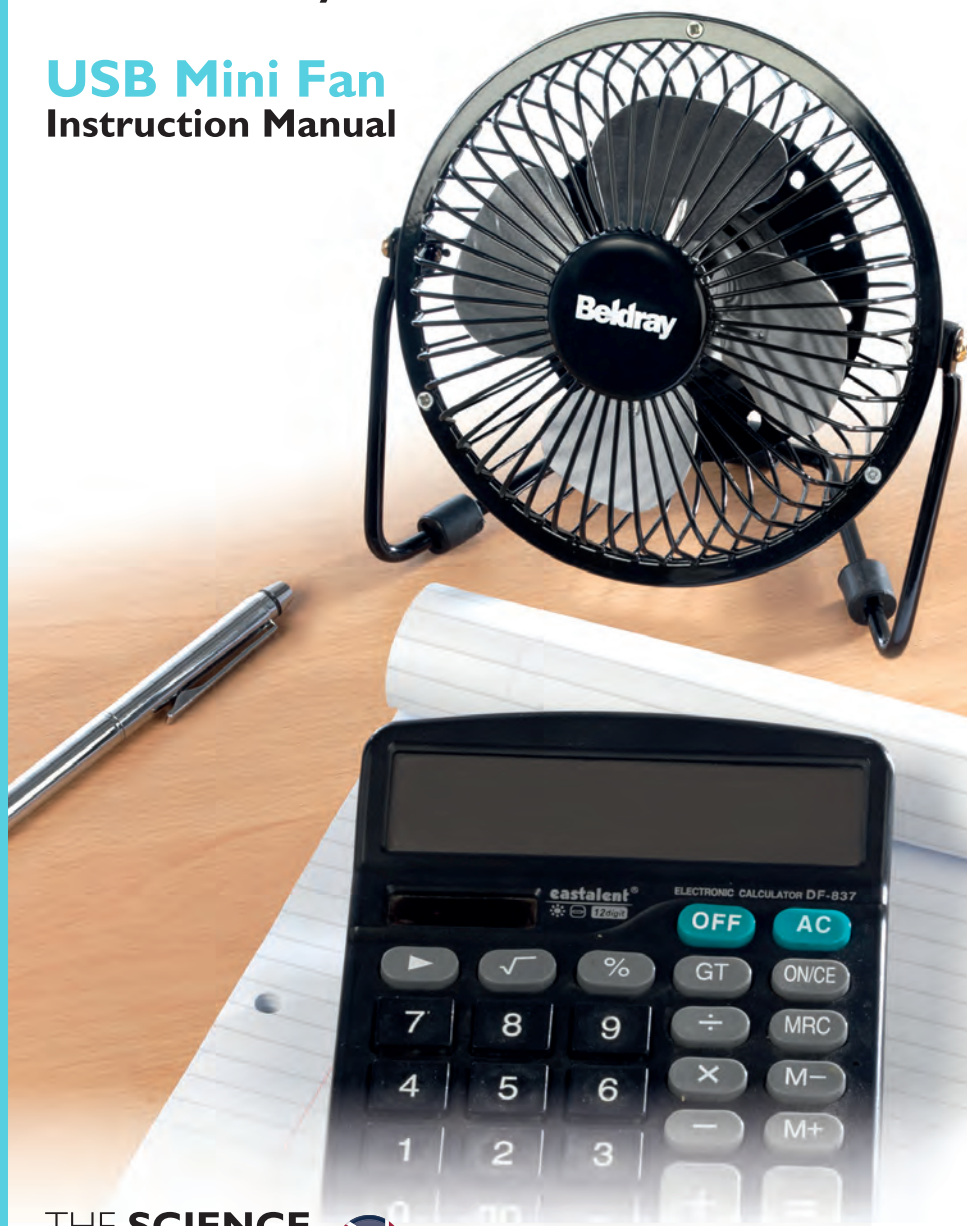

THE **SCIENCE**  
BEHIND COOL



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future use.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its USB cord out of the reach of children.

Keep the product and its USB cord away from heat or sharp edges that could cause damage.

Keep the USB cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

## Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

USB Mini Fan

Instruction manual

## Features

180 ° adjustable tilting head

4 durable aluminium blades

1 speed setting

DC5 V 500 mA power

Fan blade diameter: 96 mm approx.

## Description of Parts



## Instructions for Use

**STEP 1:** Ensure that the USB Mini Fan is disconnected from any compatible devices.

**STEP 2:** Place the USB Mini Fan on a flat, stable surface, ensuring that there is sufficient distance between the USB Mini Fan and any objects that could get damaged or caught in the rotating fan blades.

**STEP 3:** Plug the USB Mini Fan into a USB port on a compatible device.

**STEP 4:** To turn on the USB Mini Fan, flick the power switch to 'I'.

**STEP 5:** Turn off the USB Mini Fan by flicking the power switch to 'O'.

**STEP 6:** The USB Mini Fan can be tilted vertically up to 180 ° to adjust the direction of the air flow.

**Caution:** Do not cover the fan head.

## Care and Maintenance

Always wait until the USB Mini Fan has stopped completely and is disconnected from the compatible device before performing any cleaning or user maintenance.

Wipe the USB Mini Fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the USB Mini Fan in water or any other liquid.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the USB Mini Fan, as this may cause damage.

## Troubleshooting

If the blades fail to revolve:

Check that the USB Mini Fan is securely plugged into the compatible device.

Make sure that the compatible device the USB Mini Fan is plugged into is turned on; the USB Mini Fan will not work otherwise.

If using a USB hub there may be too much power drawn from that port; switch to a USB port directly connected to the compatible device.

## Specification

Interface: USB 2.0/3.0

Electric power supply: DC5V (fixed) 500 mA or above (supplied from USB port)

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



