



Attica LED Colour Changing Electric Wall Fire

Instruction Manual



THE **SCIENCE**
BEHIND HEAT



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep the product away from other heat emitting products.

Keep furniture, curtains and other flammable material at least 1 metre away from the product.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not use the product for anything other than its intended use.

Do not cover this product.

Do not block the rear air intake of the product; place in an open, well-ventilated space.

Do not use this product outdoors.

Do not attempt to move the product whilst it is in use.

Do not touch the product during use, as it will get very hot and could cause injury.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

The product should be used on a stable, heat-resistant surface.

The product must not be located immediately below or next to a mains power supply.

Always unplug the product after use and before any cleaning or maintenance.

Always ensure that the product has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: In order to avoid overheating, do not cover the product.

This product is not equipped with a device to control the room's temperature. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided. Normal voltage is still present in this product as long as the product is connected to the electrical source. Always unplug the product when not in use.

Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Caution: Hot surface. Do not touch the hot section or heating components of the product.

Battery Safety

Ensure that the battery compartment is secure.

Only batteries of the same or equivalent type as those recommended should be used with this product.

Only use those batteries recommended.

Batteries are to be inserted with the correct polarity and should not be exposed to excessive heat sources such as fire and direct sunlight.

Replace a full set of batteries at any one time.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the product to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries must be removed from the product before being charged.

Rechargeable batteries should only be recharged under adult supervision.

The supply terminals are not to be short-circuited.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not mix old and new batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of batteries in your household waste.

To dispose of the batteries, take them to your local recycling station.

Contact your local government offices for details.

This product requires 2 × 1.5 V AAA batteries (not included).

Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place packaging inside the box and either store or dispose of safely.

In the Box

LED colour changing wall fire with bowl

Wall bracket

Clear, crystal stone effect pieces

3 wall plugs

3 large screws

2 small screws

Remote control

Instruction manual

Features

1800 W

2 heat settings: 900 W/1800 W

220–240 V

Thermal cut-out device

7 colour changing LED flame effects

Black glass fascia with bowl

Clear, crystal stone effect pieces with under bed glow

Remote control

Description of Parts



For the Wall Fire

1. LED colour changing wall fire main unit
2. Black glass fascia
3. Bowl
4. Clear, crystal effect stone pieces
5. On/Off switch

For the Remote Control

6. Remote control
7. Power button
8. 900 W button
9. 1800 W button
10. Colour button

Instructions for Use

Advice Before Fitting

Please retain all of the packaging until you have checked and counted all of the parts and the contents of the fixing pack against the parts list (In the Box).

The fixing pack contains small items, which should be kept away from young children.

It is suggested that all of the fixing pack contents are placed into a container, to reduce the risk of losing any small pieces.

Installation Guide

Do not connect the LED colour changing wall fire to the mains power supply until all of the instructions have been read, fully understood and the LED colour changing wall fire has been properly and securely fitted.

The minimum safe distances must be observed.

Do not lift the LED colour changing wall fire by the black glass fascia.

Note: Installation of the LED colour changing wall fire should be carried out by two people in order to avoid injury, damage to the property or the LED colour changing wall fire.

Wall Mounting the Attica LED Colour Changing Electric Wall Fire

STEP 1: Ensure that the LED colour changing wall fire is unplugged from the mains power supply.

STEP 2: Open the fixing pack and place all of the contents into a container. This will reduce the risk of losing any small pieces.

STEP 3: The LED colour changing wall fire is designed to be permanently fixed to a wall, at a minimum height of 300 mm. The wall bracket must be fitted horizontally and the power cord routed to the bottom right of the fire. A height of 700 mm from the bottom of the LED colour changing wall fire to the floor is recommended for optimum viewing of the fuel bed.

STEP 4: Hold the wall bracket against the wall that it will be fixed to and using a pencil, mark the positions of the screw holes onto the wall. Ensure that the markings are level and that they observe the recommended fixing dimensions.

STEP 5: Drill where the holes have been marked and insert the wall plugs, ensuring that the edge is flush with the surface of the wall.

STEP 6: Fix the wall bracket into place using the 3 large screws.

STEP 7: Carefully lift the LED colour changing wall fire and hook it to the wall bracket. Do not let go until it is secure.

STEP 8: Secure the wall bracket to the sides of the LED colour changing wall fire using the two small screws.

STEP 9: Remove the clear, crystal stone effect pieces from the packaging and arrange them into the bowl.

Note: Ensure that the mounting wall is suitable for carrying the weight of the LED colour changing wall fire. If unsure, ask a qualified engineer.

Warning: Before drilling into the mounting wall, ensure that there are no live electrical wires, water or other utility pipes. These may cause serious damage or injury. The LED colour changing wall fire must not be used if the black glass fascia is damaged.

Using the Attica LED Colour Changing Electric Wall Fire

The LED colour changing wall fire can only be operated by the remote control included.

The 'On/Off' switch on the right hand side of the LED colour changing wall fire main unit must be in the 'On' position before it can be used.

STEP 1: Plug in and switch on the LED colour changing wall fire at the mains power supply.

STEP 2: Switch on the LED colour changing wall fire using the 'Power' button on the remote control; a beep will sound, indicating that the LED colour changing wall fire has powered on and is ready to use.

STEP 3: Press the 'Colour' button to turn on the 'Flame Effect' function.

STEP 4: To change the colour of the flame effect, press the 'Colour' button until the desired option is selected.

STEP 5: Select the desired heat output by pressing the relevant heat setting switch:

To operate the LED colour changing wall fire on a low heat setting, press the '900 W' button; push it again to switch it off.

Press the '1800 W' button to operate the LED colour changing wall fire on a high heat setting; push it again to switch it off.

STEP 6: Switch off the LED colour changing wall fire using the 'Power' button on the remote control.

STEP 7: The 'On/Off' switch on the right hand side of the LED colour changing wall fire main unit must be in the 'Off' position for it to be completely turned off.

Note: The 'Flame Effect' function must be activated for the heat settings to work.

Battery Replacement

The remote control requires 2 x 1.5 V AAA batteries for use. If the battery becomes exhausted:

STEP 1: Locate the battery compartment; this is located on the back of the remote control.

STEP 2: To access the battery compartment, slide down and remove the battery cover.

STEP 3: Carefully remove the exhausted batteries and dispose of them following the instructions in the 'Battery Safety' section.

STEP 4: Place the new batteries into the slots in the battery compartment, ensuring that the polarity matches the diagram shown in the battery compartment.

STEP 5: Replace the battery cover and slide it back onto the remote control.

Note: Ensure that the battery cover is secure before use.

Thermal Cut-Out Device

The LED colour changing wall fire is fitted with a thermal safety cut-out device, built-in to prevent it from overheating. Should the LED colour changing wall fire start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the LED colour changing wall fire using the 'On/Off' switch.

STEP 2: Ensure that the LED colour changing wall fire is unplugged from the mains power supply and allow it to cool for approximately 15 minutes.

STEP 3: Clear any blockages present on the vent, being careful not to damage the LED colour changing wall fire.

STEP 4: Plug in and switch on the LED colour changing wall fire at the mains power supply.

Caution: In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this LED colour changing wall fire must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the product.

Troubleshooting

Problem	Cause	Solution
The LED colour changing wall fire is not operating. The fan is not running.	<p>The LED colour changing wall fire is not plugged in and switched on at the mains power supply.</p> <p>The thermal cut-out device has activated.</p> <p>The fuse has blown.</p>	<p>Ensure that the LED colour changing wall fire is plugged in and switched on at the mains power supply.</p> <p>Unplug the LED colour changing wall fire from the mains power supply and allow it to cool for approximately 15 minutes. Plug in and switch on the LED colour changing wall fire at the mains power supply before trying again.</p> <p>Unplug the LED colour changing wall fire from the mains power supply and replace the fuse with one that is the same amp.</p>
No heat or light is being emitted from the LED colour changing wall fire.	There may be a problem with the power supply to the LED colour changing wall fire.	Check the mains power supply by plugging in a working appliance. If the mains power supply is functional and the power cord or plug of the LED colour changing wall fire is suspected to be faulty, have it checked by a qualified electrician.
The remote control is not working.	The battery is exhausted.	Replace the battery according to the section 'Battery Replacement'.

Care and Maintenance

Always unplug the LED colour changing wall fire from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance.

Wipe the exterior of the LED colour changing wall fire with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents or scourers, as they may damage the finish of the LED colour changing wall fire.

The black glass fascia should be cleaned carefully with a soft cloth; do not use proprietary glass cleaners.

Specifications

Product code: EH1442

Supply: 220–240 V ~ 50 Hz

Power: 900/1800 W

Fuse: 13 A

Lighting: LED lamp (non-replaceable)

Notes

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{\perp}{\equiv}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\frac{\perp}{\equiv}$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\frac{\perp}{\equiv}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

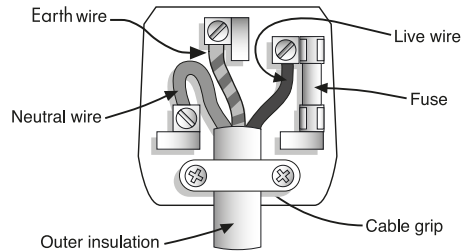

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



