

# Beldray<sup>®</sup>

Est 1872

Nobody Does It Better

## 29 Inch Mechanical Tower Fan

### Instruction Manual



THE **SCIENCE**  
BEHIND COOL



[www.beldray.com](http://www.beldray.com)



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

## Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

29 Inch Mechanical Tower Fan

2 base shells

2 base screws

Instruction manual

## Features

3 speed settings

Auto oscillation function

2 hour timer


Low noise level

40 W power

Input: 220–240 V, 50 Hz

Cable: 140 cm

## Description of Parts

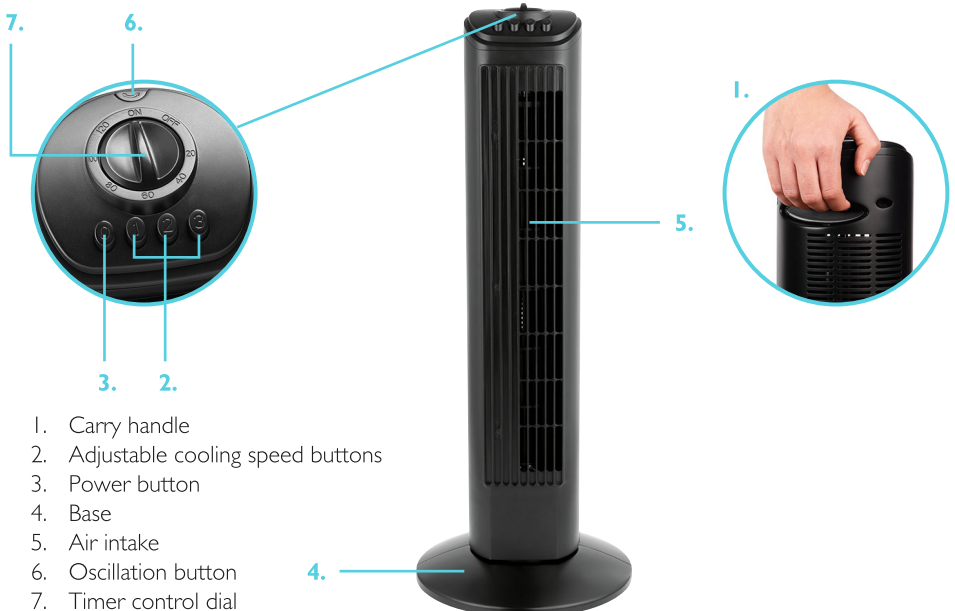

## Instructions for Use

### Assembling the 29 Inch Mechanical Tower Fan

**STEP 1:** Take the two 'stand' shell pieces that form the base and run the mains plug and power cord on the tower fan, through the guide. When assembled this allow the tower fan to stand flat on the floor.

**STEP 2:** Fit together the two 'stand' shells to form the base with the power cord now 'locked' into position.

**STEP 3:** Insert the two base screws, tightening in a clockwise direction to secure.

**STEP 4:** Attach the base onto the bottom end of the tower fan, ensuring that the locking tabs align with the corresponding slots and then twist the base in an anticlockwise direction to secure it into position. When assembled, the base should curve downwards and sit flat when the tower fan is upright.

**Note:** It may be necessary to lay the tower fan on a flat, stable surface to attach the base.

### Using the 29 Inch Mechanical Tower Fan

**STEP 1:** Ensure that the tower fan is unplugged from the mains power supply.

**STEP 2:** Place the tower fan on a flat, stable surface, ensuring that there is sufficient distance between the tower fan and any objects that could get damaged or caught in the rotating fan blades.

**STEP 3:** Plug in and switch on the tower fan at the mains power supply.

**STEP 4:** Switch on the tower fan by turning the timer control dial in an anticlockwise direction to the 'ON' position.

**STEP 5:** To use the tower fan for a fixed amount of time, turn the timer control dial in a clockwise direction to the required position. Once set, the timer must run its course but if necessary can be stopped by pressing the 'Power' (0) button.

**STEP 6:** Select the desired cooling speed by pressing any one of the adjustable cooling speed buttons numbered 1–3, 3 being the strongest cooling speed.

**STEP 7:** Activate the oscillation function by pressing the oscillation button; the tower fan will begin to turn left and right. To stop the tower fan from turning, press the oscillation button once more.

**STEP 8:** Turn off the tower fan by pressing the 'Power' (0) button.

**Caution:** Do not cover the tower fan.

**Warning:** Never insert objects through the grill whilst the tower fan is running. Do not attempt to stop the timer by turning the timer control dial to the 'OFF' position as this could damage the tower fan; instead press the 'Power' (0) button. Keep the air intake of the tower fan free from other objects that might get damaged or drawn in by it.

### Care and Maintenance

Always wait until the tower fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

Wipe the tower fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the tower fan in water or any other liquid.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the tower fan, as this may cause damage.

### Specifications

Product Code: EH1609

Input: 220–240 V~50 Hz

Output: 40 W

Notes:



## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

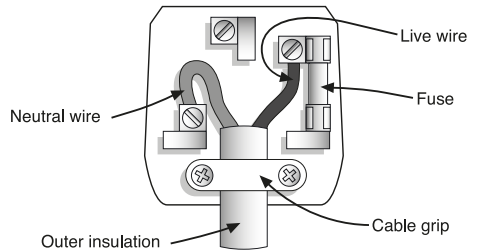

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 2 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





