 


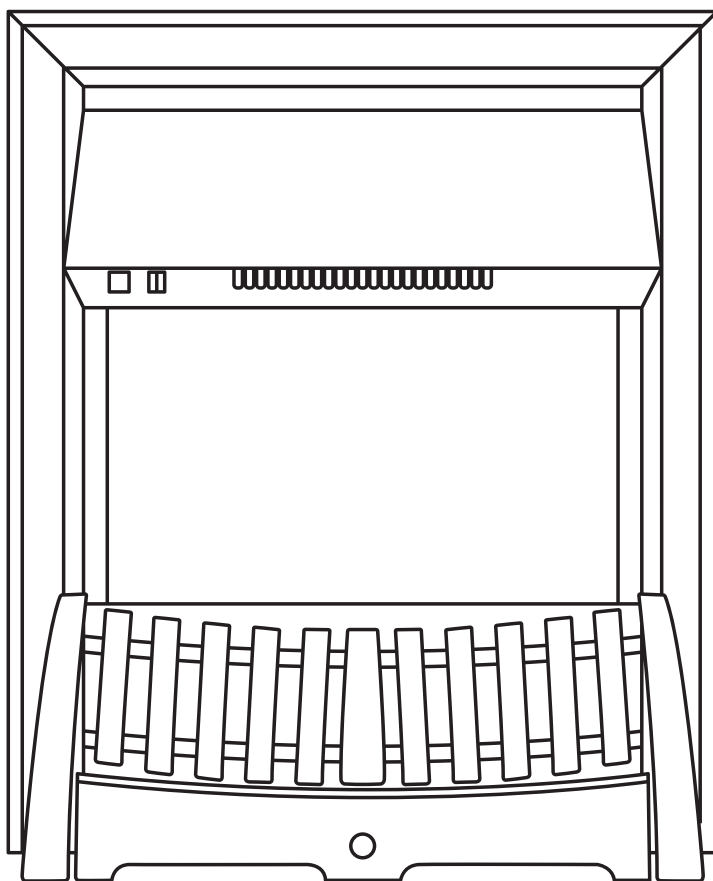

## Inset Electric Fire

### Instruction Manual



THE **SCIENCE**  
BEHIND HEAT



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the product and its power supply cord out of reach of children. Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep the product away from other heat emitting products.

Keep furniture, curtains and other flammable material at least 1 metre away from the product.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not use the product for anything other than its intended use.

Do not use this product for drying clothes.

Do not cover this product.

Do not use this product outdoors.

Do not attempt to move the product whilst it is in use.

Do not touch the product during use, as it will get very hot and could cause injury.

Do not block the air intake of the product; place in an open, well-ventilated space.

Do not put objects into any of the openings.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function.

The product should be used on a stable, heat-resistant surface.

The product must not be located immediately below or next to a mains power supply.

Always unplug the product after use and before any cleaning or maintenance.

Always ensure that the product has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended. This product is intended for domestic use only. It should not be used for commercial purposes.

**Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Hot surface. Do not touch the hot section or heating components of the product.

**Warning:** In order to avoid overheating, do not cover the product. This product is not equipped with a device to control the room's temperature. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Normal voltage is still present in this product as long as the product is connected to the electrical source. Always unplug the product when not in use.

## Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place packaging inside the box and either store or dispose of safely.

## In the Box

Inset Electric Fire

Spacer kit

Ø 4 x 10 mm screws (qty. 6)

Instruction manual

## Features

 
2 heat settings: 1000 W/2000 W

Thermal cut-out device

Coal effect fuel bed

'Flame without heat' setting

## Description of Parts

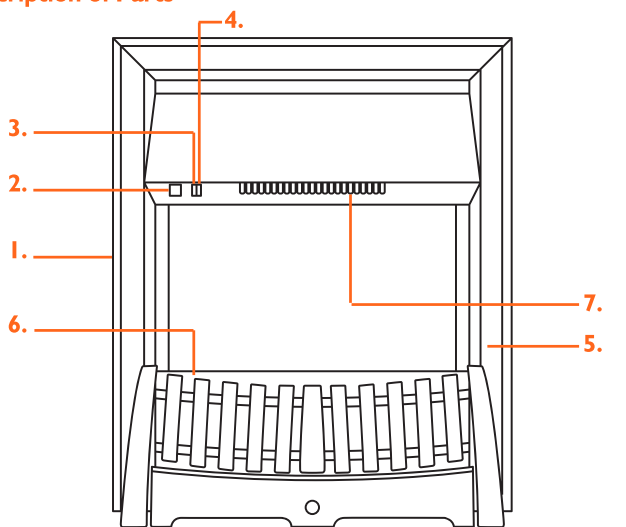

- |    |                          |
|----|--------------------------|
| 1. | Inset Electric Fire      |
| 2. | On/off switch            |
| 3. | Low heat setting switch  |
| 4. | High heat setting switch |

- |    |             |
|----|-------------|
| 5. | Fascia      |
| 6. | Fuel bed    |
| 7. | Heating fan |

## Instructions for Use

### Before First Use

Place the Inset Electric Fire onto a flat, stable, heat-resistant surface at least 1 metre away from furniture, curtains or any other flammable materials.

If placing the Inset Electric Fire in an alcove, ensure that there is at least 50 mm of space above and 50 mm of space each side, to ensure good air circulation.

The Inset Electric Fire must not be located over a mains power socket. The mains power socket must always be accessible, in order to disconnect the Inset Electric Fire from the mains power supply before cleaning, maintenance or when replacing a bulb.

**Note:** When using the Inset Electric Fire for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Inset Electric Fire.

### Advice Before Fitting

Please retain all of the packaging until you have checked and counted all of the parts and the contents of the fixing pack against the parts list (In the Box).

The fixing pack contains small items, which should be kept away from young children. It is suggested that all of the fixing pack contents are placed into a container, to reduce the risk of losing any small pieces.

### Installation Guide

Do not connect the Inset Electric Fire to the mains power supply until all of the instructions have been read, fully understood and the Inset Electric Fire has been properly and securely fitted.

 
The minimum safe distances must be observed.

**Note:** Installation of the Inset Electric Fire should be carried out by two people, in order to avoid injury, damage to the property or the Inset Electric Fire. The Inset Electric Fire must only be operated on a flat, stable, heat-resistant surface.

The Inset Electric Fire is suitable for installation into a location that has an opening size within the guidelines shown below:

| Dimension | Minimum | Maximum |
|-----------|---------|---------|
| Width     | 390 mm  | 483 mm  |
| Height    | 555 mm  | 590 mm  |
| Depth     | 110 mm  | 125 mm  |

The minimum clearance required to allow for sufficient ventilation is shown below:

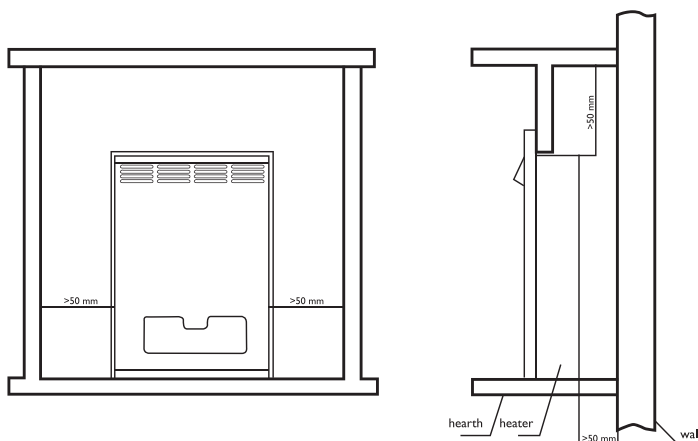

### Installing the Inset Electric Fire onto a Hearth

The Inset Electric Fire can be attached to a hearth (not included) using the spacer kit provided.

**STEP 1:** Check that the Inset Electric Fire is switched off and unplugged from the mains power supply.

**STEP 2:** Remove the back panel from the hearth (not included) as per the manufacturer's instructions and lay it horizontally on a flat surface.

**STEP 3:** Carefully place the spacer kit against the back panel, ensuring that it is in the position that it will be fitted. Using a pencil, mark the inside edge of the spacer kit onto the back panel. The markings need to be clearly visible.

**STEP 4:** Move the spacer kit away from the back panel and using a saw (not provided), carefully cut along the markings to remove the excess material.

**STEP 5:** Lay the back panel down into a horizontal position once more, place the spacer kit over the cut-out and then secure into position using screws (not included).

**STEP 6:** Reattach the back panel to the hearth as per the manufacturer's instructions.

**STEP 7:** Checking that the screw holes on the spacer kit align with those on the rear of the Inset Electric Fire, secure the spacer kit to the Inset Electric Fire using the six  $\varnothing 4 \times 10$  mm screws (included).

**STEP 8:** Place the hearth with the attached Inset Electric Fire into position against the wall as per the manufacturer's instructions.

## Removing the Inset Electric Fire from a Hearth

**STEP 1:** Remove the hearth with the attached Inset Electric Fire from the wall as per the manufacturer's instructions.

**STEP 2:** Using a screwdriver (not included), detach the spacer kit from the Inset Electric Fire.

**STEP 3:** Unscrew the spacer kit from the back panel and carefully lift it away.

## Using the Inset Electric Fire

The Inset Electric Fire is operated by three switches (see the table below). The power switch and the low heat setting switch are located on the left hand side of the Inset Electric Fire main unit and the high heat setting switch is located on the right.

|                          | Symbol shown | Operation                              |
|--------------------------|--------------|--|
| Power switch             | ○<br>        | Turns the power on and off.            |
| Low heat setting switch  | ⌋            | Powers the low heat setting (1000 W).  |
| High heat setting switch | ⌋⌋           | Powers the high heat setting (2000 W). |

## Instructions for Use

**STEP 1:** Plug in and switch on the Inset Electric Fire at the mains power supply.

**STEP 2:** Switch on the Inset Electric Fire using the power switch located on the left hand side of the first insert main unit.

**STEP 3:** Press the power switch to the 'I' position to activate the 'flame without heat' setting.

**STEP 4:** Select the desired heat output by pressing the relevant heat setting switch:

To operate the Inset Electric Fire on a low heat setting (1000 W), press the ⌋ switch; press it again to turn it off.

To operate the Inset Electric Fire on a high heat setting (2000 W), press the ⌋⌋ switch; press it again to turn it off.

To operate the Inset Electric Fire on a 'flame without heat' setting, ensure that both the low and the high heat setting switches are turned off.

**STEP 5:** Switch off the Inset Electric Fire using the power switch located on the left hand side of the Inset Electric Fire main unit, ensuring that the power switch is in the 'O' position.

**Note:** The high heat setting can only be activated when the low heat setting is switched on.

The Inset Electric Fire must be switched on and the power switch must be in the 'I' position for the low and high heat settings to activate.



## Thermal Cut-Out Device

The Inset Electric Fire is fitted with a thermal safety cut-out device, built-in to prevent it from overheating. Should the Inset Electric Fire start to overheat (e.g. due to blocked air vents), the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

**STEP 1:** Switch off the Inset Electric Fire using the power switch, ensuring that the power switch is in the 'O' position.

**STEP 2:** Ensure that the Inset Electric Fire is unplugged from the mains power supply and allow it to cool for approximately 15 minutes.

**STEP 3:** Clear any blockages present on the vent, being careful not to damage the Inset Electric Fire.

**STEP 4:** Plug in and switch on the Inset Electric Fire at the mains power supply.

**Caution:** In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this Inset Electric Fire must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the product.

## Troubleshooting

| Symptom                                 | Solution  |
|---|---|
| The Inset Electric Fire will not start. | Ensure that the Inset Electric Fire is connected to the correct mains power supply and is turned on.<br><br>Check that the safety cut-off switch has not been activated by waiting 15 minutes and ensuring that there are no blockages before attempting to restart the Inset Electric Fire.<br><br>Disconnect the Inset Electric Fire from the mains power supply and check the plug to see if the fuse needs replacing. |

## Care and Maintenance

Always unplug the Inset Electric Fire from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance.

Wipe the exterior of the Inset Electric Fire with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents or scourers, as they may damage the finish of the Inset Electric Fire.

## Specifications

Supply: 220–240 V ~ 50 Hz

Power: 1000 W/2000 W

Lighting: LED non-replaceable

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

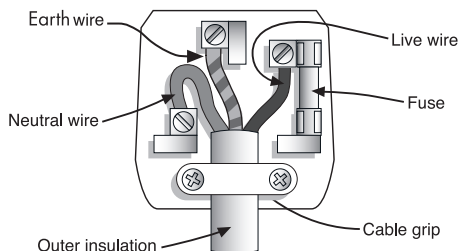

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Distributed by:  
UP Global Sourcing,  
Victoria Street, Manchester OL9 0DD, UK  
+44 (0)333 577 9820  
[customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.  
CDI20716/MD090816/V1