

est 1872
Beldray[®]
at home



6 LITRE
AIR COOLER
INSTRUCTION MANUAL

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a strong odour is emitted from the product, turn it off and unplug it from the mains power supply.

Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The unit should be righted promptly and dried thoroughly before it is used again.

Care and Maintenance

Always wait until the air cooler has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

STEP 1: The water tank must be drained of water after each use.

To do so, carefully pull the water tank out from the air cooler.

Holding a suitable vessel underneath, remove the drain plug and catch the excess water. Once the water tank has been drained, wipe away any excess water with a soft cloth.

STEP 2: To clean the evaporation pad and mesh filter, remove the two securing screws on the back of the air cooler. The filter carrier can be pulled away from the air cooler; remove any loose fibres by hand, taking care not to pierce the mesh filters. The mesh filter and evaporation pad can be washed in warm water with a mild detergent and a soft brush; allow to dry thoroughly before use.

STEP 3: Before replacing the evaporation pad and mesh filter, check the drain hole for any debris or blockages and remove if necessary. Any limescale deposits in the water tank can be removed with a soft, damp cloth and mild detergent.

STEP 4: Wipe the air cooler with a soft, damp cloth and allow to dry thoroughly. Replace the filter carrier and re-insert the securing screws.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the air cooler, as this may cause damage.

Note: Clean the air cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.

Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

6 Litre Air Cooler

2 ice packs

Instruction manual

Features

Ioniser function

360 ° wheels

Carry handle

Water level indicator

2 ice packs

Description of Parts



Instructions for Use

Filling the 6 Litre Air Cooler

Before filling the air cooler, make sure that it is switched off and unplugged from the mains power supply.

STEP 1: Open the water tank at the back of the air cooler by twisting the lock and carefully pulling the water tank out.

STEP 2: Check that the drain plug is securely plugged into the water tank.

STEP 3: Using a suitable measuring vessel, fill the water tank with cold, clean water. The water level should be no lower than the min. fill line and no higher than the max. fill line.

STEP 4: The two ice packs can be used to achieve quicker, additional cooling; they should be two thirds full of water and left to freeze for approx. 8 hours before use. Place them into the water tank before it has been filled with water.

STEP 5: To close the water tank, carefully push it back into position and twist the lock to make sure that it is secure.

Caution: Do not fill the air cooler with any liquid other than cold, clean water. Do not use any additives in the water.

Using the 6 Litre Air Cooler

STEP 1: Plug in and switch on the air cooler at the mains power supply.

STEP 2: To turn on the air cooler, select the desired cooling speed by pressing any one of the adjustable cooling speed buttons numbered 1-3, 3 being the strongest cooling speed.

STEP 3: Activate the swing function by pushing the swing button; the vertical grills of the air cooler will begin to turn left and right. To stop the vertical grills from turning, press the swing button once more.

STEP 4: To regulate the airflow up or down, manually adjust the horizontal grills on the front of the air cooler.

STEP 5: Cool, humidify and purify air by pressing the cool/ioniser button. The air cooler will begin to circulate water across the evaporation pad. To stop the function, press the cool/ioniser button once more.

STEP 6: Turn off the air cooler by pressing '0'.

Note: The air cooler is not designed to significantly reduce the room temperature; it provides a cool breeze.

When positioning the air cooler, do not lift it by the front panel; move it using the handles and the 360 ° castor wheels.

Apply the brakes on the 360 ° castor wheels to secure the air cooler in position.

Warning: Do not use the humidifier function when the water tank is empty or if it is filled below the min. fill line. This product should not be run continuously for more than 10-12 hours at any one time. Check the water level regularly.

Storage

Drain the water tank and allow the air cooler to cool before storing in a cool, dry place. Loosely wrap the cord around the cable holder; do not wrap it tightly as this could cause damage.

Troubleshooting

Problem	Possible Cause	Solution
The air cooler will not power on.	The air cooler is not connected to the mains power supply.	Plug in and switch on the air cooler at the mains power supply.
	The fuse has blown.	Replace the fuse with one of the same rating.
	The desired cooling speed has not been selected.	Press any one of the cooling speed buttons numbered 1-3, 3 being the strongest cooling speed.
No air is blowing from the air cooler.	The desired cooling speed has not been selected.	Press any one of the cooling speed buttons numbered 1-3, 3 being the strongest cooling speed.
The air blowing from the air cooler is not strong enough.	The cooling speed is set too low.	Select a higher cooling speed by pressing the relevant cooling speed button.
	The mesh filter or evaporation pad is blocked.	Clean the mesh filter or evaporation pad following the instructions in the section entitled 'Care and Maintenance'.

The vertical grills are not turning left and right.	The swing function has not been selected.	Activate the swing function by pressing the swing button.
The vertical grills are not facing forward.	The swing function has been stopped when the vertical grills were mid-movement.	Press the swing button and let the vertical grills move until they are facing forwards, then push the swing button once more to stop the swing function.
The air cooler is not cooling the air.	The humidifier function has not been selected.	To activate the humidifier function, press the cool/ioniser button.
	The water tank has not been filled with enough water.	Fill the water tank to the max. fill mark.
	The ice packs are not two thirds full with water.	Fill the ice packs with water so that they are two thirds full; allow to freeze for approx. 8 hours before use.
	Ambient humidity is high.	The air cooler will not be able to cool due to the high humidity in the air.

Specifications

Product code: EH3056STK

Input: 220-240 V ~ 50 Hz

Output: 65 W

Water tank capacity: 6 L

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

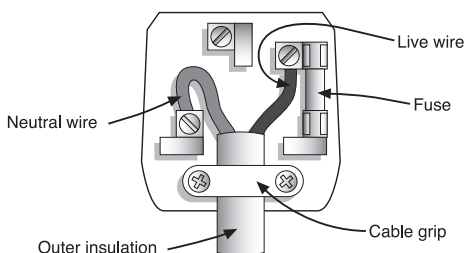

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.


Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

* To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

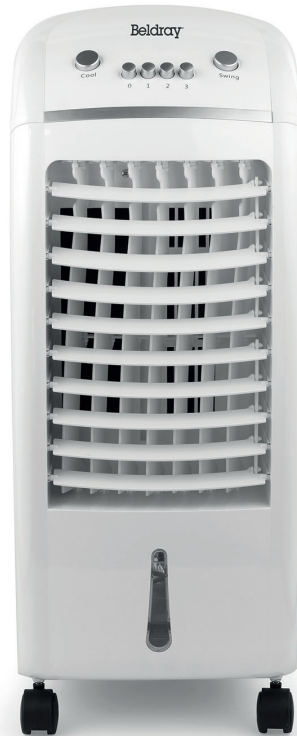

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD171218/MD000000/V1

