

# Beldray<sup>®</sup> est 1872

Our **portable,**  
**powerful &**  
**durable**  
tower fan



**32 INCH**  
**TOWER FAN**  
INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy – children should be supervised to ensure they do not play with the product.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Normal voltage is still present in this product as long as the product is connected to the electrical source.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause

damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.

Only lift the product with the carry handles provided.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

## Care and Maintenance


Always wait until the tower fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the tower fan, as this may cause damage.

Wipe the tower fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the tower fan in water or any other liquid.

## Description of Parts

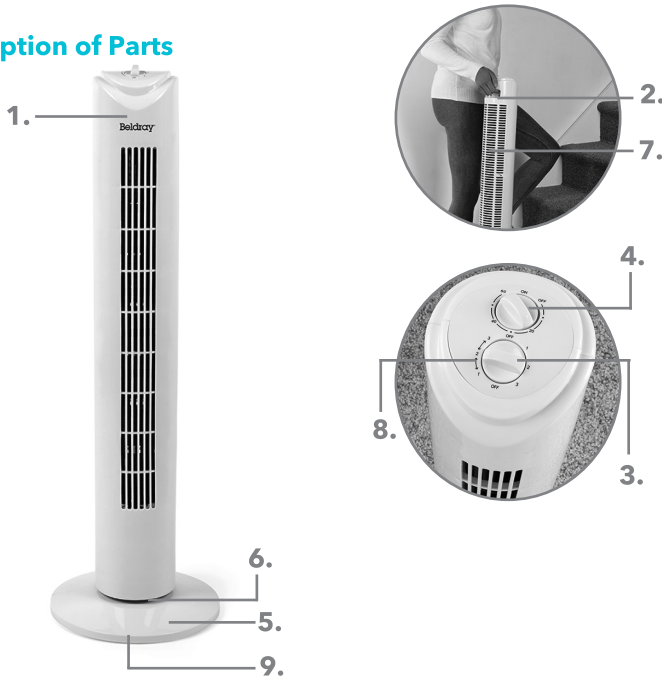

- |                                  |                           |
|----------------------------------|---------------------------|
| 1. 32 Inch Tower Fan main unit   | 6. Base locking collar    |
| 2. Carry handle                  | 7. Air intake             |
| 3. Adjustable cooling speed dial | 8. Oscillation speed dial |
| 4. Timer control dial            | 9. Power cord holder      |
| 5. Base                          |                           |

## Assembling the 32 Inch Tower Fan Base

**STEP 1:** Remove the base locking collar from the screw threaded post on the bottom of the tower fan main unit by twisting it in an anticlockwise direction.

**STEP 2:** Take the two base halves and attach them together, making sure that the smooth sides are facing the bottom of the tower fan. The power cord should run through the large hole formed by the centre of the base halves.

**STEP 3:** Insert the two smaller base screws into the two outer holes along the adjoining line. Tighten the base screws by turning in a clockwise direction.

**STEP 4:** Attach the base to the bottom of the tower fan main unit so that the centre of the base slots onto the screw threaded post. The smooth side of the base should face upwards. There is an indent on the base to allow the power cord to sit; make sure the indent is aligned with the power cord at the back of the tower fan.

**STEP 5:** Secure the base locking collar onto the screw threaded post by turning it in a

clockwise direction until tight. When assembled, the base should curve downwards and sit flat when the tower fan is upright

**Note:** It may be necessary to lay the tower fan on a flat, stable surface to attach the base.

## Instructions for Use

Before connecting to the mains power supply, place the assembled tower fan onto a flat, stable surface, allowing for sufficient distance between the tower fan and any objects that could get damaged or caught in the rotating fan blades.

## Using the 32 Inch Tower Fan

**STEP 1:** Plug in and switch on the tower fan at the mains power supply.

**STEP 2:** To turn on the tower fan, select the desired cooling speed by turning the adjustable cooling speed dial in a clockwise direction until the desired speed is selected. Speed setting '3' is the highest cooling speed setting.

**STEP 3:** To use the tower fan for a set period of time, turn the timer control dial in a clockwise direction to select the desired time. Once set, the timer control will run its course but can be interrupted and stopped by turning the timer control dial in an anticlockwise direction to the 'OFF' position.

**STEP 4:** Activate the oscillation function by turning the oscillation speed dial in an anticlockwise direction until the desired speed is selected; follow the arrows indicating speed to the left of the oscillation speed dial.

**STEP 5:** Turn off the fan by turning the adjustable cooling speed dial and the timer control dial to the 'OFF' positions.

**Caution:** Do not cover the tower fan.

This is not a desk fan. Do not place this fan onto a desk as this could affect the stability of the product.

## Specifications

Product Code: EH3410

Input: 220-240 V~50 Hz

Output: 45 W

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

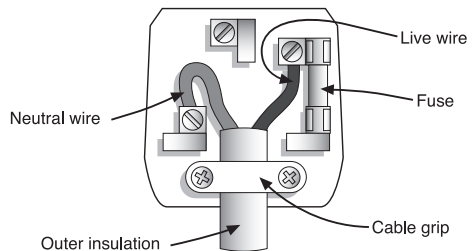

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**.

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.







\*To be eligible for the extended guarantee, go to **www.beldray.com** and register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

[www.beldray.com](https://www.beldray.com)

©Beldray Trademark. All rights reserved.

CD191020/MD000000/V1