

Beldray^{est 1872}®

Our adjustable,
stylish & durable
desk fan



4 INCH
USB DESK FAN
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future use.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the power supply before connecting the product.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy – children should be supervised to ensure they do not play with the product.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Normal voltage is still present in this product as long as the product is connected to the electrical source.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.

Only lift the product with the carry handles provided.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a strong odour is emitted from the product, turn the unit off and unplug it from the power supply.

Care and Maintenance


Always wait until the desk fan has stopped completely and unplug it from the power supply before performing any cleaning or user maintenance.

Wipe the desk fan with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the desk fan in water or any other liquid.

Do not use abrasive cleaning solvents, polishes or scouring pads to clean the desk fan, as this may cause damage.

Description of Parts

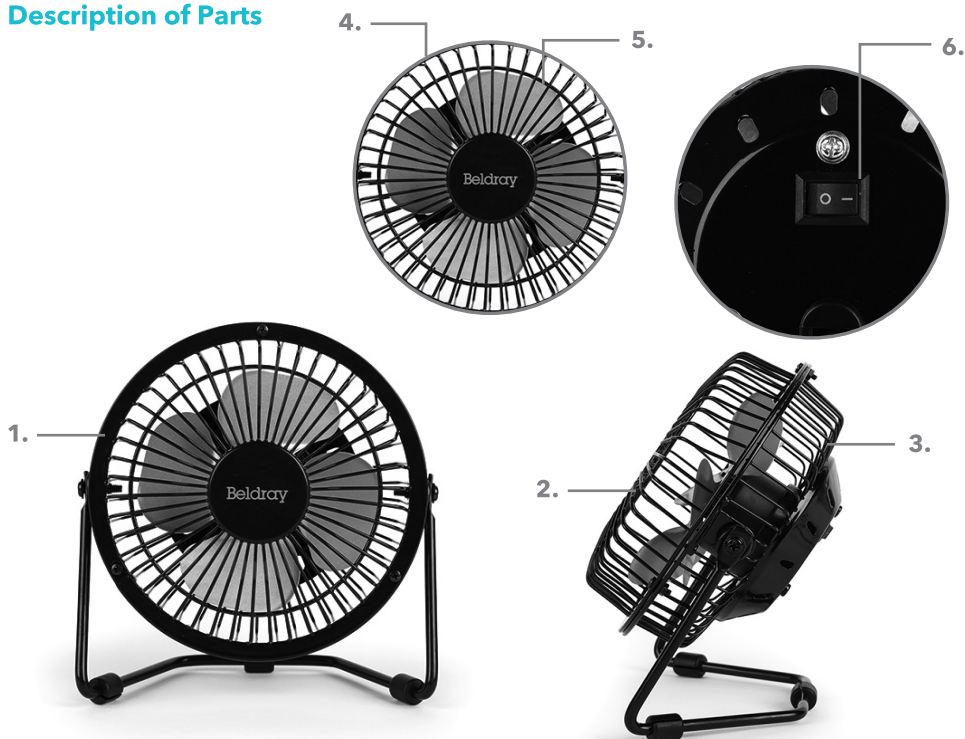

- 1. 4 Inch Mini USB Desk Fan
- 2. Front grill
- 3. Rear grill

- 4. Fan blade unit
- 5. Fan blades
- 6. On/off switch ('I'/'O')

Instructions for Use

Before connecting to the power supply, place the desk fan onto a flat, stable surface, allowing for sufficient distance between the desk fan and any objects that could get damaged or caught in the rotating fan blades.

Using the 4 Inch Mini USB Desk Fan

STEP 1: Plug the desk fan into a USB port on a compatible device.

STEP 2: To turn on the desk fan, flick the power switch to 'I'.

STEP 3: Turn off the desk fan by flicking the power switch to 'O'.

Note: The desk fan can be tilted vertically up to 180 ° to adjust the direction of the airflow.

Warning: Do not cover the fan head.

Troubleshooting

Problem	Cause	Solution
The blades are failing to revolve.	The desk fan is not securely plugged into the compatible device.	Make sure that the compatible device the desk fan is plugged into is turned on.
	A USB hub is being used; there is too much power being drawn from that port.	Switch to a USB port that is directly connected to the compatible device.

Specifications

Product code: EH3493

Interface: USB 2.0 / 3.0

Voltage: DC 5 V 1 A

Output: 10 W

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD200121/MD000000/V1