





Please read all of the instructions carefully and retain for future reference.

Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

I plastic spin wringer

I bucket

I mop handle

2 microfibre mop heads

Instruction manual

Features

Rotates 360 degrees to spin dry Microfibre mop head works wet or dry Makes light work of cleaning

Safety instructions

Keep this product out of reach of children.

This product is not a toy.

This product is not recommended for use with bleach, as this will cause the metal fittings to corrode. Use only the recommended amount of detergent or disinfectant (according to the manufacturer's instructions) when filling the bucket; using too much will result in excessive suds and prevent the mop head from being rinsed or spun efficiently.

Do not fill the bucket beyond the maximum fill line; overfilling will prevent the mop head from being spun dry.

Do not use the product for anything other than its intended use.

This product is intended for household use only. It should not be used for commercial purposes.

Caution: Take care when walking on wet surfaces; always wear appropriate footwear.

Warning: Exercise extreme caution when carrying the bucket when it is filled with hot water.



Before First Use

Before using the spin mop for the first time, attach the plastic spin wringer to the bucket and then assemble the mop, by pressing the microfibre mop head firmly onto the circular base of the mop handle, until it has secured into position.

Instructions for Use

Fill the bucket with a solution made up of detergent or disinfectant and water, according to the manufacturer's instructions. Take care not to fill past the maximum fill line, marked on the inside of the bucket.

Submerge the mop in the cleaning solution, then it lift out and place it into the plastic spin wringer. To operate the spin function, simply push the mop handle downwards. This will automatically operate the spin function. Repeat this process until the microfibre mop head is rid of any excess cleaning solution.

Use the mop to clean the desired surface, rinsing the mop in the cleaning solution regularly and repeating the spinning process.

After use, empty the bucket and fill it with clean water, submerge the mop and spin it several times to remove any used cleaning solution. Empty the bucket and rinse a final time with cold, clean water.

Note: Take care not to use too much detergent or disinfectant, as using too much will result in excessive suds and will prevent the mop head from being rinsed or spun dry efficiently.

Note: The mop and bucket should be rinsed clean after every use.

Operating the Mop on Dry Surfaces

The microfibre mop head can be used on dry surfaces as a duster. Ensure that the mop head is completely clean and dry before using to clean any dry surfaces.

Changing the Mop Head

When the mop head has been cleaned and is completely dry, simply pull off the mop head from the circular base of the mop handle and discard. Press the new mop head firmly onto the circular base of the mop handle, until it has secured into position.

Storage

Ensure that the mop is clean and dry.

Store the mop in the bucket.

If this product proves unsatisfactory or if you have any further queries about this product, please contact your retailer.





Imported and Distributed by:
UP Global Sourcing,
Victoria Street,
Manchester
OL9 0DD, UK.

Please retain all instructions for future reference. Made in China. CD010414/MD000000/V1