

**Beldray**<sup>®</sup> est 1872  
at home



## **ELECTRIC** CITRUS JUICER

INSTRUCTION MANUAL



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Care and Maintenance

**STEP 1:** Switch off and unplug the juicer from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the juicer base unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 3:** Wash all of the accessories, in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the juicer base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the juicer, as this could cause damage.

The juicer is not suitable for use in a dishwasher.

**Note:** Always clean the juicer immediately after each use.

**Warning:** Exercise caution when attaching, removing, cleaning or storing the attachments.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place any packaging inside of the box and either store or dispose of safely.

## In the Box

Electric Citrus Juicer base unit

Juicer jug

Small juicing cone

Large juicing cone

Filter basket

Lid

## Features

25 W power

Two interchangeable cone attachments for smooth or juicy bits

750 ml jug with pouring lid

Adjustable filter perfect for small or large fruits

Easy to clean

## Description of Parts



1. Electric Citrus Juicer base unit
2. Juicer jug
3. Small juicing cone
4. Large juicing cone
5. Accessory adaptor

6. Filter basket
7. Filter adjuster
8. Lid
9. Spout
10. Motor shaft

## Before First Use

Before using the juicer for the first time, wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Wipe the juicer base unit in water; wipe it clean with a soft, damp cloth and dry thoroughly. Do not immerse the juicer base unit in water or any other liquid.

**Note:** When using the juicer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the juicer.

## Assembling the Electric Citrus Juicer

**STEP 1:** Check that the juicer is switched off and unplugged from the mains power supply. Position the juicer base unit onto a flat, stable surface, at a height that is comfortable for the user.

**STEP 2:** Fit the accessory adaptor onto the motor shaft so that tabs align and press until it clicks into place.

**STEP 3:** Position the juicer jug onto the base, aligning the tabs and rotating in a clockwise direction until it locks into place.

**STEP 4:** Assemble the filter basket by aligning the filter adjuster with the slot and carefully pushing it into place until it clicks. Fit the assembled filter basket onto the base unit by lining up the tab with the handle.

**STEP 5:** Place the small juicing cone onto the accessory adaptor. If required, place the large juicing cone on top of the small juicing cone, aligning the indents to secure into position. The large juicing cone can be used for larger citrus fruits.

**Warning:** Do not connect the juicer to the mains power supply until it is fully assembled.

## Using the Citrus Juicer

**STEP 1:** Position the juicer base unit onto a flat, stable surface, at a height that is comfortable for the user.

**STEP 2:** Prepare the citrus fruit by cutting it in half.

**STEP 3:** Select the required juicing setting using the filter adjuster; for smoother juice with less pulp, use the smaller filter setting.

**STEP 4:** Plug in and switch on the juicer at the mains power supply.

**STEP 5:** Press the citrus fruit onto the juicing cone. When pressure is applied, the juicing cone will rotate to extract the juice from the fruit.

**STEP 6:** Switch off and unplug the juicer from the mains power supply.

**STEP 7:** Remove the juicing cone and filter basket from the juicer jug by lifting them away.

**STEP 8:** Remove the juicer jug from the base unit by rotating it in an anticlockwise direction and lifting it away.

**STEP 9:** Pour the juice and serve.

**Caution:** Do not juice for long periods of time. Max. operation time is 15 seconds; allow the juicer to cool for 15 seconds before using it again.

**Warning:** Only use the juicer with citrus fruit applied directly to the juicing cone; never press hands directly onto the juicing cone.

### **Storage**

Check that the juicer is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the juicer; wrap it loosely to avoid causing damage.

### **Specifications**

Product code: EK3071BAZ

Operating voltage: 220 V–240 V ~ 50/60 Hz

Power: 25 W



**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.com](mailto:customersupport@beldray.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

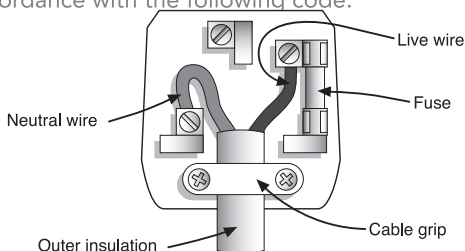

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



## CONGRATULATIONS ON YOUR PURCHASE!

The Beldray brand stands for reliability, trust and consumer loyalty. Our fantastic range of products includes everything that you need to prepare and create great tasting food.

View our full range of household essentials at [www.beldray.com](http://www.beldray.com)

**Beldray**  
at home

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
[customersupport@beldray.com](mailto:customersupport@beldray.com)  
©Beldray Trademark. All rights reserved.



Please retain all instructions for future reference.  
Made in China.

CD100518/MD000000/V1