


# User manual

## Vacuum cleaner

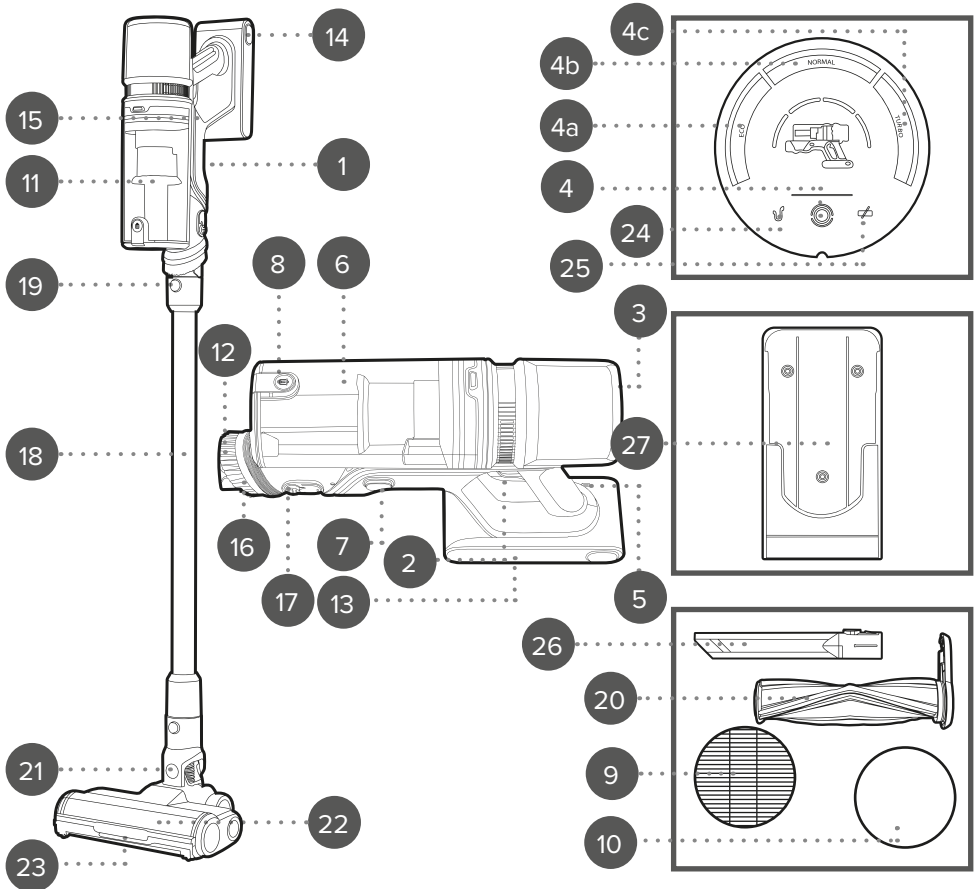

1. Vacuum cleaner main unit
2. Power trigger
3. LED display
4. Touch function button
  - 4a. Eco
  - 4b. Normal
  - 4c. Turbo
5. LED indicator/charging indicator light
6. Dust container
7. Dust container release button (PUSH)
8. Dust container cover release latch
9. HEPA filter
10. Foam filter
11. Filter cone
12. Air inlet
13. Battery

14. Battery release button
15. Charging port
16. Extendable brush tool
17. Brush adjustment buttons
18. Tube
19. Tube release button
20. Floor brush
21. Floor brush release button
22. Brush bar release tab
23. Floor brush LED lights
24. Air inlet clogging protection
25. Floor brush block protection
26. Crevice tool
27. Wall mount storage base

Please retain instructions for future reference.

## Dos and don'ts

### DO:

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

Charge the vacuum cleaner fully before use.

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Clean the dust container and HEPA filter at least every two weeks with clean water to keep the vacuum cleaner working efficiently.

Check the extension tube regularly for signs of damage.

### DON'T:

Immerse the extension tube in water.

Use the vacuum cleaner without the HEPA filter, foam filter, filter cone or dust container in position.

Use attachments if they are loose, damaged or broken.

## Care and maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Keep the HEPA filter clean and replace when it becomes worn.

## Instructions for use

### Before first use

Before using the vacuum cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

### Installing the wall mount storage base

The wall mount storage base can be fixed to a wall for convenient storage. If you wish to store the vacuum cleaner whilst it is charging, check that the wall mount storage base is close enough to the mains power supply to avoid overstretching the charging wire.

**STEP 1:** Using a pencil, mark the positions of three screw holes on the desired surface. The gap between the markings should form a straight line.

**STEP 2:** Using a suitable drill bit, drill pilot holes into the markings. Consult a qualified professional if required.

**STEP 3:** Firmly place the wall plugs into the pilot holes so that they sit flush with the surface of the wall.

**STEP 4:** Position the wall mount storage base onto the surface, aligning the holes on the surface with those on the wall mount storage base.

**STEP 5:** Insert the screws provided through the wall mount storage base and into the wall and tighten so that the wall mount storage base sits flush with the surface.


**STEP 6:** Once the wall mount fixed into place, place the vacuum cleaner into position ensuring the battery pack has been slotted in.



**NOTE:** Check that the chosen surface is strong enough to support the wall mount storage base and vacuum cleaner. Make sure that the wall mount is secured at an adequate height to store the fully assembled vacuum cleaner.



**CAUTION:** Check that there are no electrical, plumbing or gas supplies situated beneath the surface of the wall. These services normally run vertically or horizontally behind the wall, and the electrical wiring will radiate from the socket, possibly in more than one direction. Testers are available from reputable DIY stores. Consult a qualified professional if required.

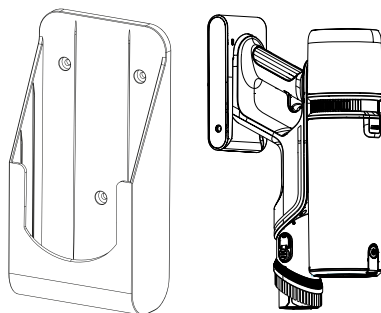

## Charging the vacuum cleaner

Before using the vacuum cleaner, it must be charged for approx. 5 hours. Subsequent charging times will vary dependent upon use.

**STEP 1:** Before connecting to the mains power supply, attach the battery pack by aligning it with the main unit and sliding into place until it clicks.

**STEP 2:** Connect the mains power adaptor to the charging port on the battery pack.

**STEP 3:** Plug in and switch on the mains power adaptor at the mains power supply; the LED indicator/charging indicator light will flash green during charging and remain illuminated once the battery is fully charged. The LED display will also illuminate to indicate the charging status.

**STEP 4:** Alternatively, the battery pack can be charged separately. Remove the battery from the vacuum cleaner main unit by pressing and holding the battery release catch and sliding the battery pack out of the main unit. Follow steps 2 and 3. To refit the battery pack, realign it with the main unit and press the release catch down whilst sliding the battery pack into place until it clicks.

**STEP 5:** Unplug the mains power adaptor from the mains power supply once the battery is fully charged. Disconnect the mains power adaptor from the charging port on the battery pack.



**NOTE:** Whilst charging, the battery pack may become warm.



**WARNING:** Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

## Using the vacuum cleaner

**STEP 1:** Check that the vacuum cleaner is disconnected from the mains power adaptor after unplugging it from the mains power supply. Make sure the battery pack is securely attached to the vacuum cleaner main unit.

**STEP 2:** Turn on the vacuum cleaner by pressing the power trigger; this will engage the minimum power setting, 'ECO'.

**STEP 3:** Once the vacuum cleaner has been switched on, press the touch function button once to cycle between the different power settings 'ECO', 'NORMAL' and 'TURBO'.

**STEP 4:** To turn off the vacuum cleaner, press the power trigger once more to switch off the vacuum cleaner.




**WARNING:** The dust container must be closed before use.

## LED display features


### Charge protection

When the vacuum cleaner is fully charged and activated, the charge level will display four different coloured charging bars. If the charge level drops below 10%, the LED indicator/charging indicator light will flash twice per second to indicate that the vacuum cleaner needs to be charged.

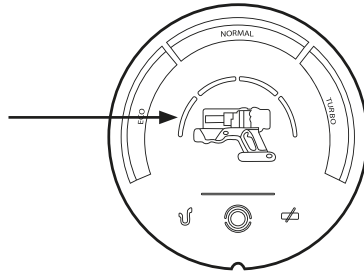


### Floor brush blocking protection

If the floor brush becomes clogged, the vacuum cleaner will not shut down immediately. Instead, a fault indicator light will flash for approx. 8 seconds. If the blockage is cleared within these 8 seconds, the vacuum cleaner will continue to work as normal. However, if the blockage remains after 8 seconds, the main motor will stop and the vacuum cleaner will automatically shut down to prevent damage.

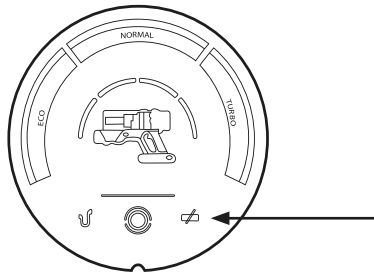

### Air inlet clogging protection

If the main air inlet is clogged for 3–5 seconds, the motor will stop and the clogging indicator on the LED display will flash.

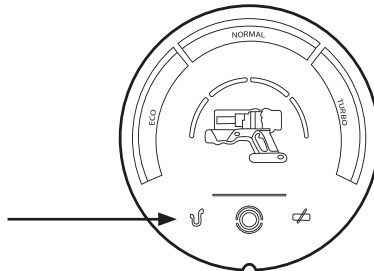


## Using the tube and floor brush

The tube can be fitted onto the air inlet to extend reach, ideal for floor-to-ceiling cleaning.

**STEP 1:** Fit the tube onto the air inlet by aligning the pins and carefully pushing the tube towards the vacuum cleaner main unit until it clicks into position. To release the tube, press the tube release button and pull it away from the vacuum cleaner main unit.

**STEP 2:** Attach the floor brush by aligning the pins on the floor brush with the bottom of the tube. Carefully push together to secure into place. To release the floor brush, press the floor brush release button and pull it away from the extension tube.

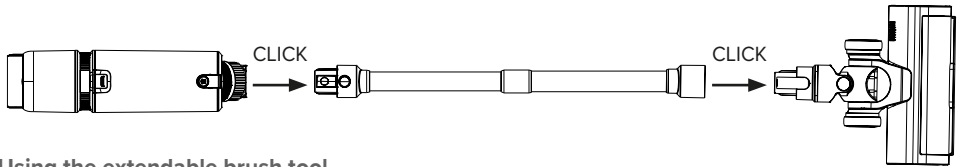

### Using the extendable brush tool

**STEP 1:** The extendable brush tool is fitted with the vacuum cleaner main unit. To extend the extendable brush tool, press and hold both brush attachment buttons and slide the brush. This is ideal for cleaning upholstery and fabrics.


**STEP 2:** To retract the extendable brush tool, press and hold both brush attachment buttons and slide back into place.

### Using the crevice tool

The crevice tool is ideal for removing dust and dirt from corners and recesses.

**STEP 1:** If required, fit the tube onto the air inlet following the instructions in the section entitled 'Using the tube and floor brush'.

**STEP 2:** Push the crevice tool onto the end of the tube. If no extension is required, push the crevice tool directly onto the air inlet until secure.

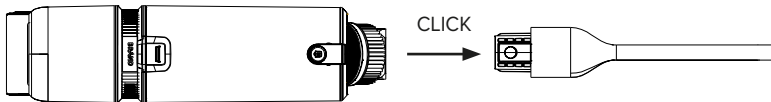

### Emptying the dust container

Before emptying the dust container, check that the vacuum cleaner is switched off and any attachments have been removed from the air inlet.

It is recommended to empty the dust container outdoors.

**STEP 1:** Press the dust container release button and pull to remove the dust container from the vacuum cleaner main unit.



**STEP 2:** Whilst securely holding the dust container, press the dust container release latch. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

**STEP 3:** Close the dust container by pushing the base closed until the dust container base release latch locks back into position.

**STEP 4:** Realign the dust container with the vacuum cleaner main unit and click into place.



**NOTE:** If there is a reduction in suction power, empty the dust container.

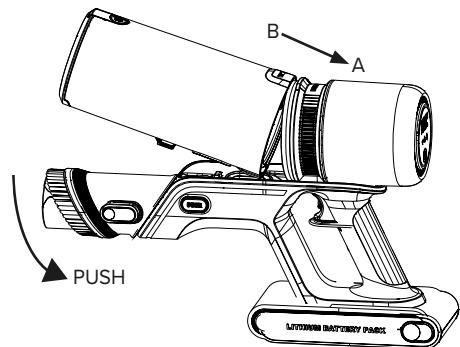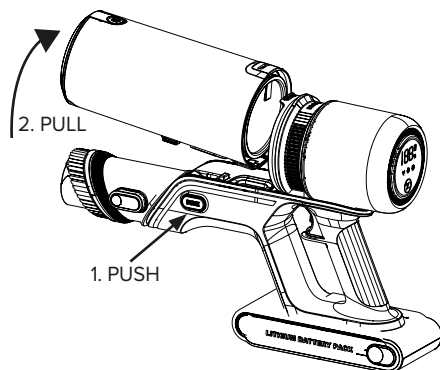

## Cleaning the HEPA filter

The HEPA filter can only be accessed when the dust container has been removed from the vacuum cleaner main unit.

**STEP 1:** Empty the dust container following the instructions in the section entitled 'Emptying the dust container'.

**STEP 2:** Once the dust container is empty, carefully lift the HEPA filter and the foam filter out of the dust container. Shake the HEPA filter until the majority of the dust has been removed, then rinse under clean, warm water and allow to dry naturally.

**STEP 3:** Similarly, remove the filter cone by lifting it out of the vacuum cleaner main unit and wipe it down.


**STEP 4:** Once fully cleaned, replace the filter cone by aligning the indents on the filter cone with those on the dust container. Once the HEPA filter and foam filter are fully dry, replace the foam filter followed by the HEPA filter.

**STEP 5:** Replace the dust container by pushing it firmly back into its place until it clicks into position.



**NOTE:** Do not clean the HEPA filter using detergents or use external heat sources such as radiators to dry it.

**WARNING:** Do not reassemble or use the vacuum cleaner until the HEPA filter is fully dry, as this could cause damage.

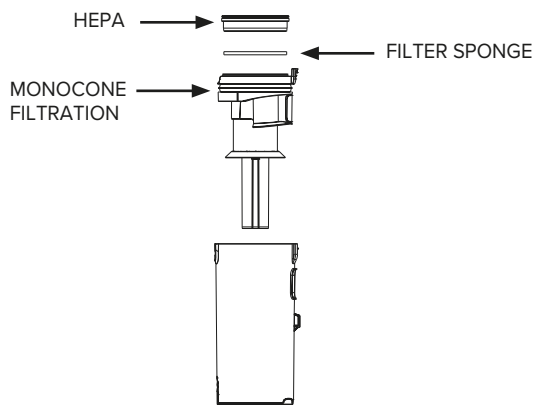

## Cleaning the floor brush

The floor brush has a removable brush bar for easy cleaning.

**STEP 1:** Switch off the vacuum cleaner and detach the floor brush from the tube by pressing and holding the floor brush release button while pulling it away from the tube.

**STEP 2:** Rotate the brush bar release tab to release the brush bar, then lift it out of the floor brush.

**STEP 3:** Remove any built-up dust, debris and hair from the brush bar and floor brush.

**STEP 4:** Reinsert the brush bar by aligning the brush bar release tab with the floor brush. Ensuring the brush bar fits securely into place.

## Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place.


Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

## Troubleshooting

Problem	Possible cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the main unit, following the instructions in the section entitled ' <b>Charging the vacuum cleaner</b> '.
	The battery is not secured properly.	Check that the battery pack is secured onto the vacuum cleaner main unit.
The suction is poor.	The air inlet is blocked.	Disconnect the attachment and clear the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled ' <b>Emptying the dust container</b> '.
	The HEPA filter is blocked.	Clean the HEPA filter following the instructions in the section entitled ' <b>Cleaning the HEPA filter</b> '.
The brush bar is not rotating.	The brush bar is blocked due to built-up hair, dust and debris.	Clean the floor brush following the instructions in the section entitled 'Cleaning the floor brush'.
The anti-wrap vacuum is collecting hair on the floor brush.	While the anti-wrap feature helps reduce hair build-up, some accumulation can still occur over time.	Regularly clean the floor brush by following the instructions in the section titled ' <b>Cleaning the floor brush</b> '. Alternatively, use a pair of scissors to cut the hair from the floor brush.

## Specifications

Product code: BEL02091

Battery: 29.6 V  2200 mAh Li-ion

Adaptor input: 100–240 V ~ 50/60 Hz

Adaptor output: 36 V  0.5 A 18 W

Average active efficiency: ≥85.0%

Efficiency at low load (10%): >75.0%

No load power consumption: 0.1 W

Dust tank capacity: 700 ml



Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**  
**MADE IN CHINA.**

CD081124/MD000000/V1