



ICE CUBE

INSTRUCTION MANUAL

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy – children should be supervised to ensure they do not play with the product.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance.

Normal voltage is still present in this product as long as the product is connected to the electrical source.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become

hot during use and other heat emitting products.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.

Only lift the product with the carry handles provided.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a strong odour is emitted from the product, turn the product off and unplug it from the mains power supply.

Should the product fall or be pushed over while there is water in

the tank, it must be unplugged from the mains outlet immediately as a first action. The product should be righted and dried thoroughly before it is used again.

Care and Maintenance

Always wait until the Ice Cube has stopped completely and unplug it from the power supply before performing any cleaning or user maintenance.

STEP 1: The water tanks must be drained of any water after each use. To do so, carefully open the access doors and pull the water tanks out from the Ice Cube. Unscrew the caps and tip away any excess water. Once the water tanks have been drained, shake to remove any excess and leave to dry with the caps off.

STEP 2: To clean the filter, lift the filter block up and slide it out of one of the sides of the Ice Cube main unit. Remove any loose fibres by hand and rinse with cool, clean water. Leave the filter block to air dry if not using the Ice Cube immediately after carrying out maintenance. Alternatively, place the filter into a dishwasher at 35 °C for approx. 35 minutes and then leave to air-dry.

STEP 3: Before replacing the water tanks and filter block, wipe the inside of the Ice Cube with an absorbent cloth to remove any excess water from the water reservoir (located in the base of the unit). Any limescale deposits in the Ice Cube can be removed with a soft, damp cloth and mild detergent.

STEP 4: Wipe the exterior of the Ice Cube with a soft, damp cloth and dry thoroughly. The filter block and water tanks can be replaced once dried thoroughly.

Note: Clean the Ice Cube and all of its parts regularly to reduce the risk of limescale and bacteria forming.

If there is any mould on the filter block or a musty smell coming from the Ice Cube, remove the filter block and fully immerse in a solution of equal parts water and white vinegar.

Allow the filter block to soak for 45-60 minutes before rinsing thoroughly in warm water.

Allow to air-dry.

It is advised that the filter is replaced every 6-12 months.

Contact our customer service team to order a new filter at customersupport@beldray.com

Getting Started

Remove the Ice Cube from the box.

Remove any packaging from the Ice Cube.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Ice Cube

USB cable

Mains to USB adaptor

Instruction manual

Features

Convenient USB plug to enjoy cool air in every room

3 speed settings

7 colour changing LED lights

Cools & humidifies

5 W power

2 x 300 ml water tanks – freezable for cooler air lasting up to 8 hours**


1.5 m USB cable

Quiet operation

Easy-to-use control panel

Slip-resistant feet

Description of Parts

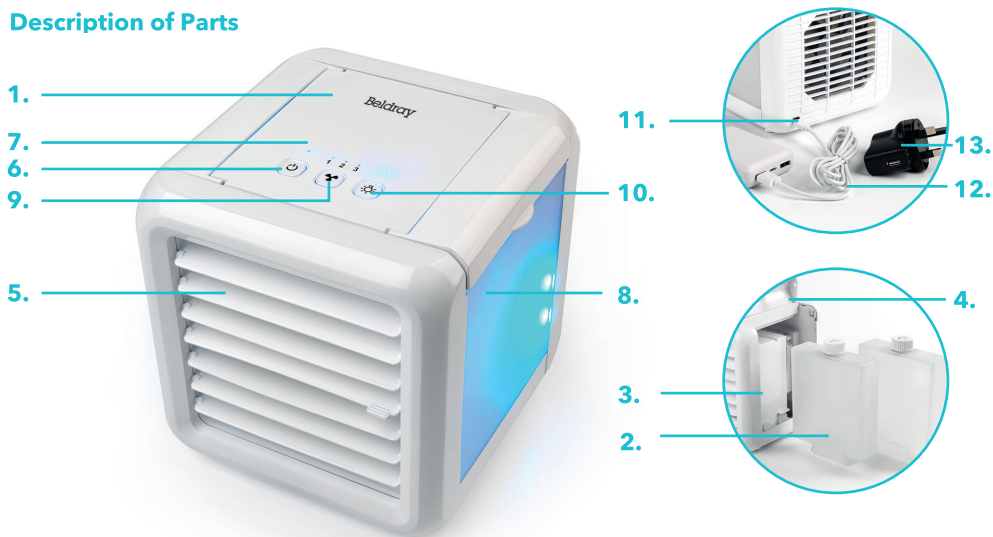

- | | |
|----------------------------|-----------------------------|
| 1. Ice Cube main unit | 8. Mood lights |
| 2. Water tank(s) | 9. Cooling speed button (🌀) |
| 3. Filter block | 10. Mood light button (☀️) |
| 4. Water tank access doors | 11. Micro USB port |
| 5. Horizontal grill | 12. USB power cable |
| 6. Power button | 13. Mains to USB adaptor |
| 7. Indicator light(s) | |

Instructions for Use

The Ice Cube is designed to be operated using a USB power source. It can be used with or without water, but for optimum cooling it is recommended to fill the Ice Cube water tanks with water following the instructions below.

Filling the Ice Cube

The Ice Cube must be switched off and unplugged from the power supply before filling the water tanks.

STEP 1: Open the water tank access doors and pull the water tanks up and away from the Ice Cube.

STEP 2: Remove the filter block by lifting and sliding it sideways out of the Ice Cube and run it under a steady stream of cool, clean water so that the filter becomes fully wet. Shake gently to remove the excess and replace the filter block into the Ice Cube.

STEP 3: Remove the water tanks, unscrew the caps and fill them to the brim with cool, clean water. Replace the caps and slide the water tanks back into position so that they are seated properly. The valves in the caps should begin to release the water into the Ice Cube. This will fill the reservoir in the base of the Ice Cube main unit with water.

STEP 4: Carefully close the water tank access doors.


Note: For additional cooling, the water tanks can be filled to the indicated line and placed into the freezer upright for 8 hours. When the tanks have fully frozen, they can be topped up to the brim with cool, clean water and then inserted into the Ice Cube following the instructions in the section entitled 'Filling the Ice Cube'.

The wet filter block can be placed in the freezer with the water tanks for 8 hours until frozen to increase the cooling effect. Do not freeze the water tanks with the caps on – this could cause damage to the valves and to the water tanks.

Caution: Do not fill the Ice Cube with any liquid other than cool, clean water. Do not use any additives in the water.

Using the Ice Cube

STEP 1: Plug in and switch on the Ice Cube at the desired power supply. Press the power button to turn on the Ice Cube.

STEP 2: The desired cooling speed can be selected by pressing . Cycle through the speeds numbered 1-3, 3 being the strongest cooling speed. The indicator lights will show the speed selected.

STEP 3: Turn on the mood light by pushing . Cycle through the seven colours by repeatedly pressing  until the desired colour setting has been selected.

STEP 4: To regulate the direction of the air airflow, manually adjust the horizontal grills on the front of the Ice Cube.

STEP 5: Turn off the Ice Cube by pressing the power button.

Note: Always remove the excess water and allow the Ice Cube to dry after each use to avoid a build-up of lime scale and bacteria. The Ice Cube is not designed to significantly reduce the room temperature but will provide a localised cool breeze for a small space.


When positioning the Ice Cube, do not lift it by the front panel.

Keep the Ice Cube level when filled with water to avoid spills. This is due to the water reservoir which is located in the base of the unit.

Storage

Drain the water tanks and allow the Ice Cube to cool before storing in a cool, dry place. Carefully coil the power cable to avoid damage during storage

Troubleshooting

Problem	Possible Cause	Solution
The Ice Cube will not power on.	<p>The Ice Cube is not connected to the power supply.</p> <p>The portable power source battery has depleted.</p>	<p>Connect the Ice Cube to the power supply and press the power button.</p> <p>Check the battery level of the portable power source and recharge if depleted. Connect the Ice Cube to the charged power source and press the power button.</p>
The air blowing from the Ice Cube is insufficient.	<p>The cooling speed is set too low.</p> <p>The filter block is blocked.</p>	<p>Select a higher cooling speed by pressing  until the desired cooling speed has been selected.</p> <p>Clean the filter block following the instructions in the section entitled 'Care and Maintenance'.</p>
The Ice Cube is not cooling the air.	<p>The water tanks have not been filled with enough water.</p> <p>The water tanks have not been inserted correctly.</p> <p>The water tanks have not been left to freeze for long enough.</p> <p>Ambient humidity is high.</p>	<p>Fill the water tanks to the brim.</p> <p>Remove the water tanks and reinsert them, checking to make sure that the valve in the cap opens and releases the water correctly.</p> <p>Fill the water tanks to the indicated line with water and leave to freeze for approx. 8 hours before use.</p> <p>The Ice Cube will not be able to cool air due to the high humidity.</p>

Specifications

Product code: EH3139STK

Input: DC 5 V

Output: 5 W

Water tank capacity: 600 ml

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

* To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.



Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD020119/MD160819/V2

