

Beldray[®] est 1872

Our adjustable,
stylish & durable
pedestal fan



16 INCH
PEDESTAL FAN
INSTRUCTION MANUAL



www.beldray.com

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.


Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not use the product for anything other than its intended use.
Do not use this product outdoors.
Do not move the product whilst it is in use.
Do not shake the product.
Do not cover the product.
Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product.
Do not spray insecticide or chemical solvents on the product.
Always unplug the product after use and before any cleaning or maintenance.
Always use the product on a flat, stable surface.
Use of an extension cord with the product is not recommended.
This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.
This product is intended for domestic use only. It should not be used for commercial purposes.
Warning: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Care and Maintenance

Always wait until the pedestal fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.
Wipe the pedestal fan with a soft, damp, lint-free cloth and allow to dry thoroughly.
Do not immerse the pedestal fan in water or any other liquid.
Do not use abrasive cleaning solvents, polishes or scouring pads to clean the pedestal fan, as this may cause damage.

Description of Parts

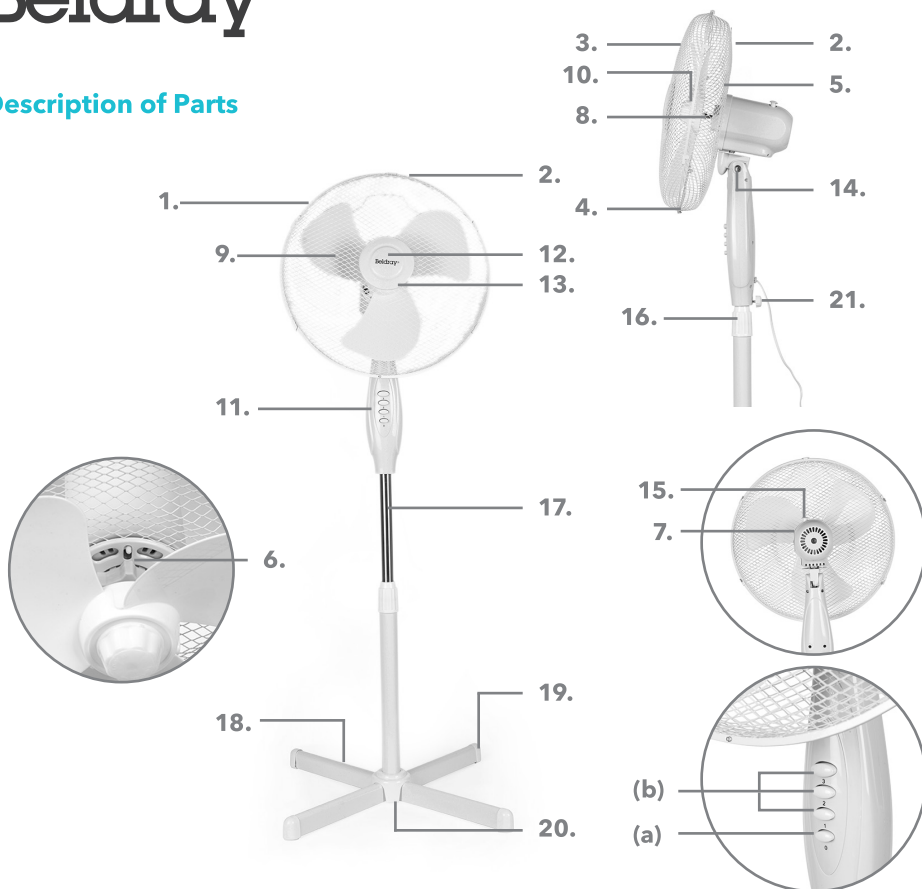

1. 16 Inch Pedestal Fan main unit
2. Carry handle
3. Front grill
4. Grill screw with nut
5. Rear grill
6. Rear grill locking nut
7. Motor assembly
8. Motor assembly shaft
9. Fan blade unit
10. Fan blade locking cap
11. Control panel
 - a) Cooling speed buttons
 - b) Off button

12. Logo plate
13. Logo plate securing screws
14. Tilting head screw
15. Oscillation switch
16. Height adjustment cap
17. Adjustable base pole
18. Cross stand legs
19. Plastic stand feet
20. Cross stand screw cover
21. Fan head locking screw

Assembling the Pedestal Fan

Assembling the Base

STEP 1: Attach the cross stand leg with the cut-out section on top of the other cross stand leg and firmly press down to secure them together.

STEP 2: Remove the four screws from the cross stand legs and then attach the adjustable base pole by aligning the stabiliser holes with the screw holes on the cross stand legs.

STEP 3: Insert the screws through each of the aligned holes and carefully tighten in a clockwise direction.

STEP 4: Slide the cross stand screw cover over the adjustable base pole, align the cut-outs with the cross stand legs and push into position.

STEP 5: Remove the height adjustment cap by turning it in the anticlockwise direction and pulling away.

STEP 6: Replace the height adjustment cap, and turn in a clockwise direction until secure.

Attaching the Base to the Fan Head

STEP 1: Loosen the height adjustment cap by twisting it in an anticlockwise direction, then pull out the inner adjustable base pole.

STEP 2: When the adjustable base pole is at the desired height, tighten the height adjustment cap by twisting it in a clockwise direction to secure the adjustable base pole into position.

STEP 3: Release the fan head locking screw by turning it in an anticlockwise direction, then slot the pedestal fan head onto the adjustable base pole.

STEP 4: Carefully turn the fan head locking screw in a clockwise direction to lock the pedestal fan head into position.

Note: If the adjustable base pole cannot be fully inserted, loosen the fan head locking screw further.
Take care not to overtighten the height adjustment cap and fan head locking screw, as this may cause damage to the pedestal fan.

Assembling the Fan Head

STEP 1: Remove the rear grill locking nut from the motor assembly by twisting it in an anticlockwise direction.

STEP 2: Position the rear grill over the motor assembly shaft, checking that it is aligned with the two small plastic pins on the motor assembly and that the carry handle at the back of the rear grill is in an upright position. Secure the rear grill by replacing the rear grill locking nut and twisting it in a clockwise direction until secure.

STEP 3: Position the fan blade unit onto the motor assembly shaft, pushing it gently inwards. Add the blade locking cap; twist it in an anticlockwise direction until the fan blade unit is secured into position.

STEP 4: Open the clips around the outer edge of the front grill and position it onto the rear grill, so that the screw holes on both grills are aligned at the bottom. Fasten the clips around the outer edge of the front grill to lock the grills into position.

STEP 5: Insert the front grill screw through the hole at the bottom of the front and rear grills, then place the nut onto the grill screw and tighten it in a clockwise direction to hold the grills together.

Caution: Take care not to overtighten the rear grill locking nut or the blade locking cap.

Instructions for Use

Before connecting to the mains power supply, place the assembled pedestal fan onto a flat, stable surface, allowing for sufficient distance between the pedestal fan and any objects that could get damaged or caught in the rotating fan blades.

Note: This is not a desk fan. Do not place the fan on a desk as this could affect the stability of the product.
Do not cover the fan head.

Using the 16 Inch Pedestal Fan

STEP 1: Plug in and switch on the pedestal fan at the mains power supply.

STEP 2: To turn on the pedestal fan, select the desired cooling speed (1-3) on the control panel. Setting '3' is the strongest cooling speed setting.

STEP 3: Activate the oscillation function by pressing the oscillation switch down. To stop the pedestal fan from oscillating, pull the oscillation switch up.

Tilting the Fan Head

STEP 1: Loosen the tilting head screw by turning it in an anticlockwise direction.

STEP 2: Position the fan head at the desired angle.

STEP 3: Tighten the tilting head screw by turning it in a clockwise direction until secure.

Adjusting the Fan Height

STEP 1: Loosen the height adjustment cap by twisting it in an anticlockwise direction.

STEP 2: Pull out the inner pole from the adjustable base pole until the fan is at the desired height.

STEP 3: Twist the height adjustment cap in a clockwise direction until secure.

Note: Take care not to overtighten the height adjustment cap.

Specifications

Product code: EH3403

Voltage: 220-240 V ~ 50-60 Hz

Output: 45 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

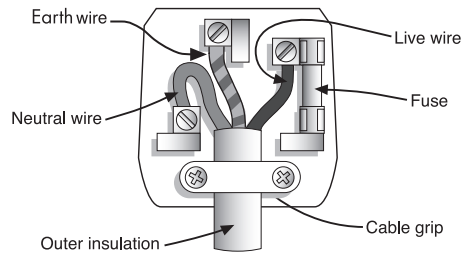

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD030221/MD000000/V1