







Please retain instructions for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the power supply before connecting the product. Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy - children should be supervised to ensure they do not play with the product.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Nominal voltage is still present in this product as long as the product is connect to the electrical source.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not cover the product.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product. Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

This product should only be used the power supply unit provided.



CAUTION: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply. **WARNING:** Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The product should be righted and dried thoroughly before it is used again.

Care and Maintenance

STEP 1: Unplug the Arctic Dome from the power supply before attempting any cleaning or user maintenance.


STEP 2: Remove the ice packs, wipe the inside of the Arctic Dome with an absorbent cloth to remove any excess water. Any limescale deposits can be removed with a soft, damp cloth and mild detergent.

STEP 3: Wipe the Arctic Dome with a soft, damp cloth and dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Arctic Dome, as this may cause damage.

NOTE: Clean the Arctic Dome and all of its parts regularly to reduce the risk of limescale and bacteria forming.

Description of Parts

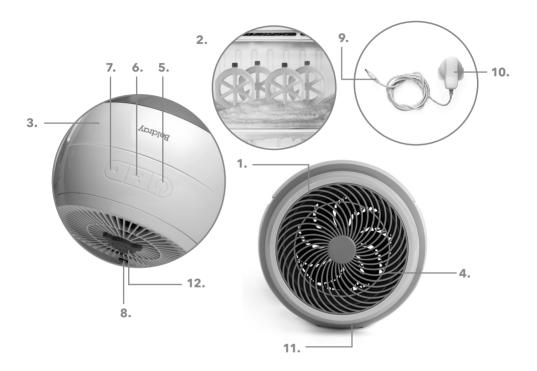

- 1. Arctic Dome main unit
- 2. Ice packs
- 3. Ice pack access door
- 4. Front grill
- 5. Power button
- 6. Cooling speed button

- 7. Mood light button
- 8. Power cord port
- 9. Power cable
- 10. Mains plug
- 11. Water drain
- 12. Aroma box

Instructions for Use

The Arctic Dome is designed to operate with or without the ice packs. For optimum cooling, it is recommended to fill the ice packs with water following the instructions below, and then place them into the freezer for 3 hours.



Filling the Arctic Dome

Before filling the ice packs, make sure that the Arctic Dome is switched off and unplugged from the power supply.

STEP 1: Open the ice pack access door and pull the ice packs up and away from the Arctic Dome main unit.

STEP 2: Take the ice packs, unscrew the caps and fill both packs with cold clean water until they are about 80 % full. Replace the caps and slide the ice packs back into position, making sure that they are seated properly. Alternatively, freeze the ice packs for 3 hours for additional cooling.

STEP 3: Carefully close the ice pack access door.

STEP 4: Once the ice packs have been used and are warmed back up to the ambient room temperature, the inside of the unit can be wiped down with a soft, damp cloth. If there is a significant amount of water in the bottom, the drain plug can be pulled from the bottom of the Arctic Dome main unit.

TOP TIP: Freeze one pair of ice packs whilst the other pair is inside the unit so that they are always readily available. **CAUTION:** Do not fill the Arctic Dome ice packs with any liquid other than cold, clean water. Do not use any additives in the water.

Using the Arctic Dome

STEP 1: Plug the Arctic Dome into the desired power supply and press the power button to turn it on.

STEP 2: The desired cooling speed can be selected by pressing the cooling speed button. There are three speed settings available (1-3). The selected level is indicated by the light ring intensity.

STEP 3: Turn on the mood light by pushing the mood light button; turn it off by clicking the mood light button once more.

STEP 4: To use the aroma feature, twist the aroma box in an anticlockwise direction. This will cause the aroma box to detach from the main unit. The absorbent material is designed to soak up essential oils and slowly release the scent through normal use of the unit. (Essential oils not included). Twist the aroma box clockwise to lock back into position.

STEP 5: Turn off the Arctic Dome by pressing the power button.

NOTE: Always drain and wipe down any excess water and allow the Arctic Dome to dry after each use to avoid a build-up of limescale and bacteria.

The Arctic Dome is not designed to significantly reduce the room temperature but will provide a localised cool breeze for a small space.

CAUTION: When positioning the Arctic Dome, do not lift it by the front panel.

Keep the Arctic Dome level when filled with water to avoid spills. When the unit is on and the ice pack access door is opened, the fan will automatically shut off to prevent injury. Please switch off and unplug the Arctic Dome at the mains power supply before performing any care and maintenance or adjustments.

Storage

Drain the ice packs and allow the Arctic Dome to cool and dry before storing in a cool, dry place.

Never store the Arctic Dome whilst it is wet.

Never wrap the cord tightly around the Arctic Dome; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The Arctic Dome will not power on.	The Arctic Dome is not connected to the mains power supply.	Connect the Arctic Dome to the mains power supply and switch on.
The air blowing from the Arctic Dome is not strong enough.	The cooling speed is set too low.	Select a higher cooling speed by pressing the relevant cooling speed button.
The Arctic Dome is not cooling the air.	The ice packs have not been left to freeze for long enough.	Fill the ice packs to the indicated line with water and leave to freeze for approx. 3 hours before use.
	Ambient humidity is high.	The Arctic Dome will not be able to cool due to the high humidity in the air.

Specifications

Product code: EH3351B150

Input: === 5 V Output: 10 W

Disposal of Waste Batteries and Electrical and Electronic Equipment

This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide takeback services which allow the user to return exhausted equipment for appropriate disposal. It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Limited.,
19 Baggot Street Lower, Dublin DO2 X658. **ROI**.

www.beldray.com

©Beldray Trademark. All rights reserved

CD030420/MD070723/V

