 


Beldray^{est 1872}®

Our cool, portable
& convenient
air cooler

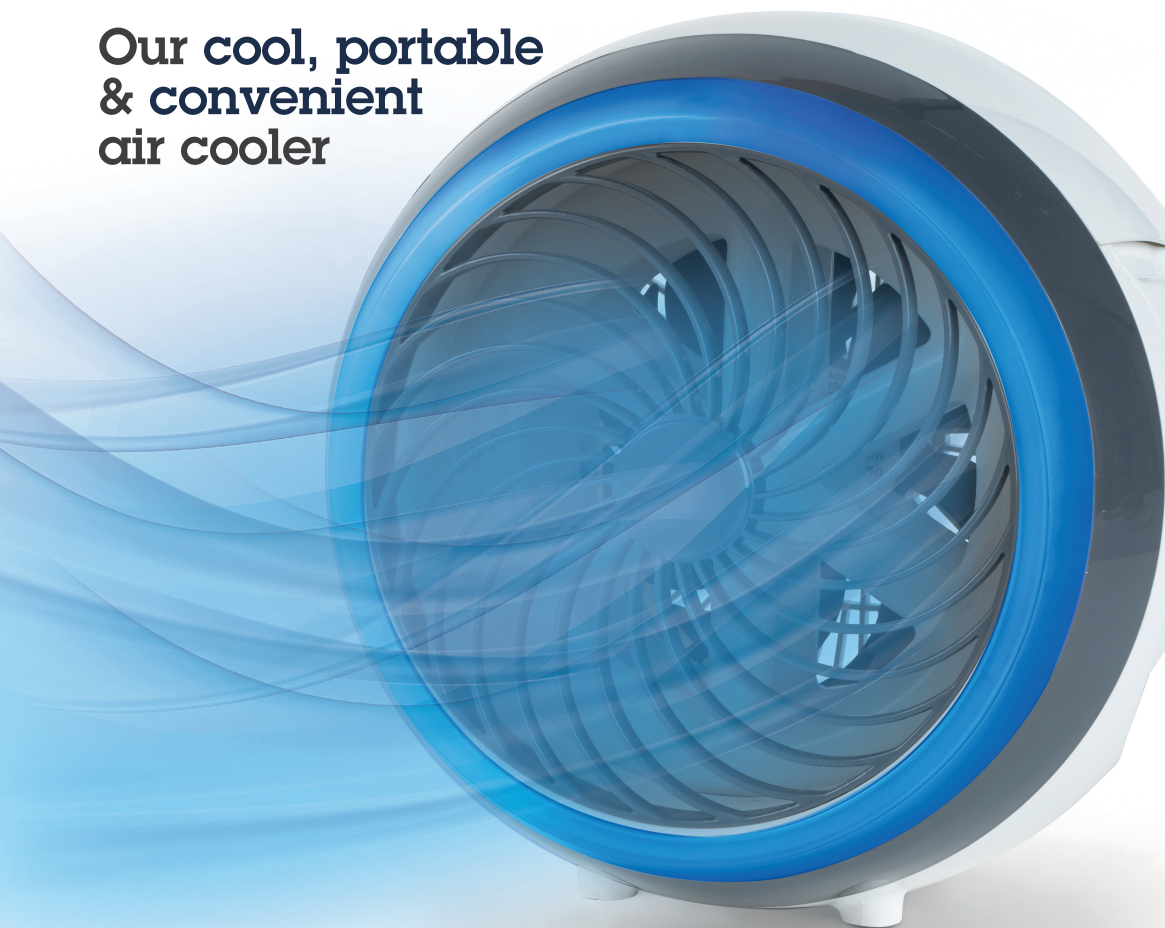

ARCTIC DOME PERSONAL SPACE COOLER INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the power supply before connecting the product.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy – children should be supervised to ensure they do not play with the product.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Normal voltage is still present in this product as long as the product is connected to the electrical source.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not cover the product.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

This product should only be used the power supply unit provided.

CAUTION: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

WARNING: Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The product should be righted and dried thoroughly before it is used again.

Care and Maintenance

STEP 1: Unplug the Arctic Dome from the power supply before attempting any cleaning or user maintenance.

 
STEP 2: Remove the ice packs, wipe the inside of the Arctic Dome with an absorbent cloth to remove any excess water. Any limescale deposits can be removed with a soft, damp cloth and mild detergent.

STEP 3: Wipe the Arctic Dome with a soft, damp cloth and dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Arctic Dome, as this may cause damage.

NOTE: Clean the Arctic Dome and all of its parts regularly to reduce the risk of limescale and bacteria forming.

Description of Parts

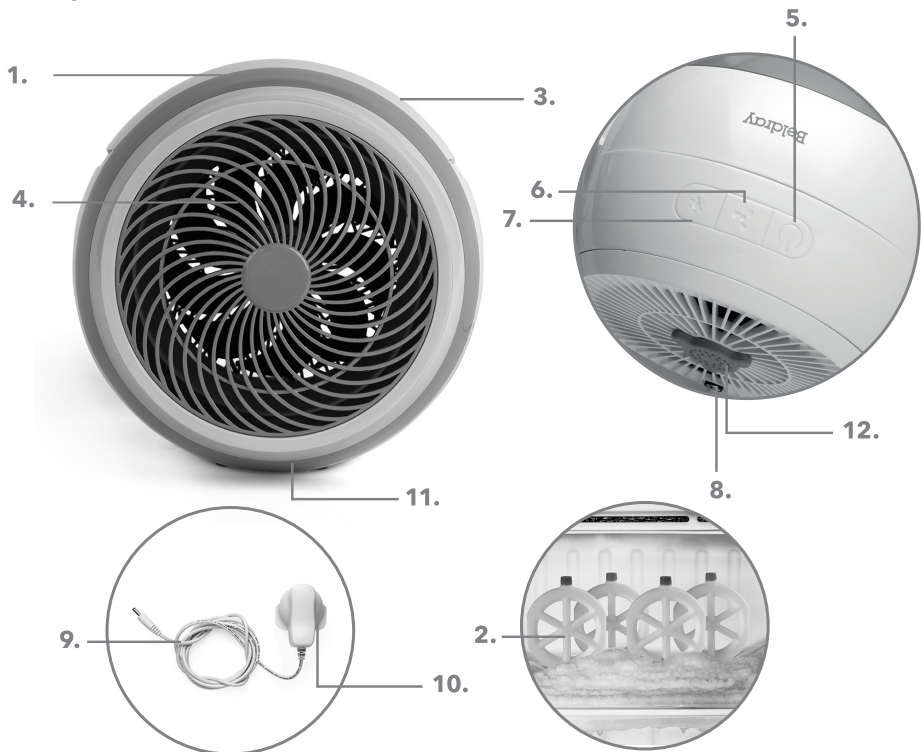

- | | |
|--------------------------|----------------------|
| 1. Arctic Dome main unit | 7. Mood light button |
| 2. Ice packs | 8. Power cord port |
| 3. Ice pack access door | 9. Power cable |
| 4. Front grill | 10. Mains plug |
| 5. Power button | 11. Water drain |
| 6. Cooling speed button | 12. Aroma box |

Instructions for Use

The Arctic Dome is designed to operate with or without the ice packs. For optimum cooling, it is recommended to fill the ice packs with water following the instructions below, and then place them into the freezer for 3 hours.

Filling the Arctic Dome

Before filling the ice packs, make sure that the Arctic Dome is switched off and unplugged from the power supply.

STEP 1: Open the ice pack access door and pull the ice packs up and away from the Arctic Dome main unit.

STEP 2: Take the ice packs, unscrew the caps and fill both packs with cold clean water until they are about 80 % full. Replace the caps and slide the ice packs back into position, making sure that they are seated properly. Alternatively, freeze the ice packs for 3 hours for additional cooling.

STEP 3: Carefully close the ice pack access door.

STEP 4: Once the ice packs have been used and are warmed back up to the ambient room temperature, the inside of the unit can be wiped down with a soft, damp cloth. If there is a significant amount of water in the bottom, the drain plug can be pulled from the bottom of the Arctic Dome main unit.

TOP TIP: Freeze one pair of ice packs whilst the other pair is inside the unit so that they are always readily available.

CAUTION: Do not fill the Arctic Dome ice packs with any liquid other than cold, clean water. Do not use any additives in the water.

Using the Arctic Dome

STEP 1: Plug the Arctic Dome into the desired power supply and press the power button to turn it on.

STEP 2: The desired cooling speed can be selected by pressing the cooling speed button. There are three speed settings available (1-3). The selected level is indicated by the light ring intensity.

STEP 3: Turn on the mood light by pushing the mood light button; turn it off by clicking the mood light button once more.

STEP 4: To use the aroma feature, twist the aroma box in an anticlockwise direction. This will cause the aroma box to detach from the main unit. The absorbent material is designed to soak up essential oils and slowly release the scent through normal use of the unit. (Essential oils not included). Twist the aroma box clockwise to lock back into position.

STEP 5: Turn off the Arctic Dome by pressing the power button.

NOTE: Always drain and wipe down any excess water and allow the Arctic Dome to dry after each use to avoid a build-up of limescale and bacteria.

The Arctic Dome is not designed to significantly reduce the room temperature but will provide a localised cool breeze for a small space.

CAUTION: When positioning the Arctic Dome, do not lift it by the front panel.

Keep the Arctic Dome level when filled with water to avoid spills. When the unit is on and the ice pack access door is opened, the fan will automatically shut off to prevent injury. Please switch off and unplug the Arctic Dome at the mains power supply before performing any care and maintenance or adjustments.

Storage

Drain the ice packs and allow the Arctic Dome to cool and dry before storing in a cool, dry place.

Never store the Arctic Dome whilst it is wet.

Never wrap the cord tightly around the Arctic Dome; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The Arctic Dome will not power on.	The Arctic Dome is not connected to the mains power supply.	Connect the Arctic Dome to the mains power supply and switch on.
The air blowing from the Arctic Dome is not strong enough.	The cooling speed is set too low.	Select a higher cooling speed by pressing the relevant cooling speed button.
The Arctic Dome is not cooling the air.	The ice packs have not been left to freeze for long enough.	Fill the ice packs to the indicated line with water and leave to freeze for approx. 3 hours before use.
	Ambient humidity is high.	The Arctic Dome will not be able to cool due to the high humidity in the air.



Specifications

Product code: EH3351JDWFOB

Input:  5 V

Output: 10 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

 
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

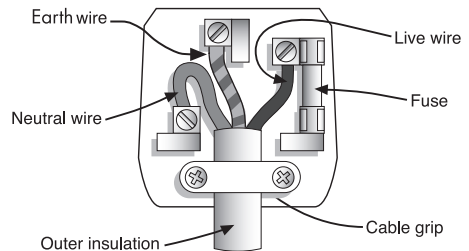

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray and register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD030420/MD151221/V2