



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply. Children younger than 3 years old should be kept away from the product unless continuously supervised. Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if it has been installed in its intended operating position and they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised. This is not a toy – children should be supervised to make sure they do not play with the product. Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Normal voltage is still present in this product as long as the product is connected to the electrical source. This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and

other heat emitting products. Keep furniture, curtains and other flammable material at least 1 metre away from the product. Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard. Do not immerse the product or plug in water or any other liquid. Do not operate the product with wet hands. Do not leave the product unattended whilst connected to the mains power supply or when in use. Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand. Do not use this product for extended periods of time. Do not leave the product operating overnight. Do not use the product for anything other than its intended use. Do not cover this product. Do not block the air intake of the product; place in an open, well-ventilated space and install according to the instructions provided. Do not use this product outdoors. Do not attempt to move the product whilst it is in use. Do not put objects into any of the openings. Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly. Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents. The product should be used on a stable, heat-resistant surface. The product must not be located immediately below or next to a mains power supply. Never use accessories that are not recommended or supplied by the

manufacturer. It could cause danger to the user and damage to the product. Use of an extension cord with the product is not recommended. This product is intended for domestic use only. **Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.  Hot surface – do not touch the hot section or heating components of the product.  **Warning:** In order to avoid overheating, do not cover the product. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

## Care and Maintenance


Always unplug the electric stove from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance. Wipe the exterior of the electric stove with a soft, damp cloth and allow to dry thoroughly. Do not use harsh or abrasive cleaning solvents or scourers, as these may damage the finish of the electric stove and its glass door. Check regularly for any blockages on the vent, to prevent the thermal cut-out device from operating. Do not immerse the electric stove in water or any other liquid.

### Thermal Cut-out Device

This product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens: **STEP 1:** Switch off the product by setting the on/off switch to (o). **STEP 2:** Check that the product is unplugged from the mains power supply and allow it to cool for approx. 15 minutes. **STEP 3:** Clear any blockages present on the vent, being careful not to damage the product. **STEP 4:** Plug in and switch on the product at the mains power supply.

**Caution:** In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this product must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.

#### Description of Parts

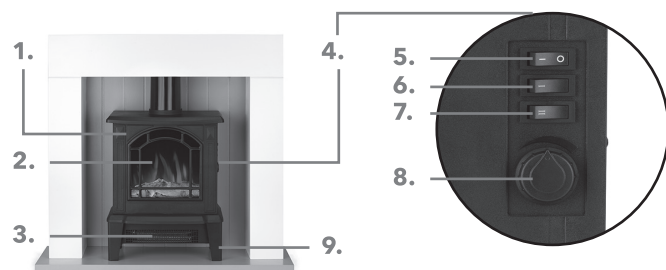

- |  |                           |
|--|---------------------------|
| 1. Floriana Electric Stove Suite main body | 5. On/off switch          |
| 2. Glass door                              | 6. Heat setting I switch  |
| 3. Vent                                    | 7. Heat setting II switch |
| 4. Control panel                           | 8. Adjustable thermostat  |
|  | 9. Leg(s)                 |

#### Installation Guide

Do not connect the electric stove to the mains power supply until all of the instruction have been read, fully understood and the electric stove has been properly and securely fitted. The minimum safe distances must be observed.

**Note:** The electric stove must be operated on a flat, stable and heat-resistant surface.

The fixing pack contains small items, which should be kept away from young children. It is suggested that all of the fixing pack contents are placed into a container, to reduce the risk of losing any small pieces.

#### Before First Use

**STEP 1:** Check that there is no damage to the electric stove.

**STEP 2:** Position the electric stove on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials. If placing the electric stove in an alcove, make sure that there is at least 150mm of space on all sides, to allow for good air circulation.

**STEP 3:** Check that the vent is not blocked. Keep hearthrugs and other soft furnishings away from the front of the electric stove, as they could obstruct the free-flow of hot air from the fan and damage both the soft furnishings and the electric stove.

**Note:** The electric stove must not be located over a mains power socket. The mains power socket must always be accessible in order to disconnect the electric stove from the mains power supply for cleaning or maintenance.

**Caution:** The electric stove should be free from noticeable vibrations whilst it is in operation; vibrations may cause damage to the bulb. Turn off the electric stove before moving or attempting any maintenance or cleaning.

**Warning:** Do not connect the electric stove to the mains power supply until all of the instructions have been read, fully understood and the electric stove has been properly and securely fitted.

#### Using the Floriana Electric Stove Suite

**STEP 1:** Plug in and switch on the electric stove at the mains power supply.

**STEP 2:** To turn on the electric stove, press the on/off switch on the control panel.

**STEP 3:** Select the desired heat output by pressing the relevant heat setting switch:

To operate the electric stove on a low heat setting (900W), press the heat setting I switch; press it again to switch it off. Press the heat setting II switch to operate the electric stove on a high heat setting (1800W); press it again to switch it off.

**STEP 4:** The adjustable thermostat can be used to regulate the room temperature. Turn it in a clockwise direction to increase the temperature of the room. To reduce the room temperature, turn the adjustable thermostat in an anticlockwise direction.

**STEP 5:** Switch off the electric stove using the on/off switch, so that it is in the (o) position.

**Note:** The electric stove must be turned on before any of the heat settings will work. The higher heat setting (1800W) will only operate if both heat setting switches are turned on.

When using the electric stove for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the electric stove. The adjustable thermostat needs to be at a temperature higher than the room temperature for the heat to work.

#### Specifications

Product Code: EH3215

Voltage: 220-240 V ~ 50 Hz

Output: 1800 W

**EN** If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.beldray.com](http://www.beldray.com). Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to [www.beldray.com](http://www.beldray.com) and search **EH3215** to access the instruction manual for your product.

\*To be eligible for the extended guarantee, go to [www.beldray.com](http://www.beldray.com) and register your product within 30 days of purchase.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



# Beldray<sup>®</sup> est 1872

## FLORIANA

### ELECTRIC STOVE SUITE

#### QUICK START GUIDE

Find us on

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)

Distributed by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.

**MADE IN CHINA.**

[www.beldray.com](http://www.beldray.com)

\*This product is only suitable for well-insulated spaces or occasional use.

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage local space heaters only (select one).	
Nominal heat output	P <sub>nom</sub>	1.8	kW	Manual heat charge control, with integrated thermostat.	N/A
Nominal heat output (indicative)	P <sub>nom</sub>	0,0046	kW	Manual heat charge control, with room and/or outdoor temperature feedback.	N/A
Maximum continuous heat output	N/A	1.8	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	N/A
Auxiliary electricity consumption				Fan assisted heat output.	N/A
At nominal heat output	e <sub>l_max</sub>	N/A	kW	Type of heat output/room temperature control (select one).	
At minimum heat output	e <sub>l_min</sub>	N/A	kW	Single stage heat output and no room temperature control.	No
In standby mode	e <sub>l_SB</sub>	N/A	kW	Two or more manual stages, no room temperature control.	No
				With mechanic thermostat room temperature control.	Yes
				With electronic room temperature.	No
				Electronic room temperature control plus day timer.	No
				Electronic room temperature control plus week timer.	No
				Other control options (multiple selections possible).	
				Room temperature control, with presence detection.	No
				Room temperature control, with open window detection.	No
				With distance control option.	No
				With adaptive start control.	No
				With working time limitation.	No
				With black bulb sensor.	No

 <p><b>ULTIMATE PRODUCTS HOME OF BRANDS</b></p>		<p>Manchester OL9 0DD United Kingdom www.upgs.com</p> <p>t: +44 (0) 161 627 1400 f: +44 (0) 161 628 2126</p> <p>hk: +852 6681 9752 cn: +86 1 3417586804</p>																
Artworker:	Scarlett Chester-Roberts																	
Date:	29/07/2020																	
Project Name:	HCH200635 UPG EH3215																	
Type of Artwork:	Quick Start Guide																	
Size:	A4 Folding Leaflet Double-sided																	
Software Used:	Indesign CC20																	
Typefaces:	Avenir Next																	
<table border="0"> <tr> <td></td> <td><input type="checkbox"/> Cyan</td> </tr> <tr> <td></td> <td><input type="checkbox"/> Magenta</td> </tr> <tr> <td></td> <td><input type="checkbox"/> Yellow</td> </tr> <tr> <td></td> <td><input checked="" type="checkbox"/> Black</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> </table>			<input type="checkbox"/> Cyan		<input type="checkbox"/> Magenta		<input type="checkbox"/> Yellow		<input checked="" type="checkbox"/> Black		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS	<p><b>Artwork Version 1</b></p> <p><b>Artwork Scale 1:1</b></p> <p><small>©2020 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.</small></p>
	<input type="checkbox"/> Cyan																	
	<input type="checkbox"/> Magenta																	
	<input type="checkbox"/> Yellow																	
	<input checked="" type="checkbox"/> Black																	
	<input type="checkbox"/> PMS																	
	<input type="checkbox"/> PMS																	
	<input type="checkbox"/> PMS																	
	<input type="checkbox"/> PMS																	

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY