


# Beldray<sup>est 1872</sup><sup>®</sup>

Our **mirrored,**  
**modern & elegant**  
wall fire

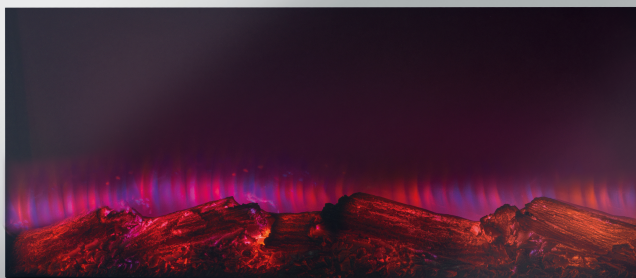

## **CORSICA MIRROR** **WALL FIRE** INSTRUCTION MANUAL



[www.beldray.com](http://www.beldray.com)

Please retain instructions for future reference.

## **WARNING - READ BEFORE USE**

Do not leave the product unattended while in use.

This product can be used for no longer than 4 hours, after which time it must be switched off and allowed to cool fully before it is used again.

The product must be used on a stable, heat-resistant surface.

The product must be placed at least 1 metre away in every direction from walls, doors, furniture, curtains, or any other flammable materials.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep the product away from other heat emitting products.

Keep furniture, curtains and other flammable material at least 1 metre away from the product.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not use the product for anything other than its intended use.

Do not cover this product.

Do not block the air intake of the product; place in an open, well-ventilated space.

Do not use this product outdoors.

Do not attempt to move the product whilst it is in use.

Do not touch the product during use, as it will get very hot and could cause injury.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function.

Do not lift the product by the front panel.

The product should be used on a stable, heat-resistant surface.

The product must not be located immediately below or next to a mains power supply.

Always unplug the product after use and before any cleaning or maintenance.

Always ensure that the product has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended. This product is intended for domestic use only. It should not be used for commercial purposes.

**CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Hot surface – do not touch the hot section or heating components of the product.

**WARNING:** In order to avoid overheating, do not cover the product. This product is not equipped with a device to control the room's temperature. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.



Normal voltage is still present in this product as long as the product is connected to the electrical source. Always unplug the product when not in use.

In order to avoid a hazard, due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, nor should it be connected to a circuit this is regularly switched on and off by the utility.

### **Battery Safety (Remote Control Only)**

Do not short-circuit a cell or battery.

Check that the battery compartment is secure.

If the battery compartment does not close securely, stop using the product and keep it away from children.

Batteries are to be inserted with the correct polarity.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

If you think batteries have been swallowed or placed inside any part of the body, **seek immediate medical attention.**

Exhausted batteries must be removed and disposed of safely.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not expose batteries to heat or fire as they may explode.


Do not subject batteries to mechanical shock.

To dispose of any batteries, take them to a local recycling station.

Contact the local government offices for details.

This product requires CR2025L button cell battery (included).

## Battery Safety Warning

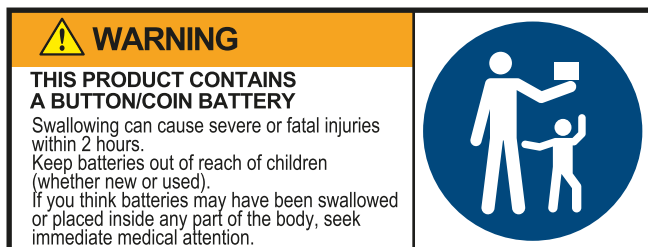

**CAUTION: Vigilance must be maintained with ‘flat’ or spare button or coin batteries in the home and the products that contain them.**

There are no obvious specific symptoms when a button or coin battery is stuck in a child’s oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Excessive coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

**A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.**

## Thermal Cut-out Device

The wall fire is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the wall fire start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

**STEP 1:** Switch off the wall fire using the on/off switch.

**STEP 2:** Check that the wall fire is unplugged from the mains power supply and allow it to cool for approx. 15 minutes.

**STEP 3:** Clear any blockages present on the vent, being careful not to damage the wall fire.

**STEP 4:** Plug in and switch on the wall fire at the mains power supply.

**CAUTION:** In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this wall fire must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the product.


## Care and Maintenance

Always unplug the wall fire from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance. Wipe the exterior of the wall fire with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents or scourers, as they may damage the finish of the wall fire.


The glass panel should be cleaned carefully with a soft cloth; do not use polishes or abrasive materials.

## Description of Parts

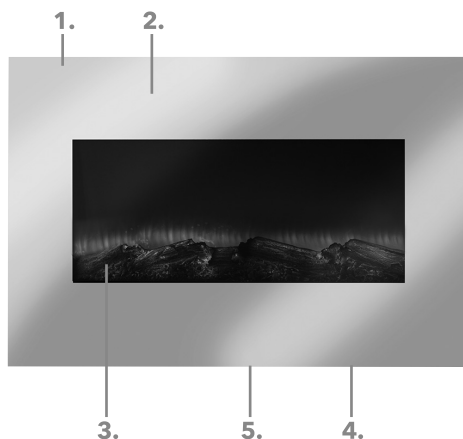

### For the wall fire:

- |                                       |                     |
|---------------------------------------|---------------------|
| 1. Corsica Mirror Wall Fire main unit | 4. On/off switch    |
| 2. Mirror glass panel                 | 5. Heat outlet vent |
| 3. Fuel bed                           |                     |

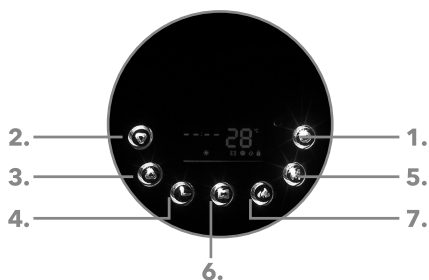

### For the touch control panel:

- |                      |                       |
|----------------------|-----------------------|
| 1. Power button      | 5. Mode button        |
| 2. + increase button | 6. Open window button |
| 3. - decrease button | 7. LED light button   |
| 4. Set up button     |                       |



### For the remote control:

- |                 |                     |
|-----------------|---------------------|
| 1. Power button | 3. LED light button |
| 2. Heat button  | 4. Unlock button    |

## Installation Guide

Do not connect the wall fire to the mains power supply until all of the instructions have been read, fully understood and the wall fire has been properly and securely fitted. The minimum safe distances must be observed.

**NOTE:** Installation of the wall fire should be carried out by two people, in order to avoid injury, damage to the property or the wall fire. The wall fire must only be operated on a flat, stable, heat-resistant surface.

**CAUTION:** Do not lift the product using the glass panel.

## Instructions for Use

### Before First Use

Place the wall fire onto a flat, stable, heat-resistant surface at least 1 metre away from furniture, curtains or any other flammable materials.

If placing the wall fire in an alcove, make sure that there is at least 600 mm of space above and 200 mm of space each side, to guarantee good air circulation.

The wall fire must not be located over a mains power socket. The mains power socket must always be accessible, in order to disconnect the wall fire from the mains power supply before cleaning or maintenance.

**NOTE:** When using the wall fire for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the wall fire.

## Wall Mounting the Corsica Mirror Wall Fire

Before proceeding with the installation, the mirror glass panel should be removed from the front of the fire.

The wall fire is designed to be permanently mounted to the wall at a minimum height of 700 mm. The wall bracket must be mounted horizontally and the power cord routed to the right base of the fire.

Prior to fixing the wall fire to the wall, check that the wall is able to support the weight of the wall fire.

**STEP 1:** Check that the wall fire is switched off and unplugged from the mains power supply.

**STEP 2:** Open the fixing pack and place all of the contents into a container. This will reduce the risk of losing any small pieces.

**STEP 3:** Place the wall bracket against the wall that it will be fixed making sure that the tilting side is at the top. Using a pencil, mark the position of the four screw holes onto the wall. The markings must be level and observe the recommended fixing dimensions.

**STEP 4:** Drill where the holes have been marked using a drill bit (not provided) and insert the wall plugs, checking that the edge is flush with the surface of the wall.

**STEP 5:** Fix the wall bracket into place using the 40 mm screws.

**STEP 6:** Carefully lift the wall fire main unit and hook it onto the wall bracket. Do not let go until it is secure.

**NOTE:** There will be a slight gap behind the wall fire, this is normal and is required for air ventilation. Do not remove the plug and wire the wall fire into the mains power supply, as this will invalidate the guarantee.

**CAUTION:** Before drilling into the mounting wall, check that there are no live electrical wires, water or other utility pipes. These may cause serious damage or injury.

**WARNING:** Do not use the wall fire if the glass panel is damaged.

## Using the Corsica Mirror Wall Fire

The wall fire can only be operated using the remote control provided or the touch control panel on the front of the wall fire.

**STEP 1:** Plug in and switch on the wall fire at the mains power supply.

**STEP 2:** Switch on the wall fire using the on/off switch located on the wall fire main unit.

**STEP 3:** Press the power button on the remote control or the control panel; the wall fire will beep to indicate that it is switched on.

**STEP 4:** To turn on the flame effect, press the LED light button on the remote control or control panel. The bowl and wall fire will illuminate. Cycle through the five flame effects by pressing the LED light button again.

**STEP 5:** Activate the heat function by pressing the heat button on the remote control or the mode button on the control panel. Determine the desired temperature by using the increase and decrease buttons on the control panel.


**STEP 6:** Activate standby by pressing the power button on the remote control or on the control panel. Switch off the wall fire completely using the on/off switch on the wall fire main unit.

**NOTE:** There will be no heat output if the flame effect is not switched on.

The heat function will automatically switch off when the room temperature reaches the temperature set by the wall fire. The heat function will re-activate when the room temperature falls below the temperature set by the wall fire.

### Operating the Heat Mode Settings

There are seven different heat mode settings on the wall fire; press the mode button to switch between the different heat mode settings.

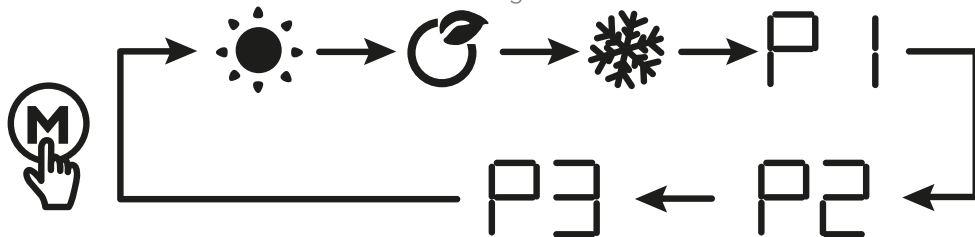

### Comfort Mode (☀️)

**STEP 1:** Press the mode button once to activate comfort mode.

**STEP 2:** Use the increase (+) and decrease (-) buttons on the control panel to increase/decrease the set temperature; the temperature can be set between 10 and 35 °C.

**NOTE:** The heat function will automatically switch off if the set temperature is higher than the room temperature.

## Eco Mode (🌀)

**STEP 1:** Press the mode button until the eco sign appears on the digital display.

**STEP 2:** Use the increase (+) and decrease (-) buttons on the control panel to increase/decrease the set temperature; the temperature can be set between 7 and 32 °C.

**NOTE:** The heat function will automatically switch off if the set temperature is higher than the room temperature.

The set temperature in Eco mode will always be 3 °C less than comfort mode.

## Anti-freezing Mode (❄️)

Press the mode button until the anti-freezing sign appears on the digital display.

**NOTE:** The set temperature in anti-freezing mode is fixed at 7 °C and cannot be changed

## Setting P1 Automatic Control Mode

**STEP 1:** Press the mode button until the P1 sign appears on the digital display.

**STEP 2:** In P1 mode, press the set up button to edit the heat setting for each hour.

**STEP 3:** The schedule will start to flash. Press the mode button to change the setting (for each hour) to either comfort, eco or anti-freeze mode.

**STEP 4:** Press the increase button (+) to go to the next hour or press the decrease button (-) to go to the previous hour.

**STEP 5:** Once all of the heat settings have been selected, press the set up button to confirm.

## Setting P2 Automatic Control Mode

P2 automatic control system contains two group schedules:

1. Monday, Tuesday, Wednesday, Thursday, Friday
2. Saturday, Sunday

**STEP 1:** Press the mode button until the P2 sign appears on the digital display.

**STEP 2:** In P2 mode, press the set up button to edit the heat setting for each hour for the Monday-Friday schedule.

**STEP 3:** The schedule will start to flash. Press the mode button to change the setting (for each hour) to either comfort, eco or anti-freeze mode.

**STEP 4:** Press the increase button (+) to go to the next hour or press the decrease button (-) to go to the previous hour.

**STEP 5:** Once all of the heat settings have been selected, press the set up button to confirm. This will take you to the Saturday-Sunday schedule.

**STEP 6:** Repeat steps 1-4 above for the Saturday-Sunday schedule and press the set up button to confirm the P2 automatic control system.



## Selecting P3 Automatic Control Mode

Different heat setting schedules can be set differently for each day of the week (seven schedules).

**STEP 1:** Press the mode button until the P3 sign appears on the digital display.

**STEP 2:** In P3 mode, press the set up button to edit the heat setting for each hour for the Monday schedule.

**STEP 3:** The schedule will start to flash. Press the mode button to change the setting (for each hour) to either comfort, eco or anti-freeze mode.

**STEP 4:** Press the increase button (+) to go to the next hour or press the decrease button (-) to go to the previous hour.

**STEP 5:** Once all of the heat settings have been selected, press the set up button to confirm. This will take you to the Tuesday schedule.

**STEP 6:** Repeat steps 1-5 above to set a schedule for each of the seven days and press the set up button to confirm the P3 automatic control system.

## Setting the Current Time

**STEP 1:** Press and hold down the set up button for 3 seconds.

**STEP 2:** The current hour setting will flash. Press the increase button (+) or decrease button (-) to change the hour setting. Press the set up button to confirm.

**STEP 3:** The current minute setting will flash. Press the increase button (+) or decrease button (-) to change the minute setting. Press the set up button to confirm.

**STEP 4:** The current day setting will begin to flash. Press the increase button (+) or decrease button (-) to change the day setting. Press the set up button to confirm.

**NOTE:** When the power switch is turned off, the time will reset to the default settings.

## Open Window Setting

Press the open window button on the digital display to activate open window function; press it again to turn off the open window function.

If the room temperature decreases by 2 °C in two minutes, the open window function will activate and the wall fire will switch off.

## Child Lock Function

Activating the lock function will lock all the buttons apart from the power function.

To do this, press the set up button and LED flame effect button simultaneously on the control panel. Only the power button will now work. To unlock the buttons, press the set up button and LED flame effect button simultaneously.

**Restore Factory Settings**

Press and hold both the LED flame effect button and power button for 5 seconds to restore factory settings.

**Battery Replacement**

The remote control requires 1 x CR2025L battery (included). If the battery becomes exhausted:

**STEP 1:** Locate the battery compartment; this is situated on the back of the remote control.

**STEP 2:** To open the battery compartment, slide the battery cover down and remove it.

**STEP 3:** Carefully remove the exhausted batteries and dispose of them following the instructions in the 'Battery Safety' section.

**STEP 4:** Place the new battery into the slot in the battery compartment, observing the correct polarity.

**STEP 5:** Slot the battery cover back onto the remote control until it clicks into place.

**NOTE:** The battery compartment must be secure before use.

**Troubleshooting**

Problem	Cause	Solution
The wall fire is not operating. The fan is not running.	The wall fire is not plugged in and switched on at the mains power supply.	Check that the wall fire is plugged in and switched on at the mains power supply.
	The thermal cut-out device has activated.	Unplug the wall fire from the mains power supply and allow it to cool for approx. 15 minutes. Plug in and switch on the wall fire at the mains power supply before trying again.
	The fuse has blown.	Unplug the wall fire from the mains power supply and replace the fuse with one that is the same amp.
There is no heat or light being emitted from the wall fire.	There may be a problem with the power supply to the wall fire.	Check the mains power supply by plugging in a working appliance. If the mains power supply is functional and the power cord or plug of the wall fire is suspected to be faulty, have it checked by a qualified electrician.

## Specifications

Product code: EH2206S

Supply: 220-240V ~ 50/60 Hz

Power: 1800 W

Bulb: LED Lamp (non-replaceable)

## ERP Table

Item	Symbol	Value	Unit	Item	Unit
<b>Heat Output</b>				<b>Type of heat input for electric storage local space heaters only (select one).</b>	
Nominal heat output	P <sub>nom</sub>	1,8	kW	Manual heat charge control, with integrated thermostat.	No
Nominal heat output (indicative)	P <sub>min</sub>	NA	kW	Manual heat charge control with room and/or outdoor temperature feedback.	No
Maximum continuous heat output	P <sub>max,c</sub>	1,8	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	No
<b>Auxiliary electricity consumption</b>				Fan assisted heat output.	No
At nominal heat output	el <sub>max</sub>	1,720	kW	<b>Type of heat output/room temperature control (select one).</b>	
At minimum heat output	el <sub>min</sub>	NA	kW	Single stage heat output and no room temperature control.	No
In standby mode	el <sub>SB</sub>	0,29	kW	Two or more manual stages, no room temperature control.	No
				With mechanic thermostat room temperature control.	No
				With electronic room temperature.	No
				Electronic room temperature control plus day timer.	No
				Electronic room temperature control plus week timer.	Yes
				<b>Other control options (multiple selections possible).</b>	
				Room temperature control, with presence detection.	No
				Room temperature control, with open window detection.	Yes
				With distance control option.	No
				With adaptive start control.	No
				With working time limitation.	No
				With black bulb sensor.	No

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

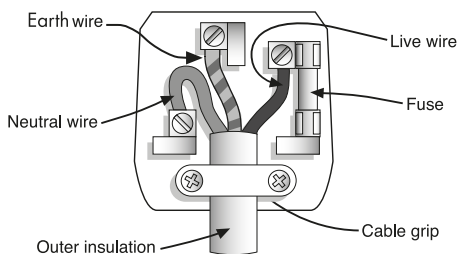

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.beldray.com](http://www.beldray.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

**It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



\*To be eligible for the extended guarantee,  
go to <https://guarantee.upgs.com/beldray/> and  
register your product within 30 days of purchase.

Find us on 

[www.facebook.com/Beldray](https://www.facebook.com/Beldray)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

[www.beldray.com](https://www.beldray.com)

©Beldray Trademark. All rights reserved.



CD280717/MD090522/V3