

Beldray^{est 1872}®

**Our warm,
portable &
convenient
plug-in heater**



700 W HANDY PLUG-IN HEATER

INSTRUCTION MANUAL

*This product is only suitable for well-insulated spaces or occasional use.



www.beldray.com

Please retain instructions for future reference.

WARNING - READ BEFORE USE

When using the product for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the product. Before each use, check the product for damage. If there is any sign of damage or if the fan blades are not rotating, cease using immediately and dispose of the product.

Do not leave the product unattended while in use

This product can be used for no longer than 4 hours, after which time it must be switched off and allowed to cool fully before it is used again.

The product must be placed at least 1 metre away in every direction from walls, doors, furniture, curtains, or any other flammable materials. Do not use in dusty environments.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy - never leave the appliance within reach of children or pets.

Nominal voltage is still present in this product as long as the

product is connected to the electrical source.

If the plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not attempt to move the product whilst it is in use.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Only use the product in a single plug socket, do not position so that when rotated it covers a neighbouring socket.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Do not use an extension cord with the product.

This product is intended for domestic indoor use only. It should not be used for commercial purposes.



CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Hot surface – do not touch the hot section or heating components of the product.



WARNING: In order to avoid overheating, do not cover the product.

Always check the plug sockets for damage before and after use.

Do not use the product in damaged or ill-fitting plug sockets.

This product is not equipped with a device to control the room's temperature.

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Thermal Cut-out Device

The product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the product.

STEP 2: Switch off and unplug from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Clear any debris or dust from the grill

STEP 4: Plug in and switch on the product at the mains power supply.

CAUTION: In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this product must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.

Care and Maintenance

 
Always unplug the product from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the product with a soft, damp cloth and allow to dry thoroughly.

Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents.

Do not immerse the product in water or any other liquid.

Description of Parts

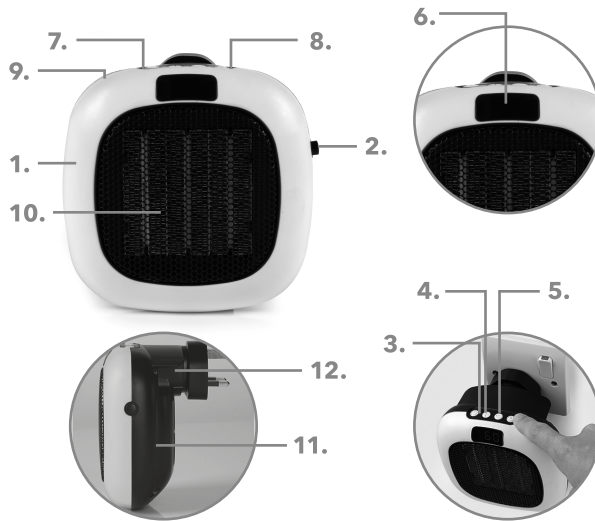

- | | |
|---|-------------------------|
| 1. 700 W Handy Plug-in Heater main unit | 7. Power button (⏻) |
| 2. On/Off switch | 8. Timer button (⌚) |
| 3. Control panel | 9. Plug rotation button |
| 4. Increase temperature button (+) | 10. Vent |
| 5. Decrease temperature button (-) | 11. Air intake |
| 6. LED display | 12. Finger hold |

Instructions for Use

Before First Use

STEP 1: Check that there is no damage to the plug-in heater.

STEP 2: Plug the plug-in heater into a compatible socket at least 1 metre away from furniture, curtains or any other flammable materials. Do not block the air intake on the back of the plug-in heater.

NOTE: When using the plug-in heater for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the plug-in heater. Check the wall socket for damage before and after use.


Using the 700 W Handy Plug-in Heater

STEP 1: Plug in and switch on the plug-in heater at the mains power supply.

STEP 2: To turn on the plug-in heater, press the on/off switch to the 'on' (I) position and press .


STEP 3: Press '+' to increase the temperature output; press '-' to decrease the temperature output. The temperature can be set between 15 °C and 30 °C.

STEP 4: To increase or decrease the fan speed, press '+' and '-' at the same time. Press both buttons together once for a low speed setting; the LED display will show 'LL'. Press both buttons together again for a high speed setting; the LED display will show 'HH'.

STEP 5: Activate the timer setting by pressing ; the display will change from '°C' to 'HOURS'. Press  until the desired number of hours has been selected; 12 hours is the maximum selection.

TIMER OFF – If the timer function is set when the plug-in heater is switched on, the number of hours is set to when the plug-in heater will turn off.

TIMER ON – If the timer function is set when the plug-in heater is switched off or on standby, the number of hours is set to when the plug-in heater will turn on.

STEP 6: To switch off the plug-in heater, press . The fan will cool for approx. 60 seconds before switching off. Press the on/off switch to the 'off' (O) position and wait for the plug-in heater to cool fully before unplugging.

NOTE: The plug-in heater will only produce heat if the set temperature is higher than the room temperature.

WARNING: Never leave the plug-in heater connected to the mains power supply whilst not in use.

Always use the finger hold to support the plug-in heater when pressing the buttons on the control panel. This minimises the force on the plug socket and reduced the risk of injury.

Rotating the Plug

STEP 1: Press and hold the plug rotation button on the back of the plug-in heater.

STEP 2: For a horizontal heater position, rotate the plug 90 ° clockwise whilst holding the plug rotation button.

STEP 3: For a vertical heater position, rotate the plug 90 ° counter clockwise whilst holding the plug rotation button.

WARNING: Only attempt to rotate the plug if the plug-in heater is cool and unplugged.

Do not rotate the unit to a position that covers another socket.

Troubleshooting

Problem	Cause	Solution
The plug-in heater is not operating. The fan is not running.	The plug-in heater is not plugged in and switched on at the mains power supply.	Check that the plug-in heater is plugged in and switched on at the mains power supply.
	The thermal cut-out device has activated.	Switch off and unplug the plug-in heater from the mains power supply and allow it to cool for approx. 15 minutes. Plug in and switch on the plug-in heater at the mains power supply before trying again.
	The fuse has blown.	Unplug the plug-in heater from the mains power supply and replace the fuse with one that is the same amp rating.
No heat or display light is being emitted from the plug-in heater	There may be a problem with the power supply to the plug-in heater.	Check the mains power supply by plugging in a working appliance.

Specifications

Product code: EH3214

Supply: AC 220-240 V ~ 50/60 Hz

Power: 700 W

ERP Table

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage local space heaters only (select one).	
Nominal heat output	P_{nom}	0.7	kW	Manual heat charge control, with integrated thermostat.	N
Nominal heat output (indicative)	P_{min}	0	kW	Manual heat charge control with room and/or outdoor temperature feedback.	N
Maximum continuous heat output	$P_{max,c}$	0.7	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	N
Auxiliary electricity consumption				Fan assisted heat output.	N
At nominal heat output	e_{lmax}	N/A	kW	Type of heat output/room temperature control (select one).	N
At minimum heat output	e_{lmin}	N/A	kW	Single stage heat output and no room temperature control.	N
In standby mode	e_{lsb}	0.00032	kW	Two or more manual stages, no room temperature control.	N
				With mechanic thermostat room temperature control.	N

				With electronic room temperature control.	Y
				Electronic room temperature control plus day timer.	N
				Electronic room temperature control plus week timer.	N
				Other control options (multiple selections possible).	
				Room temperature control, with presence detection.	N
				Room temperature control, with open window detection.	N
				With distance control option.	N
				With adaptive start control.	N
				With working time limitation.	Y
				With black bulb sensor.	N

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

 
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

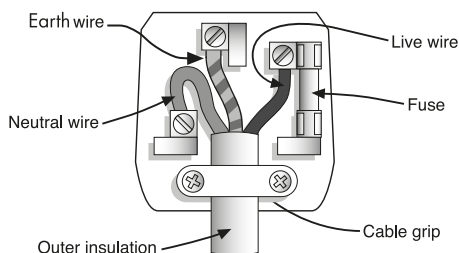

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal.

It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



*To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/beldray/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

www.beldray.com

©Beldray Trademark. All rights reserved.

CD120623/MD000000/V1






**ULTIMATE PRODUCTS
HOME OF BRANDS**

Manchester
OL9 0DD
United Kingdom
www.upgs.com

Artworker:	Chloe Horn
Date:	12/06/23
Project Name:	HCH230340 UPG EH3214 ONLINE IM
Type of Artwork:	Instruction Manual
Size:	A5 12 PP
Software Used:	Indesign CC22
Typefaces:	Avenir Next, ITC Lubalin Graph

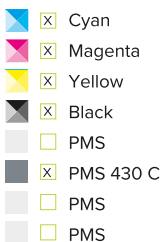 

Artwork Version 1

Artwork Scale 1:1

©2022 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY