

**STEP 3:** Once the garments are dry, switch off the heated ailer by pressing the on/off switch to the off position, the light on the switch will turn off.

**STEP 4:** Remove the garments with care, as the heated ailer rails may still be hot.



**NOTE:** For a faster drying time, spin the garments in a washing machine prior to hanging.



**WARNING:** Do not load the heated ailer beyond 30 kg. Ensure the weight is evenly distributed between the bars. During use the operating temperature will remain between 45–55 °C.

### Storage

The heated ailer can be stored in tall, narrow places by simply folding the wings, securing with the storage clips and folding the feet in.



**CAUTION:** When folding the heated ailer, keep any loose clothing or fingers clear of the folding parts.

### Specifications

Product code: EH3752

Input: 220–240 V ~ 50/60 Hz

Output: 300 W

IP Degree: IPX4

Size: 70 x 73 x 147 cm




#### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

# User manual

## 3 Tier heated ailer

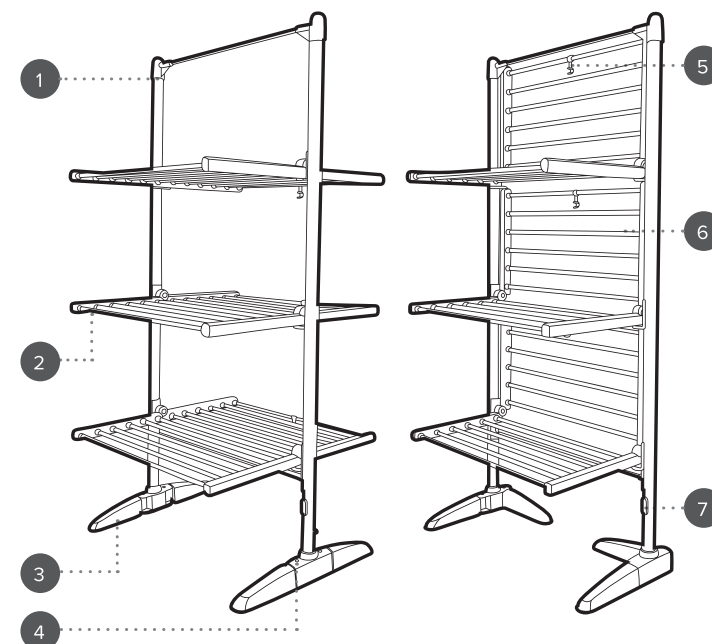

1. Heated ailer
2. Foldable wings
3. Folding feet
4. Foot screw (qty. 2)

5. Storage clips
6. Heated bars
7. On/off switch



To register for your extended guarantee, scan the QR code or visit [guarantee.upplc.com/beldray](http://guarantee.upplc.com/beldray) and register your product within 30 days of purchase. For any further queries, visit [www.beldray.com](http://www.beldray.com).



Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

©Beldray trademark. All rights reserved.  
CD160323/MD050424/V2

est 1872  
**Beldray**

Please retains instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if it has been installed in its intended operating position and they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This product is not a toy – children should be supervised to ensure that they do not play with the product.
- Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Do not immerse the product or plug in water or any other liquid.
- Do not operate the product with wet hands.
- Do not use this product in the immediate

surroundings of a bath, a shower or swimming pool.

- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not attempt to move the product whilst it is in use.
- Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically.
- Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents.
- The product should be used on a stable, heat-resistant surface.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.
- Use of an extension cord with the product is not recommended.
- This product is intended for domestic use only. It should not be used for commercial purposes.



**Hot surface** – do not touch the hot section or heating components of the product.

- This product is intended only for drying textiles washed in water.
- Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.



**WARNING:** In order to avoid a hazard for very young children, this product should be installed so that the lowest heated rail is at least 600 mm above the floor. Do not exceed maximum load of 5 kg per wing and 10 kg per layer. Do not use to dry down jackets or quilts.

## Care and maintenance

Before attempting any cleaning or maintenance, unplug the product from the mains power supply and allow it to cool fully.

Clean the product with a soft, damp, lint-free cloth and dry thoroughly.

Do not use harsh or abrasive detergents or scourers.

### Instructions for use

#### Assembling the heated ailer

Before plugging the heated ailer into the mains power supply, the heated ailer needs to be assembled.

**STEP 1:** Unfold the feet and slot them onto the base legs of the heated ailer. Use the foot screws provided to secure the feet in place.

**STEP 2:** Unclip the storage clips and fold the wings out flat to create the layers.

**STEP 3:** The heated ailer is now ready to use can now be plugged into the mains power supply.



**CAUTION:** Take care when assembling the heated ailer, as it is possible for loose clothing or fingers to become trapped and cause injury to the user.

#### Operating the heated ailer

Once the heated ailer has been assembled following the instructions in the section entitled '**Assembling the heated ailer**', it is ready to use.

**STEP 1:** Hang up the damp garments as required. As much water as possible should be removed prior to hanging, as this will prevent the heated ailer collapsing under the total weight of the wet fabric.

**STEP 2:** Once the heated ailer is loaded, plug it in and turn it on using the on/off switch; this will illuminate, indicating that the heated ailer is turned on.