

30 Litre Stainless Steel Pedal Bin

Instruction Manual

Please read all of the instructions carefully and retain for future reference.

Getting Started

Remove the product from the box. Remove any packaging from the product. Place the packaging inside the box and either store or dispose of safely.

In the Box

30 Litre Stainless Steel Pedal Bin Instruction manual

Features

30 litre capacity
Polished stainless steel body with plastic inner liner
Foot pedal function
Approximate dimensions: 63 h x Ø 29 cm

Instructions for Use

To raise the bin lid, press the foot pedal down and the lid will open. The lid will automatically close when the foot pedal is released.

Cleaning and Maintenance

Do not dispose of rubbish directly into the bin; a good quality bin liner should be used at all times.

To avoid the bin liner tearing, always use a good quality one and do not overfill it.

Do not place objects in the bin, which are sharp or can shatter, such as glass.

Do not place liquid in the bin.

To clean, wipe the inner and outer surface of the bin using a soft, damp, lint-free cloth with a mild detergent.

Do not use harsh or abrasive cleaning detergents or scourers as this could cause damage.

Clean the bin immediately if any waste products spill into it, such as liquid.

Important

This bin is not a toy.

Children should be supervised to ensure that they do not play with the bin.

Do not use the bin for anything other than its intended use.

Do not use this bin outdoors or on wet surfaces.

This bin is intended for domestic use only. It should not be used for commercial purposes.

Please retain this information for future reference.

If this product proves unsatisfactory or if you have any further queries about this product, please contact your retailer.

Distributed by:

UP Global Sourcing, Victoria Street, Manchester OL9 0DD. UK.

+44 (0)333 577 9820

customersupport@beldray.co.uk

© 2014 Beldray Trademark. All rights reserved.

Made in China.

