

# 30 Litre Soft Close Pedal Bin

# **Instruction Manual**

Please read all of the instructions carefully and retain for future reference.

### **Getting Started**

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

#### In the Box

30 litre pedal bin Instruction manual

#### **Features**

Steel body with plastic liner inner Foot pedal function Silent, soft-close lid Ideal for kitchens Approximate dimensions:  $30 \text{ L} - 68 \text{ h} \times \varnothing 28 \text{ cm}$ 

#### **Instructions for Use**

To raise the bin lid, press the foot pedal down and the lid will open. The lid will automatically close when the foot pedal is released.

## **Cleaning and Maintenance**

Do not dispose of rubbish directly into the bin; a good quality bin liner should be used at all times.

To avoid the bin liner tearing, always use a good quality one and do not overfill it.

Do not place objects in the bin, which are sharp or can shatter, such as glass.

Do not place liquid in the bin.

To clean, wipe the inner and outer surface of the bin using a soft, damp, lint-free cloth with a mild detergent. Do not use harsh or abrasive cleaning detergents or scourers as this could cause damage.

Clean the bin immediately if any waste products spill into it, such as liquid.

## **Important**

This bin is not a toy.

Children should be supervised to ensure that they do not play with the bin.

Do not use the bin for anything other than its intended use.

Do not use this bin outdoors or on wet surfaces.

This bin is intended for domestic use only. It should not be used for commercial purposes.

Please retain this information for future reference.

Due to continual product development, the item may differ slightly to that shown.

If this product proves unsatisfactory or if you have any further queries about this product, please contact your retailer.

www.beldray.com