

Beldray[®] Est 1872

Nobody Does It Better

Square Heated Clothes Dryer

Instruction Manual



THE **SCIENCE**
BEHIND HEAT



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable materials at least 1 metre away from the appliance.

Do not move the appliance whilst in use.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower, or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not block the air intake of the appliance; place in an open, well-ventilated space.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance when in use as it will become very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

The appliance should be used on a stable surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use prior to storage or any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Some parts of the appliance can become very hot and can cause burns. Particular attention has to be given where children and young people are present.



Hot surface – do not touch the hot section or heating components of the product.

Warning: This appliance is intended only for drying textiles washed in water.

Do not exceed maximum load of 10 kg.

In order to avoid overheating, do not cover the product whilst in use.

Thermal Cut-out Device

The clothes dryer is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the clothes dryer start to overheat, the thermal safety cut-out will automatically operate, causing the clothes dryer to switch off. The fan will continue to run to produce cool air. If this happens:

STEP 1: Switch off the clothes dryer by turning the control dial to (0).

STEP 2: Ensure that the clothes dryer is unplugged from the mains power supply and allow it to cool for approximately 15 minutes.

STEP 3: Clear any blockages present, taking care not to damage the clothes dryer.

STEP 4: Plug in and switch on the clothes dryer at the mains power supply.

Caution: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this clothes dryer must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the product.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the clothes dryer from the mains power supply and allow it to cool fully.

Clean the clothes dryer with a soft, damp, lint-free cloth and dry thoroughly.

Do not immerse the clothes dryer in water or any other liquid.

Do not use harsh or abrasive detergents or scourers, as these may damage the finish of the clothes dryer.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Fan heater

Timer

Cover

Castor wheels (qty. 4)

Poles (qty. 14)

Connectors (qty. 6)

Instruction manual

Features

Power motor: 900–1000 W

Easy to assemble/disassemble

Lightweight aluminium construction


Garment hanging rail

Castor wheels

Easy-to-use timer

Approx. dimensions: 149 x 70 x 44 cm

Description of Parts

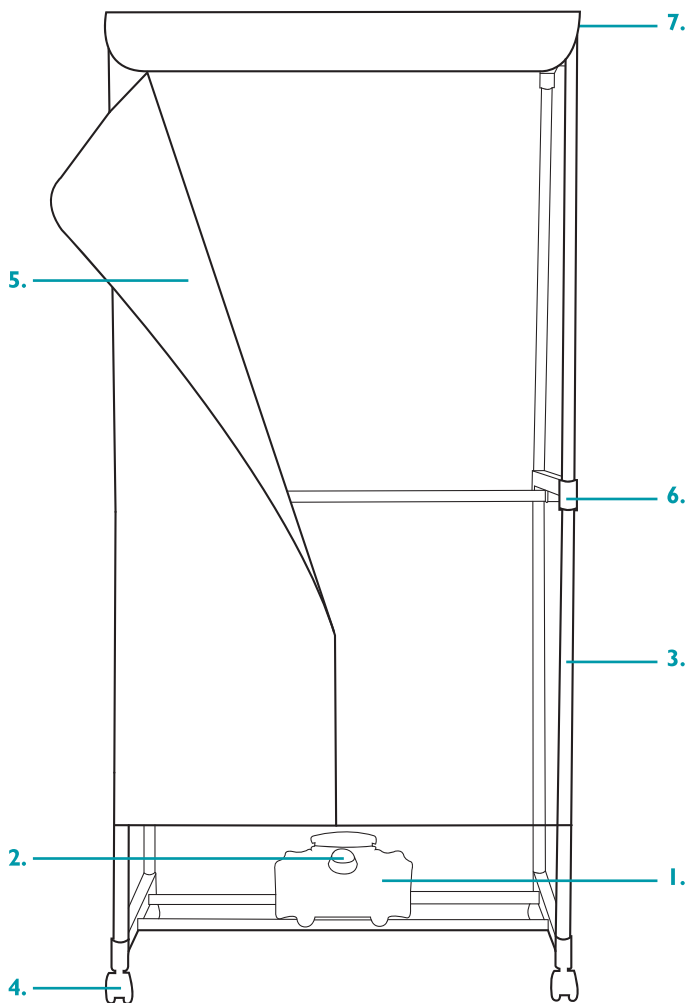

- 1. Fan heater
- 2. Timer control dial
- 3. Pole(s)
- 4. Castor wheel(s)

- 5. Cover
- 6. Connector(s)
- 7. Garment hanging rail

Advice Before Use

Please retain all packaging until all of the parts have been checked and counted against the parts list (In the Box). Please note that a slight odour may be emitted upon first use.

Instructions for Use

Assembling the Square Heated Clothes Dryer

Before plugging the clothes dryer into the mains power supply, the appliance needs to be assembled.

STEP 1: Place one connector onto the floor with the holes facing upwards and carefully push two poles into the holes on either end of the connector.

STEP 2: Insert another pole into the bottom centre hole of the connector.

STEP 3: Carefully secure another connector onto the top of the poles, creating the top section.

STEP 4: Position another connector on the floor with the holes facing upwards. Select one pole and carefully push this into the bottom centre hole. Carefully secure another connector onto the top of the pole, creating the middle section.

STEP 5: Place another connector onto the floor with the holes facing upwards, select two poles and push them into the two holes between the middle and end holes. Carefully secure another connector onto the top of the poles, creating the bottom section.

STEP 6: Lay the top section flat onto the floor, so that the centre bar is raised. Select four poles and push them into the holes in all four corners of the connector.

STEP 7: Select the middle section and then push this onto the four poles, ensuring that it is facing the same direction as the top section. This will create the top half of the clothes dryer.

STEP 8: Insert four poles into the corners of the connectors on the bottom section.

STEP 9: Open up the cover and then fully unzip the vertical and both horizontal zips. Locate the four corner holes inside the cover and then place the four poles from the bottom section through these holes.

STEP 10: Secure the assembled top half of the clothes dryer onto the bottom half, making sure that all four poles are aligned with the holes in the connectors.

STEP 11: Turn the assembled clothes dryer upside down to fit the four castor wheels. Place the castor wheels onto the ends of the four poles and, once fitted, turn the clothes dryer back over so that it is standing upright with the wheels on the floor. Rearrange the cover so that it is securely fitted over the clothes dryer.

STEP 12: Place the fan heater on the bottom poles below the cover, ensuring that the fan vents align with the hole in the base of the cover.

Using the Square Heated Clothes Dryer

Once the clothes dryer has been erected following the instructions in the section entitled 'Assembling the Square Heated Clothes Dryer', the clothes dryer is ready to use.

STEP 1: Ensure that the clothes dryer is unplugged from the mains power supply.

STEP 2: Unfasten the zips and pull the cover down to provide access to the clothes dryer.

Hang up the damp garments of clothing as required. As much water as possible should be removed prior to hanging, as this will prevent the clothes dryer collapsing under the total weight of all the wet fabric.

STEP 3: Once the clothes dryer is loaded, close the cover. Plug in and switch on the clothes dryer at the mains power supply.

STEP 4: Twist the timer control dial in a clockwise direction to the required time (in minutes). This will activate the clothes dryer's timer function, which will cause the clothes dryer to automatically switch off when the timer reaches '0'.

STEP 5: Once the garments are dry, switch off and unplug the clothes dryer at the mains power supply.

STEP 6: Open the zips and remove the garments of clothing, folding the hangers so that they are all vertical and then store the clothes dryer as desired.

Tip: For a faster drying time, spin the garments in a washing machine prior to hanging.

Caution: Take care when using the zips as they may become hot during use. Remove the garments with care, as the garment hanging rail and poles may still be hot.

Warning: Do not load the clothes dryer beyond 10 kg.

Specifications

Product code: LA041272

Power: 220–240 V 50 Hz

Output: 1000 W

Max. load capacity: 10 kg

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\equiv)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \equiv .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\equiv).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

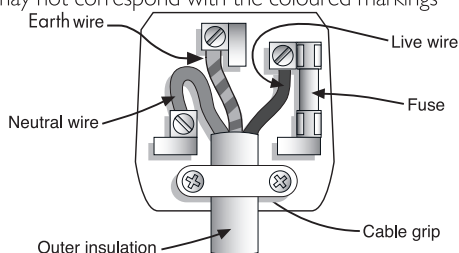

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Go to <http://guarantee.upgs.com/beldray>
to register your product for a 2 year guarantee



Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820
customersupport@beldray.co.uk

©Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.
Made in China.

CD300317/MD000000/V1

