


Beldray[®]

est 1872

FOR 150 YEARS

Our lightweight,
powerful &
convenient
steam cleaner

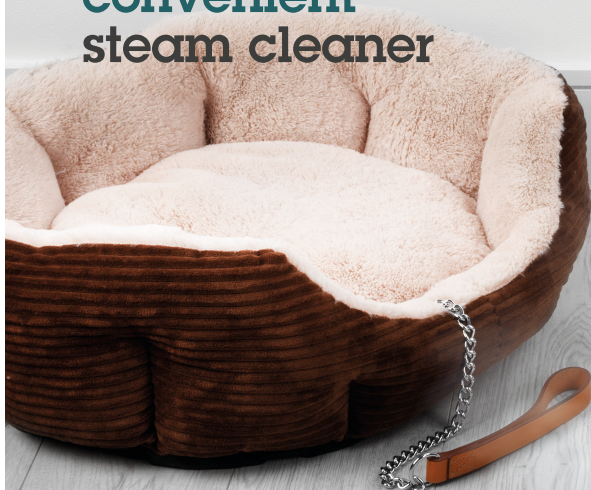

ALL FLOORS
STEAM CLEANER
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. should carry out repairs.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.
Do not operate the appliance with wet hands.
Do not expose the appliance to rain.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not pull or carry the appliance by its power supply cord.
Do not use the appliance if it has been dropped or if there are visible signs of damage.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.
Do not use any damaged accessories.
Do not use this appliance outdoors.
Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.
Do not use the appliance on leather, wax polished furniture or floors, karndean floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
Do not direct steam at people or animals.
Do not direct steam towards equipment containing electrical



components, such as the interior of ovens.

Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

CAUTION: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear.

 The appliance emits very hot steam; always exercise extreme caution during use.

WARNING: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance.

Even when following the basic safety instructions highlighted in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.

Never leave the appliance stationary on a floor area for longer than 15 seconds.

Ensure that the microfibre mop head pad is attached before use.



WARNING: Steam  **CAUTION:** Hot surface

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank once the steam cleaner main body has cooled and clean it after every use.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the precision shaped mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pad is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the microfibre mop head pad.


WARNING: Do not turn on the steam cleaner during cleaning. Never immerse any electrical components in water or any other liquid.

Descaling the Water Tank and Removing Limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam mop.

Limescale can develop over time and can affect the performance of the steam mop. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a steam mop. Always follow the manufacturer's instructions.

Description of Parts

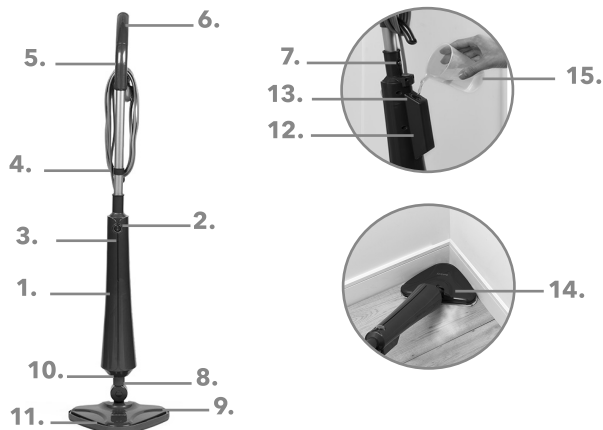

1. All Floors Steam Cleaner main body
2. On/off switch
3. Water tank gauge
4. Lower cord storage clip
5. Upper cord storage clip
6. Handle
7. Handle release button
8. Steam nozzle

9. Precision shaped mop head
10. Mop head release button
11. Carpet glider
12. 350 ml water tank
13. Water tank cap
14. Mop head pad
15. Measuring jug

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

Assembling the All Floors Steam Cleaner

Attaching the Handle

Attach the removable handle to the steam cleaner main body by sliding the bottom of the handle into the steam cleaner main unit until it locks into position.

NOTE: The handle can be removed easily for storage by pressing the handle release button and pulling it away in an upwards direction.

Attaching the Precision Shaped Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body onto the precision shaped mop head, until the precision shaped mop head spindle clicks into place.

STEP 2: Always attach the precision shaped mop head using both hands, making sure that it is locked securely into position.

STEP 3: To remove the precision shaped mop head, simultaneously press the mop head release button and pull the steam cleaner main body upward.

NOTE: The precision shaped mop head will only fit one way onto the steam cleaner main body; make sure that it is correctly aligned.

WARNING: Never force the steam cleaner main body onto the precision shaped mop head, as this could damage the steam cleaner.

Attaching the Mop Head Pad

STEP 1: Remove the precision shaped mop head from the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

STEP 2: Attach the mop head pad to the precision shaped mop head and press down firmly.

STEP 3: Reattach the precision shaped mop head to the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

NOTE: The mop head pad must be installed correctly before use on carpets or hard floors. Do not use the steam mop without the mop head in place.

Attaching the Carpet Glider

The precision shaped mop head simply sits in the carpet glider to enable the steam cleaner to move with ease across the carpet.

STEP 1: Remove the precision shaped mop head from the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

STEP 2: Attach the mop head pad to the precision shaped mop head and press down firmly.

STEP 3: Place the precision shaped mop head with the mop head pad attached into the carpet glider by slotting the front of the precision shaped mop head into the carpet glider. Then, press down on the rear of the precision shaped mop head until it clicks securely into position.

STEP 4: Reattach the precision shaped mop head to the steam cleaner main body following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'.

NOTE: The carpet glider should only be used on carpets. If the carpet glider easily falls off, remove it along with the mop head pad and then reassemble, the mop head pad should be visible at the back of the precision shaped mop head. If the flooring is uneven, the carpet glider may dislodge.

Filling the Water Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

STEP 1: Remove the water tank cap by twisting it in an anticlockwise direction.

STEP 2: Fill up the measuring jug and then pour the contents into the 350 ml water tank.

NOTES: The water may take a couple of seconds to rise, so allow time for this before adding in more. The water tank must not be overfilled.

CAUTION: Do not attempt to fill the water tank whilst the steam cleaner is turned on, as this could cause damage. Unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

WARNING: Never add aromatic, alcoholic or detergent products into the water tank, as this will cause damage to the steam cleaner and void the warranty.

Using the All Floors Steam Cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the All Floors Steam Cleaner', and attach the precision shaped mop head pad following the instructions in the section entitled 'Attaching the Precision Shaped Mop Head'

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: Switch the on/off switch to the 'On' position.

STEP 5: The water tank will illuminate red to indicate that the steam cleaner is heating up; this will take approx. 25 seconds. Once the steam cleaner has reached the correct temperature, the water tank will illuminate blue, indicating that the steam cleaner is now ready to use.

STEP 6: Steam will now run continuously until the water tank is empty, or until the on/off switch is pressed to the 'Off' position.

NOTE: A full water tank will supply approx. 15 minutes of continuous steam. Steam will run continuously until the water tank is empty.

CAUTION: The steam cleaner emits jets of very powerful, hot steam. The surface of the precision shaped mop head will get very hot. Do not touch it.

Troubleshooting

Problem	Possible Reason	Possible Solution
The steam cleaner is not producing steam.	The water tank may be empty.	Add water to refill the water tank.
	The steam nozzle may be blocked.	Unplug the steam cleaner from the mains power supply and clean the steam nozzle.
	There is no power to the steam cleaner.	Make sure that the steam cleaner is plugged into the mains power supply.
	There may be a limescale build-up.	Descale the steam cleaner using the instructions in the 'Removing Limescale' section.
	The power button is set to the 'Off' position.	Press the power button to the 'On' position.
The steam cleaner does not turn on.	There is a blown fuse.	Check the fuse by replacement.
	The power cord is not plugged in.	Plug the power cord into a working mains power supply.

Storage

Check that the water tank is empty and that the steam cleaner is cool, clean and dry before storing in a cool, dry place.

Remove the mop head pad, making sure that it has been cleaned according to the instructions in the section entitled 'Care and Maintenance'.

NOTE: The power cord should be stowed away securely, not too tight at the point of connection to the unit.

Specifications

Product code: BEL01108V2

Input: 220-240 V ~ 50 Hz

Output: 1300 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

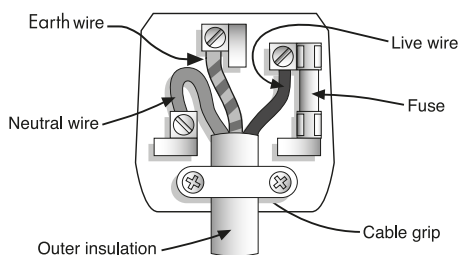

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee,
go to guarantee.upgs.com/beldray/ and register
your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD070821/MD000000/V1