STEP 3: Twist the height adjustment collar in a clockwise direction to retighten and secure the height of the pedestal fan.

CAUTION: Take care not to overtighten the height adjustment collar.

Tilting the fan head

To tilt the fan head, release the locking mechanism and position as desired. The locking mechanism will hold the fan head in the set orientation.

CAUTION: There are a limited number of fan head positions. Do not force the fan head up or down as this may cause damage.

Using the pedestal fan

STEP 1: Plug in and switch on the pedestal fan at the mains power supply.
STEP 2: To turn on the pedestal fan, select the desired cooling speed by pressing any one of the adjustable cooling speed buttons (**1**, **2**, **3**). Speed setting '**1**' is the lowest cooling speed setting; '**3**' is the highest cooling speed setting.
STEP 3: Activate the oscillation function by pushing down the oscillation switch; the pedestal fan will begin to turn left and right. To stop the pedestal fan from turning, pull the oscillation switch up.
STEP 4: Turn off the pedestal fan by pressing '**0**'.

CAUTION: Do not cover the fan head. This is not a desk fan. Do not place the fan onto a desk, as this could affect its stability.

Specifications

Product code: EH3196
Voltage: 220–240 V ~ 50 Hz
Output: 45 W

UK ONLY Recycle

Disposal of Waste Batteries and Electrical and Electronic Equipment

This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.

CD230919/MD211223/V5

User manual

Pedestal fan

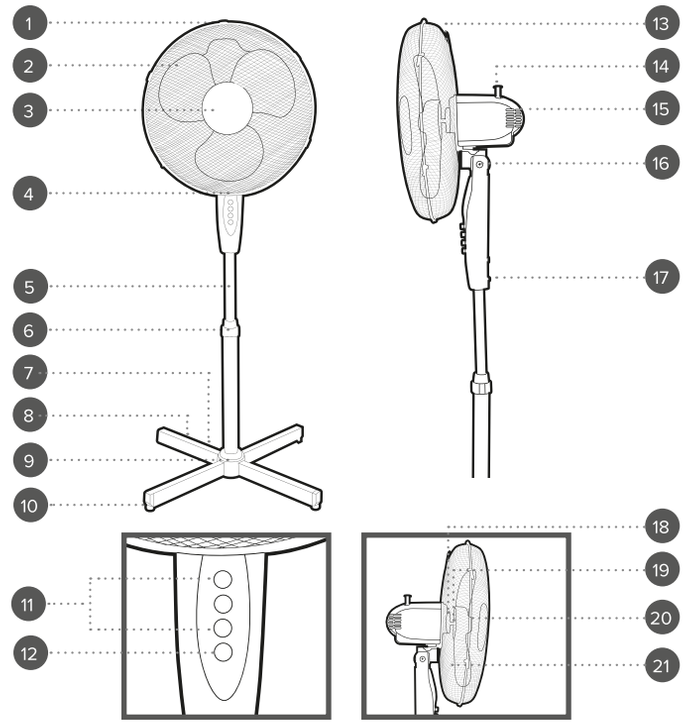

1. Pedestal fan main unit
2. Fan blade unit
3. Front grill with logo
4. Grill screw with nut
5. Adjustable base pole
6. Height adjustment collar
7. Stand
8. Cross base legs
9. Cross base screw cover
10. Plastic feet
11. Adjustable cooling speed buttons
12. Off button
13. Metal handle
14. Oscillation switch
15. Motor assembly
16. Tilting head with locking mechanism
17. Main unit set screw
18. Rear grill locking nut
19. Motor assembly shaft
20. Blade locking cap
21. Rear grill

FSC
www.fsc.org
MIX
Paper | Supporting responsible forestry
FSC® C177415

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This is not a toy – children should be supervised to ensure they do not play with the product.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.
- Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use this product for extended periods of time.
- Do not leave the product plugged in or
- operating overnight.
- Do not use the product for anything other than its intended use.
- Do not use this product outdoors.
- Do not move the product whilst it is in use.
- Do not shake the product.
- Do not cover the product.
- Do not put objects into any of the openings.
- Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.
- Only lift the product with the carry handles provided.
- Always use the product on a flat, stable surface.
- Use of an extension cord with the product is not recommended.
- This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.
- This product is intended for domestic use only. It should not be used for commercial purposes.

WARNING: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Care and maintenance

- Always wait until the pedestal fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.
- Wipe the pedestal fan with a soft, damp, lint-free cloth and allow to dry thoroughly.
- Do not immerse the pedestal fan in water or any other liquid.
- Do not use abrasive cleaning solvents, polishes or scouring pads to clean the pedestal fan, as this may cause damage.

Assembling the pedestal fan

Assembling the base

STEP 1: Attach the cross base leg with the cut-out section to the top of the other cross base leg and firmly press down to secure them into position.
STEP 2: Remove the four screws from the cross base legs and then attach the adjustable base pole by aligning the stabiliser holes on the bottom of the adjustable base pole with the screw holes on the cross base legs.
STEP 3: Insert the screws through each of the aligned holes and carefully tighten in a clockwise direction.
STEP 4: Slide the cross base screw cover over the adjustable base pole, align the cut-outs with the cross base legs and push into position.

Assembling the fan head

STEP 1: Remove the blade locking cap from the motor assembly by twisting it in a clockwise direction and then remove the rear grill locking nut by twisting it in an anticlockwise direction.
STEP 2: Position the rear grill over the motor assembly shaft, checking that it is aligned with the small plastic pins on the motor assembly and that the metal handle at the back of the rear grill is in an upright position. Secure the rear grill by adding the rear grill locking nut and twist it in a clockwise direction to tighten.
STEP 3: Place and push the fan blade unit onto the motor assembly shaft, so that the locking tabs on the spindle align with the corresponding slots on the rear of the fan blade unit. Add the blade locking cap and twist it in an anticlockwise direction until the fan blade unit is secured into position.
STEP 4: Open the clips around the outer edge of the front grill and position it onto the rear grill, checking that the screw holes on both grills are aligned at the bottom. Fasten the clips around the outer edge of the front grill to lock the grills into position, taking care that the fan blade and motor unit are protected.
STEP 5: Insert the grill screw through the hole at the bottom of the front and rear grills, then place the nut onto the grill screw and tighten it in a clockwise direction to hold the grills together.

CAUTION: Take care not to overtighten the rear grill locking nut and the blade locking cap.

Attaching the base to the pedestal fan head

STEP 1: Release the main unit set screw by turning it in an anticlockwise direction, then slot the pedestal fan head onto the adjustable base pole.
STEP 2: Carefully turn the main unit set screw in a clockwise direction to lock the pedestal fan head into position.
STEP 3: When the adjustable base pole is at the desired height, tighten the height adjustment collar by twisting it in a clockwise direction to secure the adjustable base pole into position.

NOTE: If the base pole cannot be fully inserted, loosen the main unit set screw further. Take care not to overtighten the height adjustment collar and main unit set screw, as this may cause damage to the pedestal fan.

Instructions for use

Before connecting to the mains power supply, place the assembled pedestal fan onto a flat, stable surface, allowing for sufficient distance between the pedestal fan and any objects that could get damaged or caught in the rotating pedestal fan blades.

Adjusting the height of the pedestal fan

STEP 1: Loosen the height adjustment collar by twisting it in an anticlockwise direction.
STEP 2: Pull out the inner pole of the adjustable base pole until the pedestal fan is at the desired height.