Using the tower fan

STEP 1: Plug in and switch on the tower fan at the mains power supply.

STEP 2: To turn on the tower fan, select the desired cooling speed by turning the adjustable cooling/oscillation/speed dial in an anticlockwise direction until the desired setting is selected. Speed setting '**3**' is the highest cooling speed setting.

STEP 3: To use the tower fan for a set period of time, turn the timer control dial in a clockwise direction to select the desired time. Once set, the timer control will run its course but can be interrupted and stopped by turning the timer control dial in an anticlockwise direction to the '**OFF**' position.

STEP 4: Activate the oscillation function by turning the oscillation speed dial in a clockwise direction until the desired setting is selected; follow the arrows indicating speed to the left of the oscillation speed dial.

STEP 5: Turn off the fan by turning the adjustable cooling/oscillation/speed dial and the timer control dial to the '**OFF**' positions.

CAUTION: Do not cover the tower fan. This is not a desk fan. Do not place this fan onto a desk as this could affect the stability of the product.

Specifications

Product code: EH3713
Input: 220–240 V ~ 50/60 Hz
Output: 45 W

UK ONLY Recycle

Disposal of Waste Batteries and Electrical and Electronic Equipment

This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.

CD281022/MD000000/V1

User manual

Tower fan

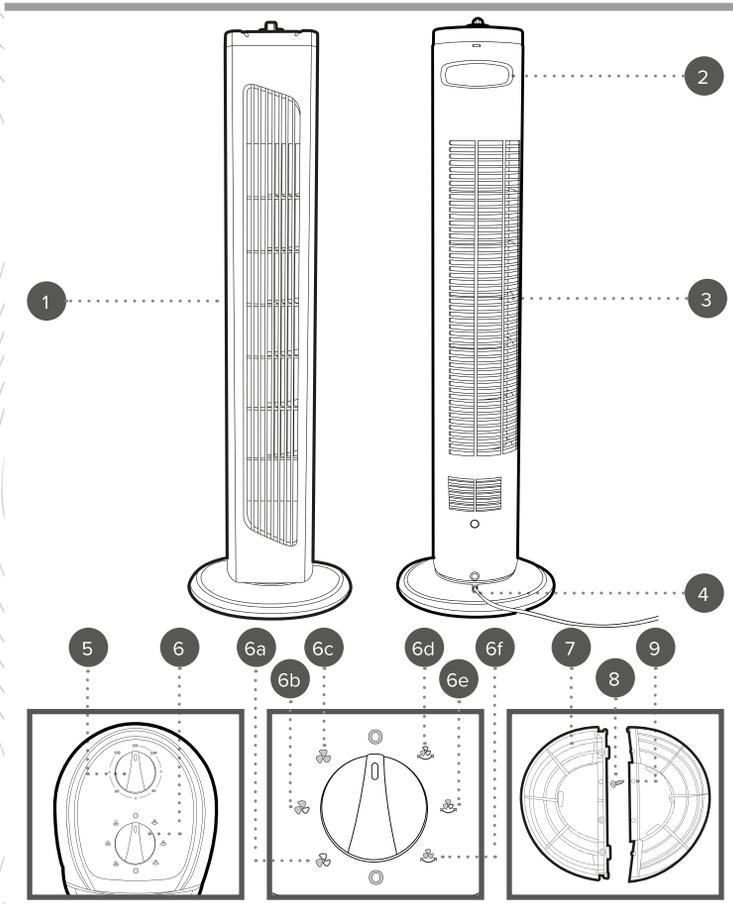

1. Tower fan main unit
2. Carry handle
3. Air intake
4. Power cord holder
5. Timer control dial
6. Adjustable cooling/oscillation/speed dial
6a. Speed 1
6b. Speed 2
6c. Speed 3
6d. Speed 1 + oscillation
6e. Speed 2 + oscillation
6f. Speed 3 + oscillation
7. Halved base stand (qty. 2)
8. Screw (qty. 1)
9. Base screw socket

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This is not a toy – children should be supervised to ensure they do not play with the product.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This product contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage.
- Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.
- Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use this product for extended periods of time.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not move the product whilst it is in use.
- Do not shake the product.
- Do not cover the product.
- Do not put objects into any of the openings.
- Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.
- Only lift the product with the carry handles provided.
- Always use the product on a flat, stable surface.
- Use of an extension cord with the product is not recommended.
- This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.
- This product is intended for domestic use only. It should not be used for commercial purposes.

WARNING: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Care and maintenance

Always wait until the tower fan has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.
Wipe the tower fan with a soft, damp, lint-free cloth and allow to dry thoroughly.
Do not immerse the tower fan in water or any other liquid.
Do not use abrasive cleaning solvents, polishes or scouring pads to clean the tower fan, as this may cause damage.

Assembling the tower fan base

STEP 1: Take the two base halves and attach them together, making sure that the smooth sides are facing the bottom of the tower fan. The power cord should run through the power cord holder by the centre of the base halves.
STEP 2: Attach the base onto the bottom end of the tower fan so that the aligning pins align with the corresponding holes. The base should be positioned with the power cord holder to the rear of the fan.
STEP 3: Insert the screw into the base screw socket along the adjoining line. To fix the base to the main unit, tighten the base screw by turning in a clockwise direction. Once assembled, the base should curve downwards and rest flat whilst the tower fan is upright.

NOTE: Do not attempt to push the screw through the wrong hole, as this will damage the halved base stand. It may be necessary to lay the tower fan on a flat, stable surface to attach the base.

Instructions for use

Before connecting to the mains power supply, place the assembled tower fan onto a flat, stable surface, allowing for sufficient distance between the tower fan and any objects that could get damaged or caught in the rotating fan blades.